


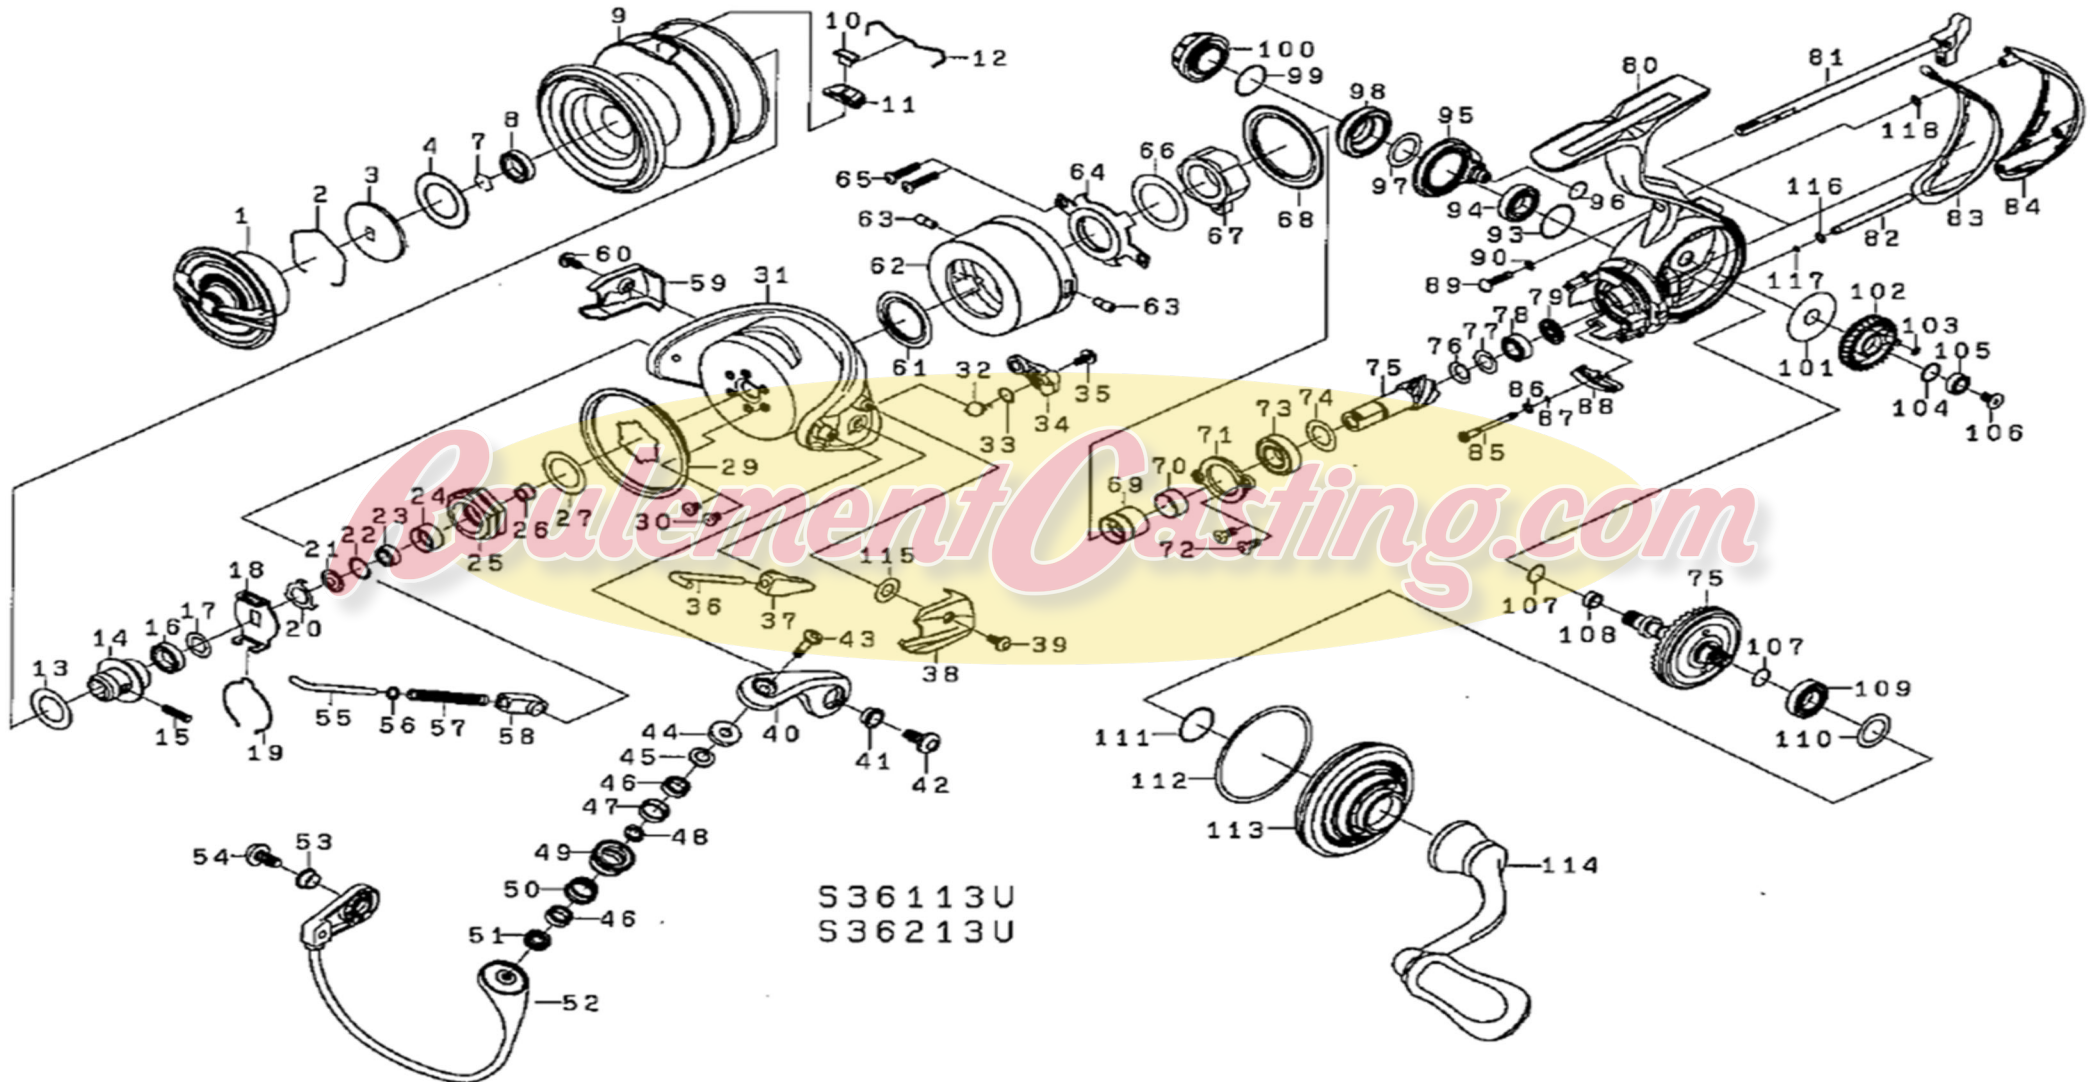

2018 EXIST LT 1000D-P





2018 EXIST LT 1000D-P

Key No.	Part Number	Description	Key No.	Part Number	Description	Key No.	Part Number	Description
1	6J615301	DRAG KNOB	41	6J254901	ARM LEVER SCREW COLLAR	79	6J588201	PINION BEARING COLLAR
2	6J556701	DRAG RING	42	6J255001	ARM LEVER SCREW	80	6J733701	BODY ASSY
3	6J757501	DRAG DISC WASHER	43	6J257001	ROLLER SCREW	81	6J614001	MAIN SHAFT
4	6J678901	ATD DRAG WASHER(1pac-1pcs)	44	6J538001	ROLLER MAG COLLAR	82	6J608901	OSCILLATING POST
7	6B358702	BEARING RETAINER	45	6J538401	ROLLAR MAGNET ASSY(A)	83	6J589001	REAR CAP PACKING
8	6G212503	SPOOL BALL BEARING	46	6J256702	ROLLAR BALL BEARING	84	6J589101	REAR CAP
9	6J733901	SPOOL ASSY (2-12)	47	6J256601	ROLLAR COLLAR (A)	85	6J609104	BAIL KICK COLLAR SCREW
10	6J558001	LINE STOPPER	48	6J256301	ROLLAR COLLAR (B)	86	6J718501	BAIL KICK COLLAR WASHER
11	6J563601	LINE STOPPER PLATE	49	6J256502	LINE ROLLER	87	6J718601	BAIL KICK COLLAR O-RING
12	6J314801	LINE STOPPER SPRING	50	6J256401	ROLLAR COLLAR (C)	88	6J553501	BAIL KICK COLLAR
13	6J546300	SPOOL WASHER (A)	51	6J537801	ROLLAR MAGNET ASSY(B)	89	6J553601	REAR CAP SCREW
14	6J549501	SPOOL METAL	52	6J614601	BAIL ASSY	90	6G315301	REAR CAP SCREW WASHER(A)
15	6J558201	SPOOL METAL SCREW	53	6J254901	BAIL HOLDER SCREW COLLAR	93	6J554101	DRIVE BEARING (B) WASHER
16	6G522705	SPOOL METAL BALL BEARING	54	6J255001	BAIL HOLDER SCREW	94	6J046802	DRIVE BALL BEARING (B)
17	6J602201	SPOOL WASHER (B)	55	6G471803	BAIL SPRING SHAFT	95	6J587901	SET PLATE
18	6J546201	CLICK HOLDER	56	6G685401	BAIL SPRING SHAFT WASHER	96	6J551301	SET PLATE O-RING
19	6J525101	CLICK LEAF SPRING	57	6J304801	BAIL SPRING	97	6J555501	COVER WASHER
20	6G471501	ROTOR NUT PLATE	58	6G471601	BAIL SPRING SHAFT HOLDER	98	6J552802	SIDE COVER (R)
21	6J729101	ROTOR NUT PACKING	59	6J287303	BAIL HOLDER COVER	99	6G399702	HANDLE CAP O-RING
22	6J3755202	ROTOR NUT BEARING WASHER	60	6J255201	COVER SCREW	100	6J555901	HANDLE CAP
23	6H959602	ROTOR NUT BALL BEARING	61	6J554901	ROTOR PACKING	101	6J551401	OSCILLATING GEAR WASHER
24	6J690101	ROTOR NUT COLLAR	62	6J554501	STOPPER CAP ASSY	102	6J551501	OSCILLATING GEAR
25	6J305201	ROTOR NUT	63	6J554701	STOPPER CAP SCREW	103	6G683301	OSCILLATING GEAR O-RING
26	6J555001	ROTOR NUT BEARING COLLAR	64	6J553801	MAGSEALED PLATE	104	6H129200	OSCILLATING GEAR WASHER
27	6J3727601	ROTOR NUT WASHER	65	6H842805	MAGSEALED PLATE SCREW	105	6G686904	OSCILLATING GEAR BALL BEARING
29	6J287401	ROTOR COVER	66	6H502200	MAGSEALED PLATE WASHER	106	6G940401	OSCILLATING GEAR SCREW
30	6H022701	ROTOR COVER SCREW	67	6H412602	ONEWAY CLUCH	107	6J731701	DRIVE GEAR O-RING
31	6J286701	ROTOR	68	6J553701	STOPPER CAP PACKING	108	6J552701	DRIVE GEAR RING
32	6J435101	KICK LEVER SPRING	69	6J554801	CLUCH RING	109	6J046802	DRIVE BALL BEARING (A)
33	6J339500	KICK LEVER WASHER	70	6J536202	CLUCH RING COLLAR	110	6G317500	DRIVE BEARING WASHER
34	6J304701	KICK LEVER ASSY	71	6J552101	PINION BEARING PLATE	111	6J588901	BODY COVER O-RING (A)
35	6H417701	KICK LEVER SCREW	72	6J552201	PLATE SCREW	112	6J588801	BODY COVER O-RING (B)
36	6J254601	ARM LEVER SHAFT	73	6G279602	PINION BALL BEARING (A)	113	6J733801	BODY COVER (L)
37	6J254701	ARM LEVER SHAFT HOLDER	74	6J3758500	PINION BEARING WASHER (A)	114	6J615601	HANDLE ASSY
38	6J287003	ARM LEVER SPRING COVER	75	6Z023806	PINION + DRIVE GEAR SET	115	6F306402	COVER SCREW WASHER
39	6J255201	COVER SCREW	76	6H814900	PINION SPRING WASHER	116	6G712401	OSCILLATING POST WASHER
40	6J519701	ARM LEVER	77	6E096500	PINION BEARING WASHER (B)	117	6G683301	OSCILLATING POST O-RING
			78	6G466205	PINION BALL BEARING (B)	118	6G315301	REAR CAP SCREW WASHER (B)