




AIRD LT 4000-C

Feel Alive.

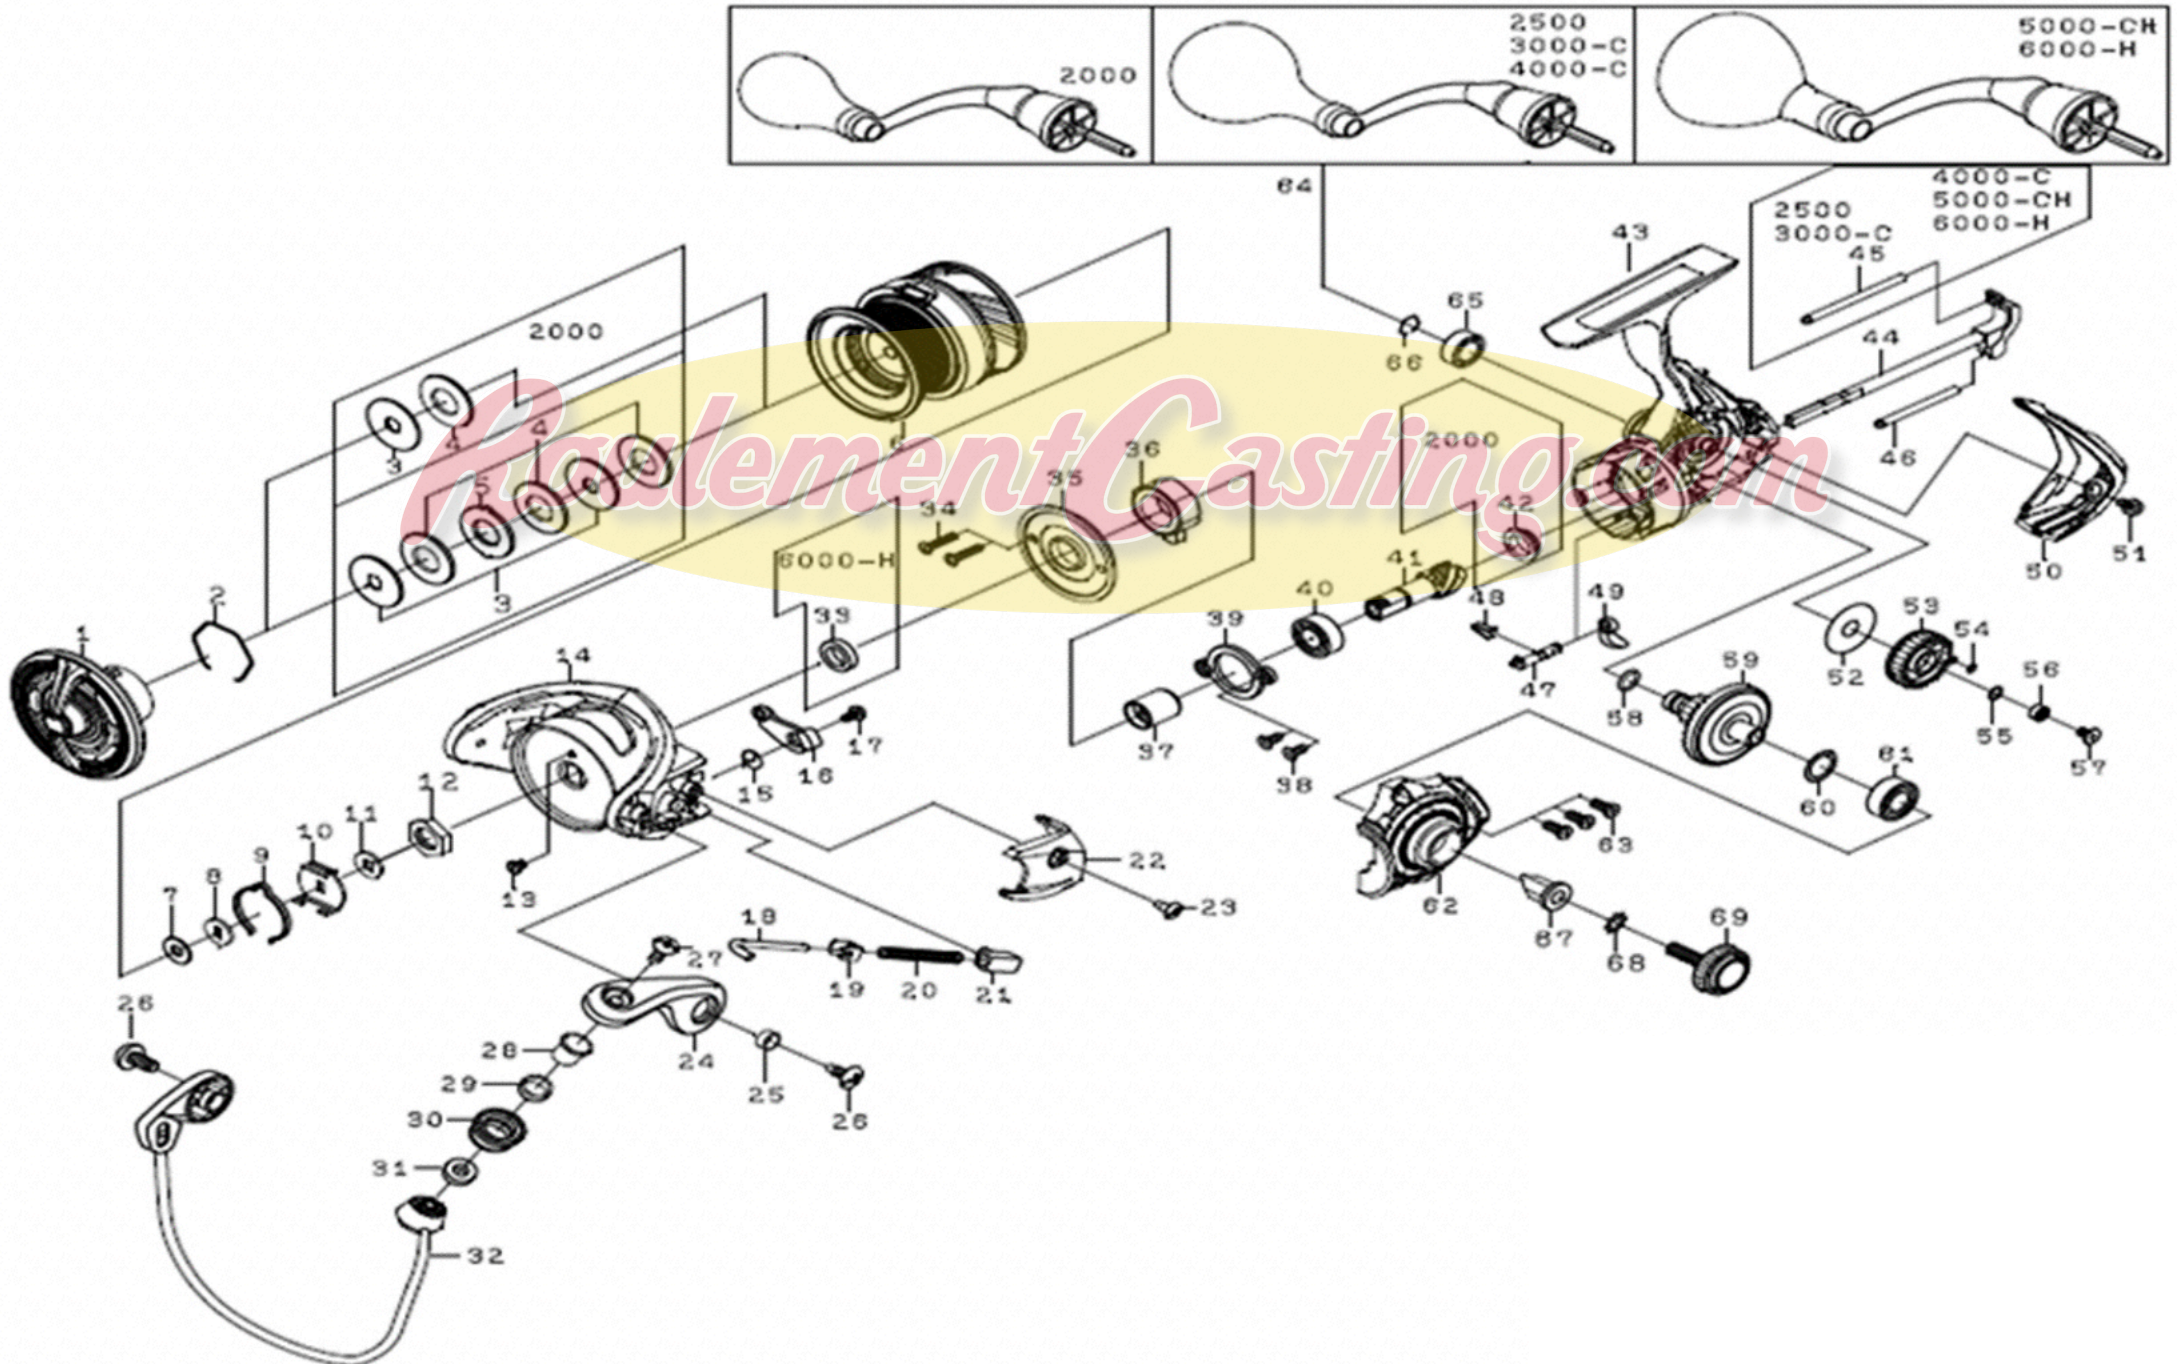

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD LT 4000-C	S41724D	1	6Q352901	DRAG KNOB
AIRD LT 4000-C	S41724D	2	6Q346101	DRAG RING
AIRD LT 4000-C	S41724D	3	6J547001	DRAG DISC WASHER
AIRD LT 4000-C	S41724D	4	6J546801	ATD WASHER ASSY (1pack-3 pcs)
AIRD LT 4000-C	S41724D	5	6Q346001	DRAG LIP WASHER
AIRD LT 4000-C	S41724D	2~6	6Q556901	SPOOL ASSY(2-6)
AIRD LT 4000-C	S41724D	7	6E398000	SPOOL WASHER (A)
AIRD LT 4000-C	S41724D	8	6Q348502	SPOOL WASHER (B)
AIRD LT 4000-C	S41724D	9	6Q457701	CLICK LEAF SPRING
AIRD LT 4000-C	S41724D	10	6Q457601	CLICK HOLDER
AIRD LT 4000-C	S41724D	11	6Q344001	CLICK HOLDER WASHER
AIRD LT 4000-C	S41724D	12	6Q122401	ROTOR NUT
AIRD LT 4000-C	S41724D	13	6H022701	ROTOR NUT SCREW
AIRD LT 4000-C	S41724D	14	6Q351802	ROTOR
AIRD LT 4000-C	S41724D	15	6H413601	KICK LEVER SPRING
AIRD LT 4000-C	S41724D	16	6Q351901	KICK LEVER
AIRD LT 4000-C	S41724D	17	6H417701	KICK LEVER SCREW
AIRD LT 4000-C	S41724D	18	6Q129501	ARMLEVER SHAFT
AIRD LT 4000-C	S41724D	19	6H576101	ARMLEVER SHAFT PLATE
AIRD LT 4000-C	S41724D	20	6H414201	ARMLEVER SPRING
AIRD LT 4000-C	S41724D	21	6Q121501	ARMLEVER SPRING HOLDER
AIRD LT 4000-C	S41724D	22	6Q352103	ARMLEVER SPRING COVER
AIRD LT 4000-C	S41724D	23	6G205003	ARM LEVER SCREW
AIRD LT 4000-C	S41724D	24	6Q121607	ARMLEVER
AIRD LT 4000-C	S41724D	25	6Q121701	ARMLEVER SCREW COLLER
AIRD LT 4000-C	S41724D	26	6G205003	ARM LEVER SCREW
AIRD LT 4000-C	S41724D	27	6G195606	ROLLER SCREW
AIRD LT 4000-C	S41724D	28	6G195501	ROLLER COLLAR (A)
AIRD LT 4000-C	S41724D	29	6G220701	ROLLER COLLAR (B)
AIRD LT 4000-C	S41724D	30	6J089902	LINE ROLLER
AIRD LT 4000-C	S41724D	31	6Q203401	ROLLER COLLAR (C)
AIRD LT 4000-C	S41724D	32	6Q556801	BAIL ASSY
AIRD LT 4000-C	S41724D	33	-----	-----
AIRD LT 4000-C	S41724D	34	6G837101	SEALED PLATE SCREW
AIRD LT 4000-C	S41724D	35	6Q129001	SEALED PLATE
AIRD LT 4000-C	S41724D	36	6Q308301	ONEWAY CLUTCH
AIRD LT 4000-C	S41724D	37	6J001401	CLUTCH RING
AIRD LT 4000-C	S41724D	38	6Q126201	PINION BEARING PLATE SCREW
AIRD LT 4000-C	S41724D	39	6H411501	PINION BEARING PLATE
AIRD LT 4000-C	S41724D	40	6G535104	DRIVE BALL BEARING(A)
AIRD LT 4000-C	S41724D	41	6Q463501	PINION GEAR
AIRD LT 4000-C	S41724D	42	-----	-----
AIRD LT 4000-C	S41724D	43	6Q556601	BODY
AIRD LT 4000-C	S41724D	44	6Q351001	MAIN SHAFT
AIRD LT 4000-C	S41724D	45	6Q126302	OSCILLATING POST(A)
AIRD LT 4000-C	S41724D	46	6Q119102	OSCILLATING POST(B)
AIRD LT 4000-C	S41724D	47	6Q118101	STOPPER CAM
AIRD LT 4000-C	S41724D	48	6H697801	STOPPER LEVER SPRING
AIRD LT 4000-C	S41724D	49	6Q118001	STOPPER LEVER
AIRD LT 4000-C	S41724D	50	6Q463602	REAR COVER
AIRD LT 4000-C	S41724D	51	6G270804	REAR COVER SCREW
AIRD LT 4000-C	S41724D	52	6H595701	OSCILLATING GEAR WASHER
AIRD LT 4000-C	S41724D	53	6Q350901	OSCILLATING GEAR
AIRD LT 4000-C	S41724D	54	6G466001	OSCILLATING GEAR ORING
AIRD LT 4000-C	S41724D	55	6H129200	OSCILLATING GEAR BEARING WASHER
AIRD LT 4000-C	S41724D	56	6G469005	OSCILLATING GEAR BALL BEARING
AIRD LT 4000-C	S41724D	57	6Q126101	OSCILLATING GEAR SCREW
AIRD LT 4000-C	S41724D	58	6G670501	DRIVE GEAR O-RING
AIRD LT 4000-C	S41724D	59	6Q351401	DRIVE GEAR
AIRD LT 4000-C	S41724D	60	63758500	DRIVE WASHER
AIRD LT 4000-C	S41724D	61	6G467302	DRIVE BALL BEARING(A)
AIRD LT 4000-C	S41724D	62	6Q556701	BODY COVER
AIRD LT 4000-C	S41724D	63	6G115001	BODY COVER SCREW
AIRD LT 4000-C	S41724D	64	6Q558701	HANDLE ASSY
AIRD LT 4000-C	S41724D	65	6G522706	DRIVE BALL BEARING(B)
AIRD LT 4000-C	S41724D	66	6G472401	DRIVE BEARING RETAINER
AIRD LT 4000-C	S41724D	67	6F721001	HANDLE SCREW COLLAR
AIRD LT 4000-C	S41724D	68	61608401	HANDLE SCRER WAWSHER
AIRD LT 4000-C	S41724D	69	6Q132401	HANDLE SCREW
AIRD LT 4000-C	S41724D	200	6H088709	HANDLE KNOB ASSY
AIRD LT 4000-C	S41724D	201	6G720001	HANDLE KNOB BEARING COLLAR
AIRD LT 4000-C	S41724D	202	6B411700	HANDLE KNOB WASHER
AIRD LT 4000-C	S41724D	203	6B679308	HANDLE KNOB SCREW
AIRD LT 4000-C	S41724D	204	6Q281301	SCREW ASSY