




AIRD X 2000

Feel Alive.

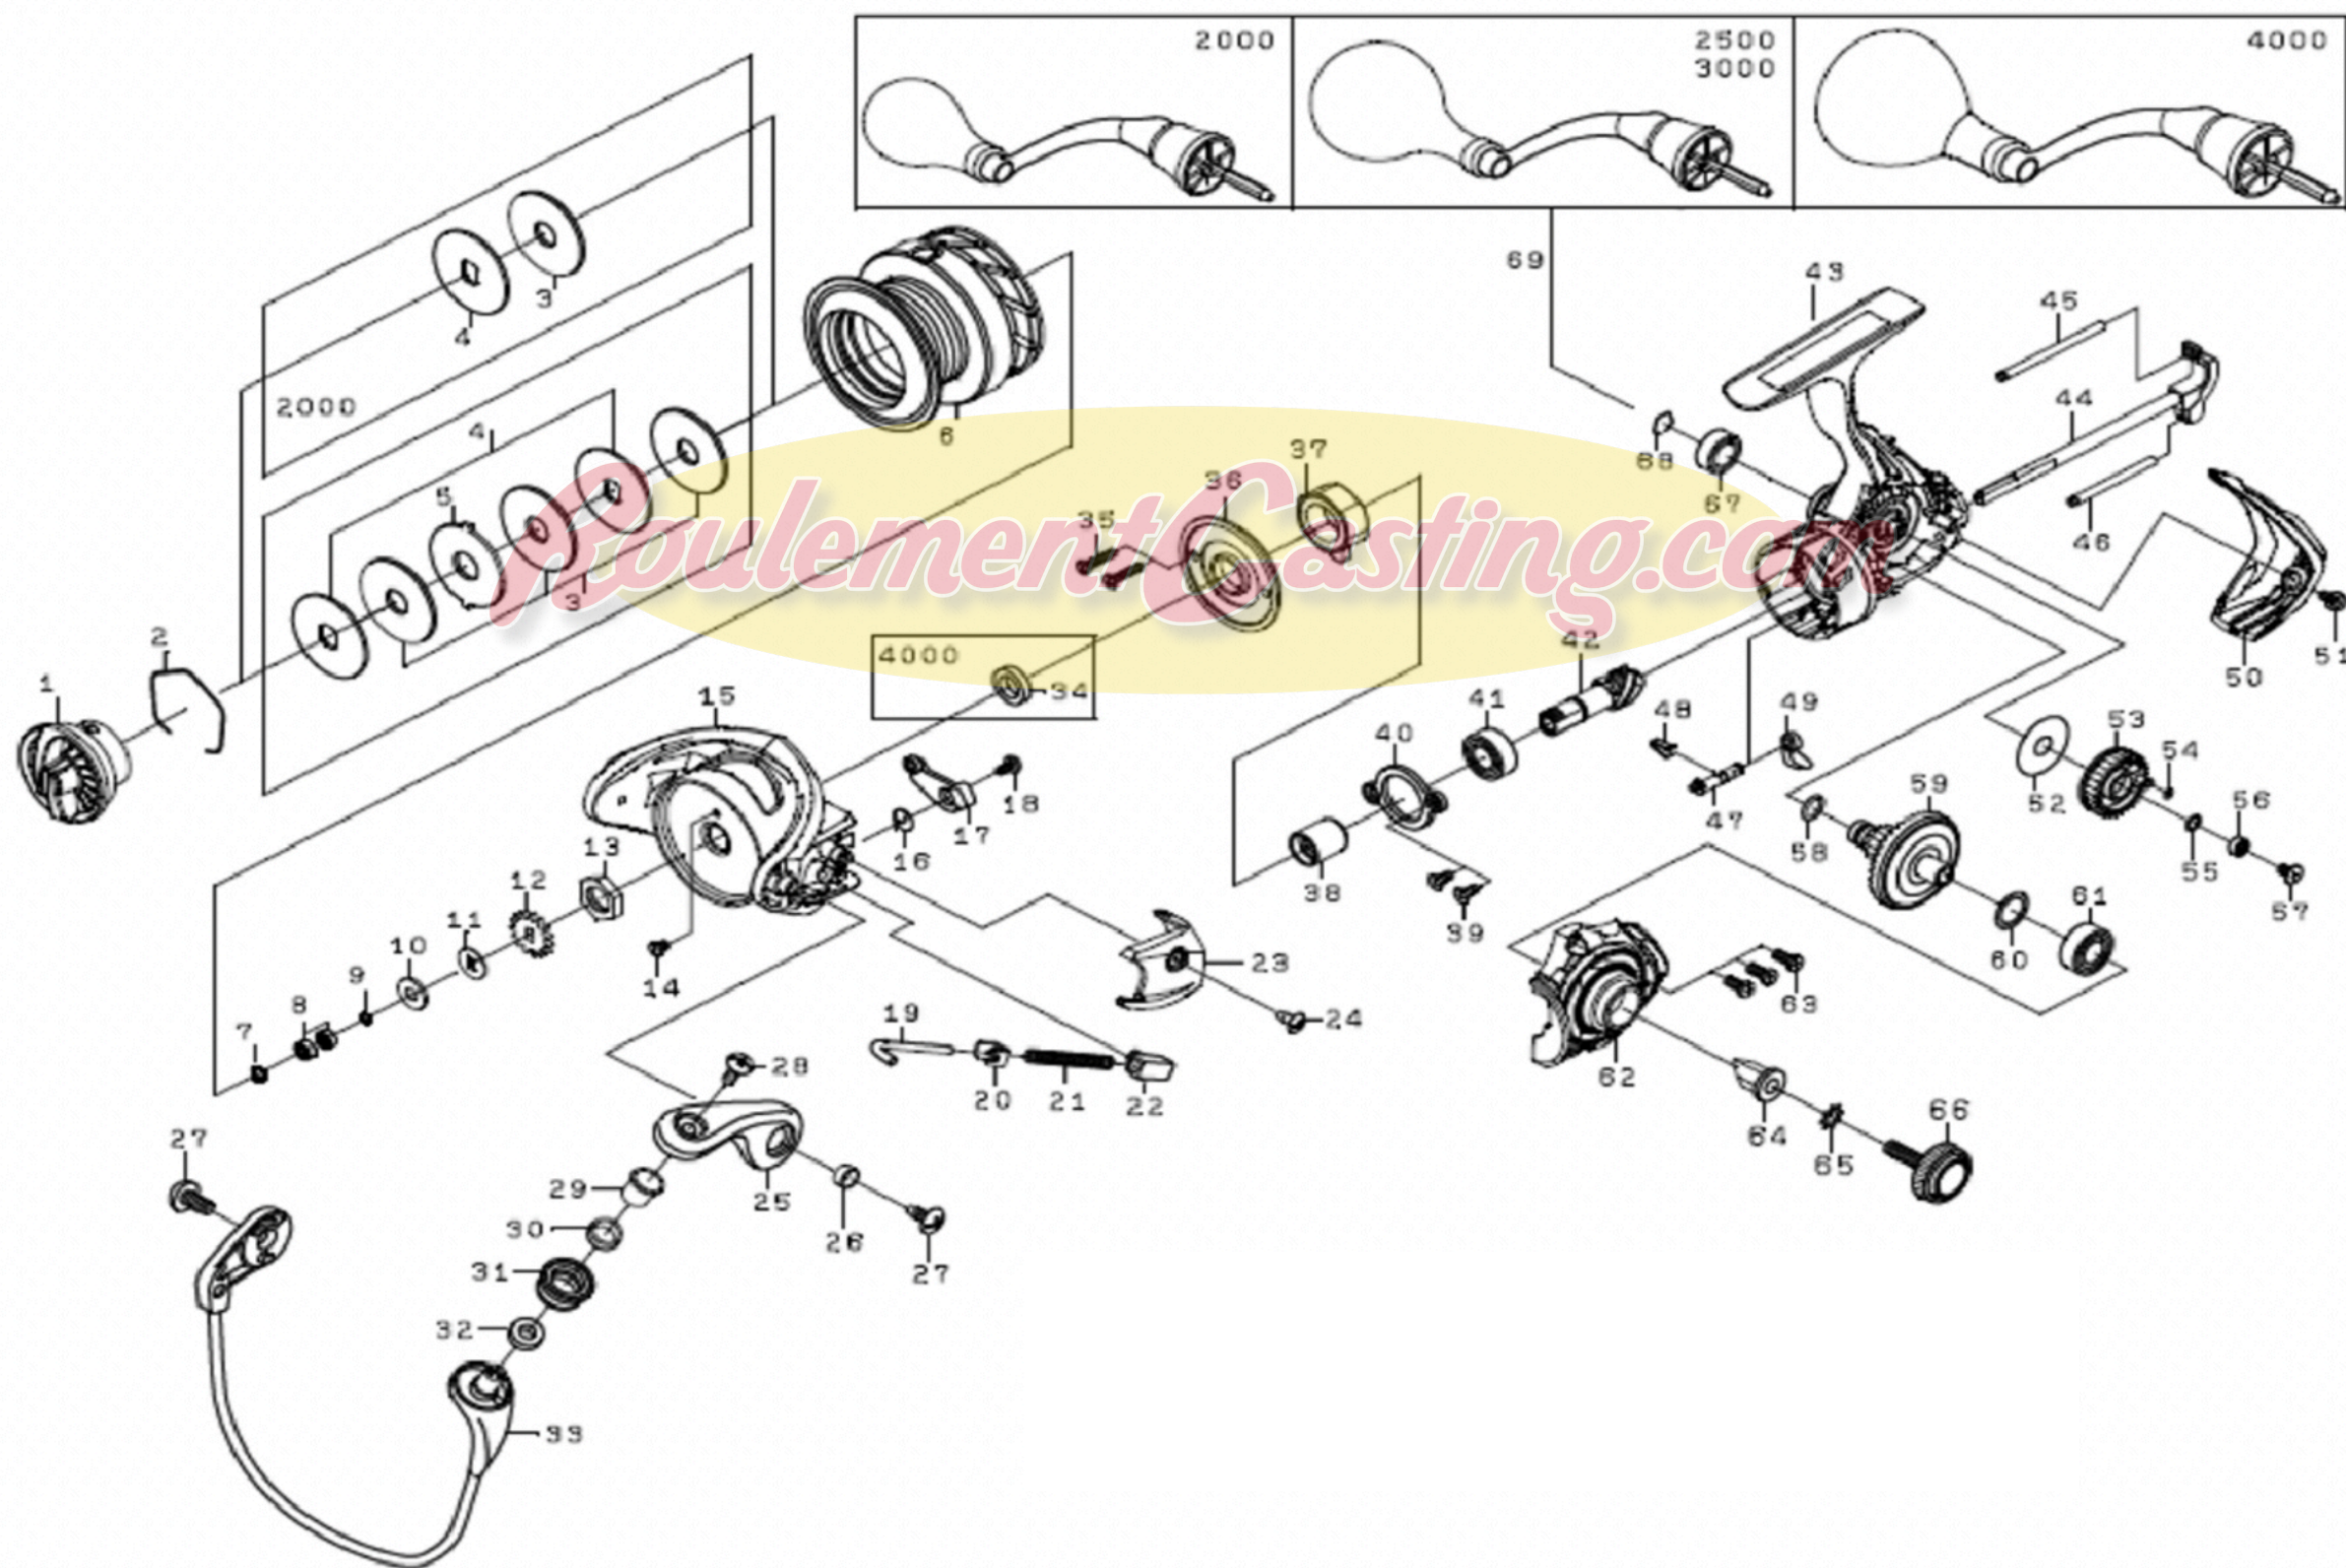

REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
AIRD X 2000	S2231JD	1	6Q182701	Drag Knob
AIRD X 2000	S2231JD	2	6F373301	Drag Washer Retainer
AIRD X 2000	S2231JD	3	6E136001	Drag Washer
AIRD X 2000	S2231JD	4	6E467201	Key Washer
AIRD X 2000	S2231JD	5	-----	Eared Washer
AIRD X 2000	S2231JD	2~6	6Q282001	Spool Assembly
AIRD X 2000	S2231JD	7	6G213001	"O"-Ring (A)
AIRD X 2000	S2231JD	8	6E332501	Ball Bearing (A)
AIRD X 2000	S2231JD	9	6B411706	Washer (A)
AIRD X 2000	S2231JD	10	6E398000	Washer (B)
AIRD X 2000	S2231JD	11	6E467101	Washer (C)
AIRD X 2000	S2231JD	12	6G839301	Click Gear
AIRD X 2000	S2231JD	13	6Q122401	Rotor Nut
AIRD X 2000	S2231JD	14	6H022701	Screw (A)
AIRD X 2000	S2231JD	15	6Q139504	Rotor
AIRD X 2000	S2231JD	16	6H443301	Bail Trip Lever Spring
AIRD X 2000	S2231JD	17	6Q139601	Bail Trip Lever
AIRD X 2000	S2231JD	18	6H417701	Screw (B)
AIRD X 2000	S2231JD	19	6Q139801	Bail Spring Shaft
AIRD X 2000	S2231JD	20	6H576101	Retainer
AIRD X 2000	S2231JD	21	6H442401	Bail Spring
AIRD X 2000	S2231JD	22	6Q121501	Bail Spring Holder
AIRD X 2000	S2231JD	23	6Q146502	Cover (A)
AIRD X 2000	S2231JD	24	6G270801	Screw (C)
AIRD X 2000	S2231JD	25	6Q121604	Bail Arm
AIRD X 2000	S2231JD	26	6Q121701	Collar (A)
AIRD X 2000	S2231JD	27	6G205001	Screw (D)
AIRD X 2000	S2231JD	28	6G195602	Screw (E)
AIRD X 2000	S2231JD	29	6G195501	Collar (B)
AIRD X 2000	S2231JD	30	6G220701	Collar (C)
AIRD X 2000	S2231JD	31	6J089902	Line Roller
AIRD X 2000	S2231JD	32	6Q203401	Collar (D)
AIRD X 2000	S2231JD	33	6Q281601	Bail Assembly
AIRD X 2000	S2231JD	34	-----	Collar (E)
AIRD X 2000	S2231JD	35	6G837101	Screw (F)
AIRD X 2000	S2231JD	36	6Q139401	Cap
AIRD X 2000	S2231JD	37	6H992901	Roller Clutch
AIRD X 2000	S2231JD	38	6J001401	Spacing Sleeve
AIRD X 2000	S2231JD	39	6Q126201	Screw (G)
AIRD X 2000	S2231JD	40	6H442201	Bearing Retainer (A)
AIRD X 2000	S2231JD	41	6G467302	Ball Bearing (B)
AIRD X 2000	S2231JD	42	6Q132101	Pinion Gear
AIRD X 2000	S2231JD	43	6Q283401	Body
AIRD X 2000	S2231JD	44	6Q168401	Main Shaft
AIRD X 2000	S2231JD	45	6Q126301	Stabilizer Bar (A)
AIRD X 2000	S2231JD	46	6Q119101	Stabilizer Bar (B)
AIRD X 2000	S2231JD	47	6Q118101	Anti-Reverse Cam
AIRD X 2000	S2231JD	48	6H697801	Anti-Reverse Cam Spring
AIRD X 2000	S2231JD	49	6Q118001	Anti-Reverse Lever
AIRD X 2000	S2231JD	50	6Q120302	Rear Cover
AIRD X 2000	S2231JD	51	6G270801	Screw (H)
AIRD X 2000	S2231JD	52	6H595701	Washer (D)
AIRD X 2000	S2231JD	53	6Q139001	Oscillate Gear
AIRD X 2000	S2231JD	54	6H770601	"O"-Ring (B)
AIRD X 2000	S2231JD	55	6H129200	Washer (E)
AIRD X 2000	S2231JD	56	6G469005	Ball Bearing (C)
AIRD X 2000	S2231JD	57	6Q126101	Screw (I)
AIRD X 2000	S2231JD	58	6G670501	"O"-Ring (C)
AIRD X 2000	S2231JD	59	6Q132201	Drive Gear
AIRD X 2000	S2231JD	60	63758500	Washer (F)
AIRD X 2000	S2231JD	61	6G467302	Ball Bearing (D)
AIRD X 2000	S2231JD	62	6Q280901	Side Cover
AIRD X 2000	S2231JD	63	6G115001	Screw (J)
AIRD X 2000	S2231JD	64	6F721001	Collar (F)
AIRD X 2000	S2231JD	65	61608401	Washer (G)
AIRD X 2000	S2231JD	66	6Q132402	Handle Screw
AIRD X 2000	S2231JD	67	6G522702	Ball Bearing (E)
AIRD X 2000	S2231JD	68	6G472401	Bearing Retainer (B)
AIRD X 2000	S2231JD	69	6Q281701	Handle Assembly
AIRD X 2000	S2231JD	200	6Q281801	Handle Knob As
AIRD X 2000	S2231JD	201	6G469005	Ball Bearing
AIRD X 2000	S2231JD	202	6B411700	Washer
AIRD X 2000	S2231JD	203	6B679308	Truss Head Screw
AIRD X 2000	S2231JD	204	6Q281901	Screw As