




## BAITCASTING REEL

Please order by parts number, not key number  
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

## LEXA-LC100H

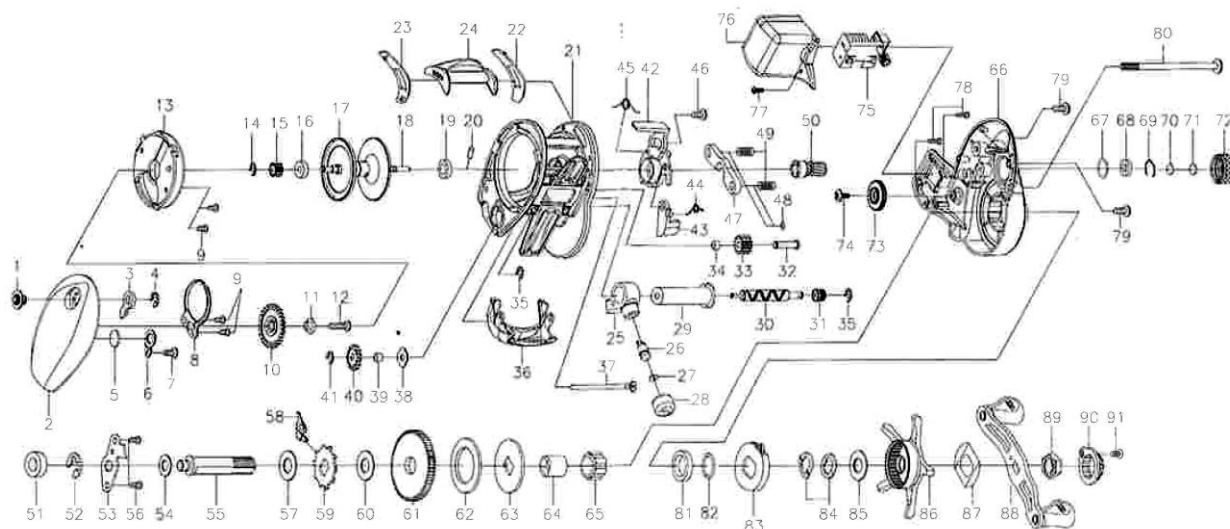

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	330-3060	CLICK BUTTON	48	540-6020	WASHER
2	701-2480	LEFT SIDE PLATE	49	510-4430	YOKE SPRING
3	190-1271	CLICK PAWL	50	260-1673	PINION GEAR
4	200-0530	RETAINER	51	140-1280	BALL BEARING
5	540-5990	SPACER	52	200-0580	RETAINER
6	410-3380	PLATE	53	410-2211	DRIVE SHAFT PLATE
7	460-2930	SCREW	54	540-6600	WASHER
8	510-6330	CLICK SPRING	55	470-3081	DRIVE SHAFT
9	460-7470	SET PLATE SCREW	56	460-4640	SCREW
10	240-3250	COG WHEEL	57	540-7010	WASHER
11	210-2580	COLLAR	58	530-0840	A/R PAWL
12	460-7460	SCREW	59	240-2530	A/R RATCHET
13	220-3160	SET PLATE	60	540-6840	WASHER
14	200-0530	RETAINER	61	250-1400	DRIVE GEAR
15	240-3090	SPOOL GEAR	62	540-6950	DRAG WASHER
16	140-2340	BALL BEARING	63	540-9031	KEY WASHER
17-20	701-2510	SPOOL ASSEMBLY	64	150-2190	GEAR SHAFT COLLAR
21	110-1074	FRAME	65	140-1810	ROLLER CLUTCH
22	410-2140	CLUTCH LEVER PLATE	66	701-2490	RIGHT SIDE PLATE
23	410-2150	CLUTCH LEVER PLATE	67	430-1080	O'RING
24	090-0260	CLUTCH LEVER	68	150-2060	BUSHING
25	490-1080	LINE GUIDE	69	430-1061	BEARING RETAINER
26	400-2540	LINE GUIDE PAWL	70	540-6850	SPACER
27	540-3980	WASHER	71	540-4340	SPACER
28	380-0780	LINE GUIDE NUT	72	380-2020	CAST CONTROL CAP
29	270-0720	LEVEL LINE GUARD	73	240-2820	COUNTER GEAR
30	470-4580	WORM SHAFT	74	460-5390	SCREW
31	240-3260	WORM SHAFT GEAR	75	550-6100	COUNTER ASSEMBLY
32	471-8720	SHAFT	76	701-2470	COUNTER COVER
33	240-3290	WORM SHAFT GEAR	77	460-4870	SCREW
34	210-2630	COLLAR	78	460-6030	SCREW
35	200-1440	RETAINER	79	460-4300	SCREW
36	550-4004	FRONT PLATE	80	460-7480	LONG SCREW
37	460-5170	LONG SCREW	81	140-0570	BALL BEARING
38	540-6060	WORM SHAFT WASHER	82	540-6250	WASHER
39	210-2620	COLLAR	83	510-5370	CLICK LEAF SPRING HOLDER
40	240-3200	WORM SHAFT GEAR	84	540-6391	WASHER
41	200-0530	RETAINER	85	540-9021	WASHER
42	170-1280	CLUTCH CAM	86	701-2500	STAR DRAG
43	330-2820	CLUTCH TRIP PLATE	87	510-3260	LEAF SPRING
44	510-6370	CLUTCH TRIP PLATE SPRING	88	701-2520	HANDLE ASSEMBLY
45	510-6300	SPRING	89	380-0770	HANDLE NUT
46	460-1290	SCREW	90	180-2470	HANDLE NUT PLATE
47	410-2880	YOKE	91	460-0450	HANDLE NUT PLATE SCREW