




SPINNING REEL

OPUS PLUS 5500A/6000A

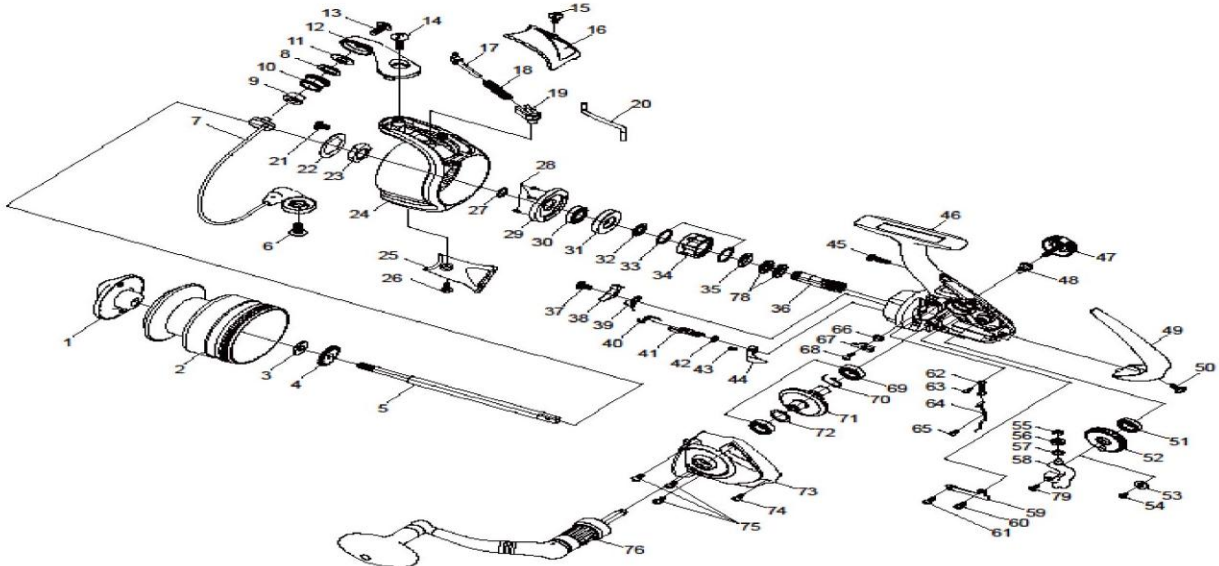

KEY NO.	PARTS NAME	PARTS NO.	KEY NO.	PARTS NAME	PARTS NO.
1	Drag Knob Assembly	WD1-2901	42	O-ring	W56-3101
2	Spool Assembly	WD1-3001	43	Screw	W75-3301
3	Washer	W36-9301	44	Anti-reverse Lever	WD1-0601
4	Click gear	W36-9201	45	Screw	WD1-0701
5	Main Shaft	WD1-3101	46	Body	WD1-4401
6	Screw	WD0-7901	47	Handle Screw	W39-0101
7	Bail Assembly	WD1-3201	48	Collar	W36-0101
8	Washer	W45-6601	49	Rear Cover	WD1-4501
9	Bushing	W57-9501	50	Screw	WD1-1101
10	Line Roller	WD0-8201	51	Ball Bearing	W78-0001
11	Collar	W33-8202	52	Oscillating Gear	WD1-4601
12	Bail Arm	WD1-3301	53	Bushing	WD1-1301
13	Screw	W33-8301	54	Screw	W75-5801
14	Screw	WD0-7901	55	Washer	W36-2601
15	Screw	W30-9401	56	Bushing	W36-1101
16	Rotor Cover (A)	WD1-3401	57	Washer	WD1-1401
17	Bail Spring Shaft	WD0-8501	58	Oscillation Slider	WD1-4701
18	Bail Spring	WD0-8601	59	Stabilizer bar	WD1-4801
19	Bail Spring Holder	W77-1201	60	Screw	WD1-4901
20	Bail Shaft	WD1-3501	61	Screw	W75-4601
21	Screw	WD1-3601	62	Spring	WD1-1801
22	Rotor Nut Holding Plate	W30-6501	63	Screw	WD1-1901
23	Rotor Nut	W30-8701	64	Anti-Reverse Pawl Plunger	WD1-5001
24	Rotor	WD1-3701	65	Screw	WD1-5101
25	Rotor Cover (B)	WD1-3801	66	Collar	WD1-5201
26	Screw	W34-0401	67	Anti-reverse Pawl	W56-9901
27	Collar	W74-7801	68	Screw	W34-4301
28	Screw	W75-4601	69	Ball Bearing	W49-7401
29	Bearing Retainer	W56-4701	70	Spring	WD1-5301
30	Ball Bearing	W49-0401	71	Drive Gear	WD1-5401
31	Collar	WD1-3901	72	Washer	W50-8701
32	Collar	W34-1601	73	Side Cover	WD1-5501
33	Washer	W34-1501	74	Screw	W75-4601
34	Roller Clutch	W56-4201	75	Screw	WD1-5601
35	Collar	WD1-4001	76	Handle Assembly	WD1-5701
36	Pinion Gear	WD1-4101	78	Collar	W57-0301
37	Screw	WD1-4201	79	Screw	WD1-5801
38	Anti-reverse Pawl	W57-0101			
39	Anti-reverse Pawl Spring	W56-3501			
40	Anti-reverse Cam Spring	W57-0001			
41	Anti-reverse Cam	WD1-4301			

OPUS PLUS 6000A SPECIAL PART LIST		
KEY NO.	PARTS NAME	PARTS NO.
2	Spool Assembly	WD1-3002