


ø

22

0-10

Gy

ANF.

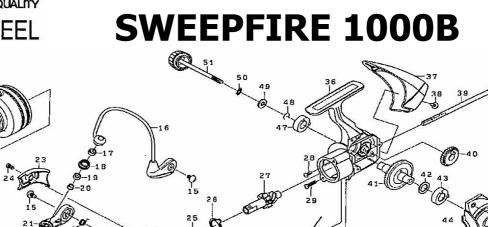

ß

зo

32

31

		Π		00	NO -
Key No.	Parts No.	Parts Name 1054	Key No.	Parts No.	Parts Name
1	H02-1701	Drag Knob	27	H01-8901	Pinion gear
2	F37-3301	Drag Washer Retainer	28	G41-0601	Screw (E)
3	E46-7201	Key Washer	29	H12-0301	Screw (F)
4	E13-6001	Drag Washer	30	H01-9301	Anti-Reverse Pawl
2-6	H06-5201	Spool Assembly	31	H01-9101	Anti-Reverse Pawl Collar
7	E46-7101	Washer (A)	32	H01-9201	Anti-Reverse Pawl Spring (B)
8	E39-8000	Washer (B)	33	H01-8301	Anti-Reverse Cam
9	G83-9301	Click Gear	34	G83-6401	Anti-Reverse Cam Spring
10	F33-6102	Rotor Nut	35	H01-8401	Anti-Reverse Lever
11	H01-9803	Rotor	36	H01-8203	Body
12	G62-7701	Screw (A)	37	H01-9701	Rear Cover
13	H02-0001	Bail Trip Lever	38	G27-0801	Screw (G)
14	H01-9901	Bail Spring	39	H01-8601	Main Shaft
15	G20-5001	Screw (B)	40	H01-8501	Oscillating Gear
16	H02-0301	Bail Assembly	41	H01-9401	Drive Gear
17	G87-4201	Collar (A)	42	375-8500	Washer (C)
18	F62-5002	Line Roller	43	H02-2001	Collar (D)
19	G87-4301	Collar (B)	44	H01-9603	Side Cover
20	G15-2502	Collar (C)	45	F93-9701	Screw (H)
21	H02-0101	Bail Arm	46	H06-5101	Handle Assembly
22	G19-5602	Screw (C)	47	H02-2001	Collar (E)
23	H02-0201	Cover	48	H01-9501	Bearing Retainer
24	G27-0801	Screw (D)	49	G86-3901	Washer (D)
25	G28-5801	Ball Bearing	50	160-8101	Washer (E)
26	H01-9001	Anti-Reverse Pawl Spring (A)	51	H02-1001	Handle Screw