


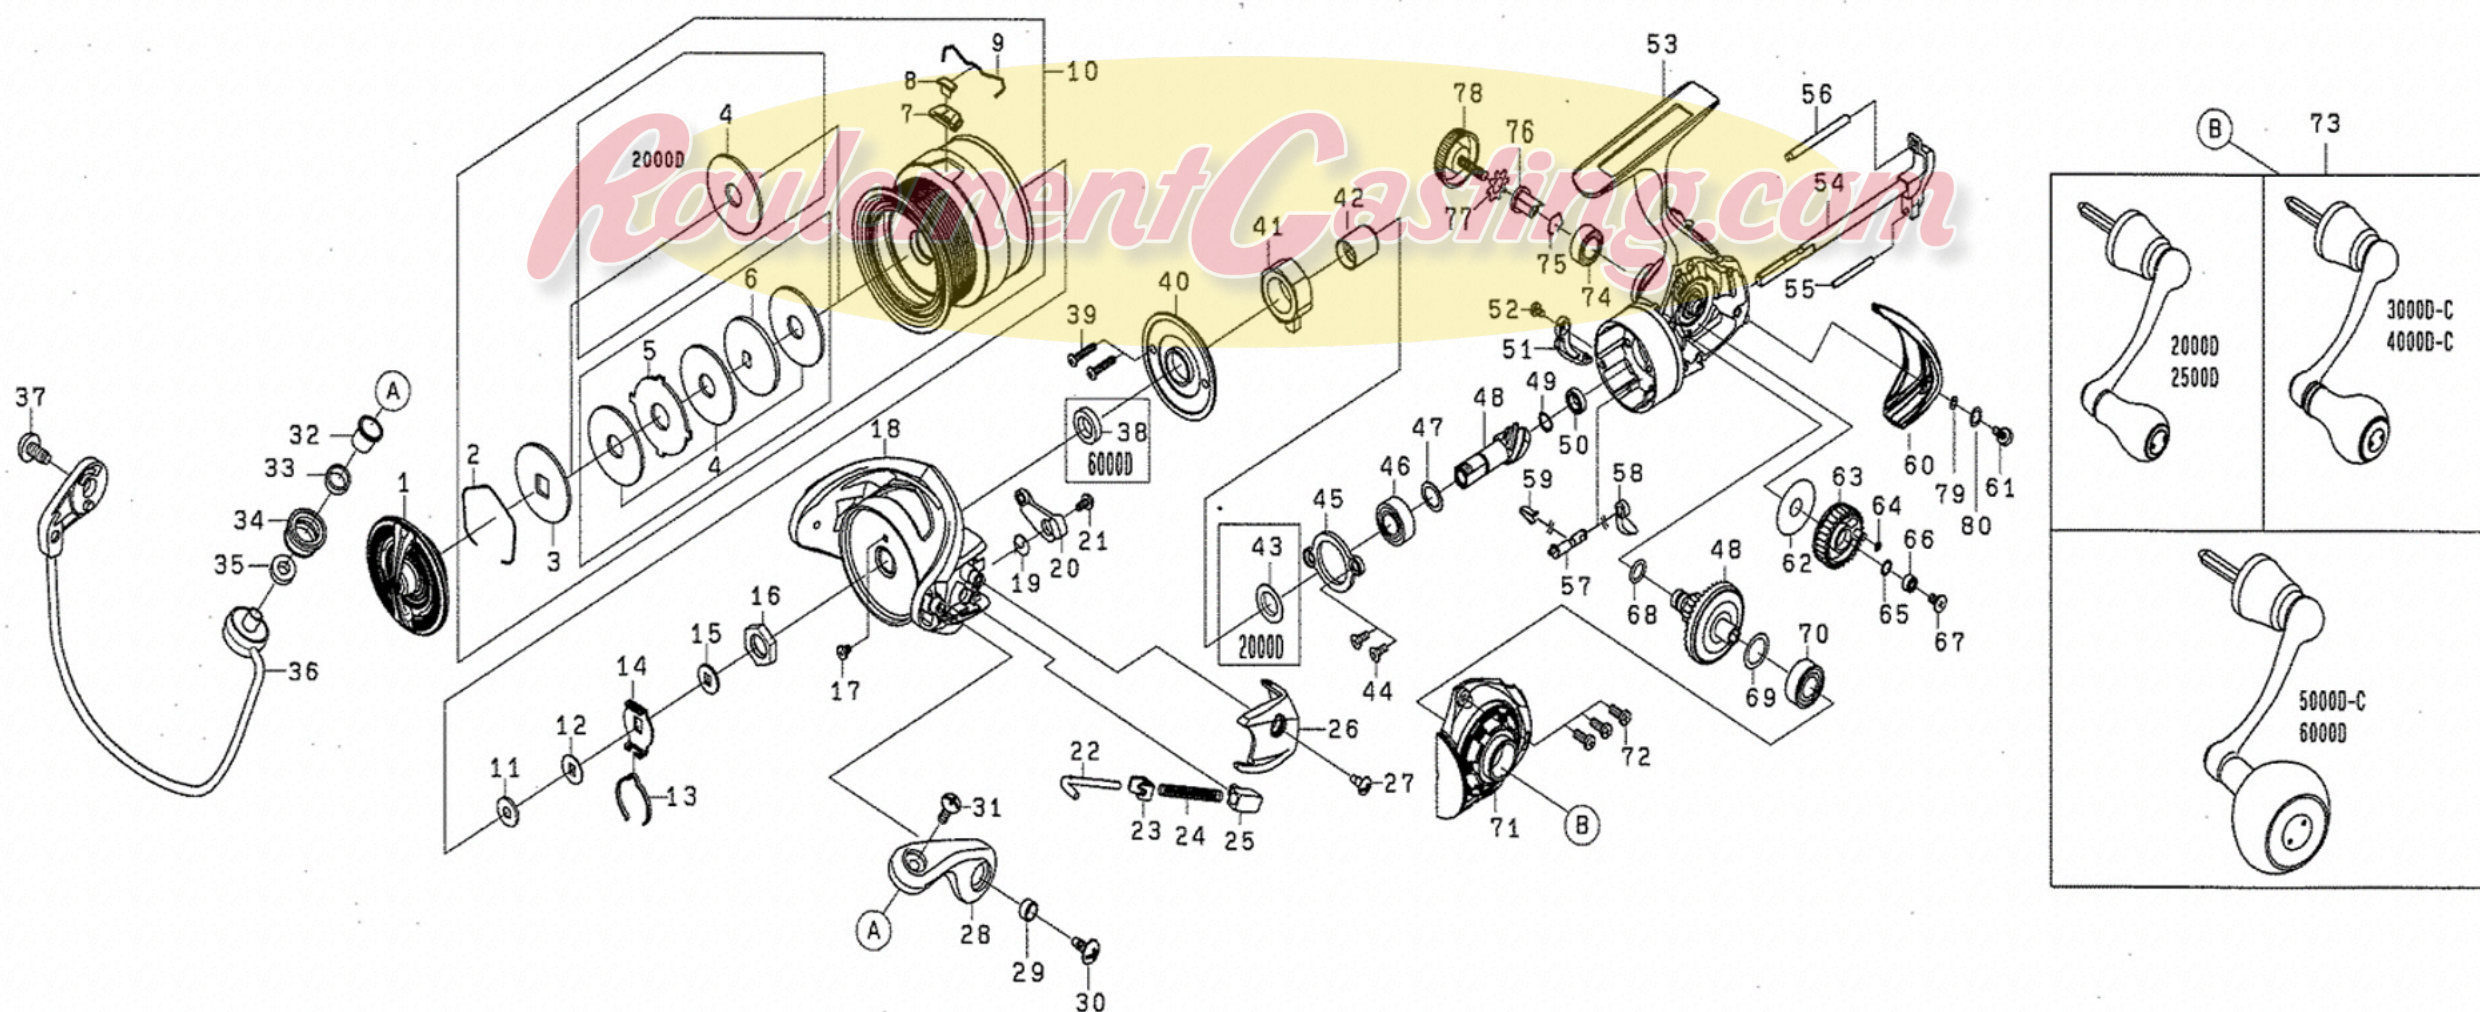

TIERRA LT 4000D-C

Feel Alive.



REEL NAME	MGFT CODE	KEY NO	PARTS CODE	DESCRIPTION
TIERRA LT 4000D-C	S46717D	1	6J698704	DRAG KNOB
TIERRA LT 4000D-C	S46717D	2	6J547101	DRAG RING
TIERRA LT 4000D-C	S46717D	3	6J547001	DRAG DISC WASHER(A)
TIERRA LT 4000D-C	S46717D	4	6J546801	DRAG WASHER
TIERRA LT 4000D-C	S46717D	5	6J546902	DRAG LIP WASHER
TIERRA LT 4000D-C	S46717D	6	6J547001	DRAG DISC WASHER(B)
TIERRA LT 4000D-C	S46717D	7	6J568601	LINE STOPPER PLATE
TIERRA LT 4000D-C	S46717D	8	6J558001	LINE STOPPER
TIERRA LT 4000D-C	S46717D	9	6J314801	LINE STOPPER SPRING
TIERRA LT 4000D-C	S46717D	10	6J939301	SPOOL ASSY
TIERRA LT 4000D-C	S46717D	11	6E398003	SPOOL WASHER (A)
TIERRA LT 4000D-C	S46717D	12	6E467101	SPOOL WASHER (B)
TIERRA LT 4000D-C	S46717D	13	6J953201	CLICK LEAF SPRING
TIERRA LT 4000D-C	S46717D	14	6J546201	CLICK SPRING HOLDER
TIERRA LT 4000D-C	S46717D	15	6J703101	SPOOL WASHER (C)
TIERRA LT 4000D-C	S46717D	16	6J001901	ROTOR NUT
TIERRA LT 4000D-C	S46717D	17	6H022701	ROTOR NUT SCREW
TIERRA LT 4000D-C	S46717D	18	6J567513	ROTOR
TIERRA LT 4000D-C	S46717D	19	6H413601	KICK LEVER SPRING
TIERRA LT 4000D-C	S46717D	20	6J567601	KICK LEVER ASSY
TIERRA LT 4000D-C	S46717D	21	6H417701	KICK LEVER SCREW
TIERRA LT 4000D-C	S46717D	22	6H572001	ARM LEVER SHAFT
TIERRA LT 4000D-C	S46717D	23	6H576101	ARM LEVER SHAFT PLATE
TIERRA LT 4000D-C	S46717D	24	6H414201	ARM LEVER SHAFT SPRING
TIERRA LT 4000D-C	S46717D	25	6J089401	ARM LEVER SHAFT HOLDER
TIERRA LT 4000D-C	S46717D	26	6J567801	ARM LEVER SP COVER
TIERRA LT 4000D-C	S46717D	27	6G270801	ARM LEVER SP COVER SCREW
TIERRA LT 4000D-C	S46717D	28	6H728929	ARM LEVER
TIERRA LT 4000D-C	S46717D	29	6H962401	ARM LEVER SCREW COLLAR
TIERRA LT 4000D-C	S46717D	30	6G205001	ARM LEVER SCREW
TIERRA LT 4000D-C	S46717D	31	6G195602	ROLLER SCREW
TIERRA LT 4000D-C	S46717D	32	6G195501	ROLLER COLLAR(A)
TIERRA LT 4000D-C	S46717D	33	6G220701	ROLLER COLLAR(B)
TIERRA LT 4000D-C	S46717D	34	6J089901	LINE ROLLER
TIERRA LT 4000D-C	S46717D	35	6G874201	ROLLER COLLAR(C)
TIERRA LT 4000D-C	S46717D	36	6J844802	BAIL ASSY
TIERRA LT 4000D-C	S46717D	37	6G205001	BAIL HOLDER SCREW
TIERRA LT 4000D-C	S46717D	38	-	-
TIERRA LT 4000D-C	S46717D	39	6J001601	SEALED CAP SCREW
TIERRA LT 4000D-C	S46717D	40	6J013401	SEALED CAP
TIERRA LT 4000D-C	S46717D	41	6J388401	ONEWAY CLUTCH
TIERRA LT 4000D-C	S46717D	42	6J001403	CLUTCH RING
TIERRA LT 4000D-C	S46717D	43	-	-
TIERRA LT 4000D-C	S46717D	44	6J000901	PINION BEARING PLATE SCREW
TIERRA LT 4000D-C	S46717D	45	6H411501	PINION BEARING PLATE
TIERRA LT 4000D-C	S46717D	46	6G535104	PINION BALL BEARING (A)
TIERRA LT 4000D-C	S46717D	47	63758502	PINION BEARING WASHER (B)
TIERRA LT 4000D-C	S46717D	48	6Z025214	PINION + DRIVE GEAR SET
TIERRA LT 4000D-C	S46717D	49	6H931701	PINION BEARING SPRING WASHER
TIERRA LT 4000D-C	S46717D	50	6G466202	PINION BALL BEARING (B)
TIERRA LT 4000D-C	S46717D	51	6J001101	BAIL KICK COLLAR
TIERRA LT 4000D-C	S46717D	52	6G940402	BAIL KICK COLLAR SCREW
TIERRA LT 4000D-C	S46717D	53	6J938901	BODY ASSY
TIERRA LT 4000D-C	S46717D	54	6J140803	MAIN SHAFT
TIERRA LT 4000D-C	S46717D	55	6J084802	OSCILLATING POST (A)
TIERRA LT 4000D-C	S46717D	56	6H614301	OSCILLATING POST (B)
TIERRA LT 4000D-C	S46717D	57	6H595501	STOPPER CAM
TIERRA LT 4000D-C	S46717D	58	6H595401	STOPPER LEVER
TIERRA LT 4000D-C	S46717D	59	6H697801	STOPPER CAM LEAF SPRING
TIERRA LT 4000D-C	S46717D	60	6J495301	REAR CAP
TIERRA LT 4000D-C	S46717D	61	6J001801	REAR CAP SCREW
TIERRA LT 4000D-C	S46717D	62	6H595701	OSCILLATING GEAR WASHER
TIERRA LT 4000D-C	S46717D	63	6J838001	OSCILLATING GEAR
TIERRA LT 4000D-C	S46717D	64	6G466001	OSCILLATING GEAR O-RING
TIERRA LT 4000D-C	S46717D	65	6H129201	OSCILLATING GEAR BEARING WASHER
TIERRA LT 4000D-C	S46717D	66	6G469005	OSCILLATING GEAR BALL BEARING
TIERRA LT 4000D-C	S46717D	67	6G940402	OSCILLATING GEAR SCREW
TIERRA LT 4000D-C	S46717D	68	6G670501	DRIVE GEAR O-RING
TIERRA LT 4000D-C	S46717D	69	63758502	DRIVE GEAR WASHER
TIERRA LT 4000D-C	S46717D	70	6G467302	DRIVE BALL BEARING (A)
TIERRA LT 4000D-C	S46717D	71	6J939001	BODY COVER ASSY
TIERRA LT 4000D-C	S46717D	72	6G332904	BODY COVER SCREW
TIERRA LT 4000D-C	S46717D	73	6J939201	HANDLE ASSY
TIERRA LT 4000D-C	S46717D	74	6G522706	DRIVE BALL BEARING (B)
TIERRA LT 4000D-C	S46717D	75	6G472401	DRIVE BALL BEARING (B) RING
TIERRA LT 4000D-C	S46717D	76	6F721001	HANDLE COLLAR
TIERRA LT 4000D-C	S46717D	77	61608401	HANDLE WASHER
TIERRA LT 4000D-C	S46717D	78	6H613302	HANDLE CAP
TIERRA LT 4000D-C	S46717D	79	6F037404	REAR CAP WASHER (A)
TIERRA LT 4000D-C	S46717D	80	6B411703	REAR CAP WASHER (B)