



CS 301A 

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0042	Line Guide Pawl	1852	Drag Washer (B-2)	2087	Quick-Fire II Clutch Bar
0133	"E" Lock	1853	Key Washer (A)	2088	Right Side Frame
0191	Clutch Bar Support Screw	1854	Eared Washer (B-1)	2097	Worm Bushing (A)
0194	Ball Bearing	1921	Cast Control Cap	2238	Bush Plate Screw
0425	"E" Lock	1922	Cast Control Spacer	2242	Roller Clutch Inner Tube
0664	Spacer B	1927	Anti-Reverse Ratchet	2291	Handle Assembly
0686	"E" Lock	1930	Clutch Cam Screw	2293	Left Side Plate Nut
0770	Handle Nut Plate Screw	1937	Line Guide Assembly	2298	Drive Shaft Washer (B)
0799	Friction Washer	1938	Idle Gear (C)	2299	Idle Gear (A)
0816	Shaft Washer	1940	Frame Nut	2305	Stand Bolt
0819	Drive Shaft Bushing	1941	Stand Screw	2307	Frame Bar
0830	Spacer (optional)	1945	Thumb Rest	2308	Spool Assembly
1133	Yoke Spring	1946	Level Wind Guard	2309	Clutch Bar Support
1201	Retractor Spring Collar	1948	Brake Collar	2312	Right Side I.D. Plate
1227	Push Nut (SPN-2)	1949	Right Side Plate Screw	2324	Star Drag
1239	Pawl Cap	1951	Stand	2325	Left Side Plate
1245	Clutch Bar Support Spacer	1957	Worm Bushing (B)	2326	Roller Clutch Assembly
1455	Drag Spring Washer (H)	1958	Worm Shaft	2327	Return Pin Guide
1472	Anti-Reverse Pawl	2050	Clutch Cam Retainer	2328	Drive Gear
1613	Drag Spring Washer (L)	2070	Idle Gear (B)	2329	Drive Shaft
1616	Left Side Plate Screw	2076	Pinion Gear	2330	Clutch Cam
1618	Key Washer (C)	2077	Yoke	2331	Clutch Pawl
1620	Eared Washer	2078	Retractor Spring	2332	A-Side Seal
1692	Handle Nut Plate	2081	Clutch Pawl Spring	2333	Set Plate
1697	Spool Tension Spring	2083	Clutch Plate	2334	Left Side Frame
1788	Handle Nut	2085	Brake Case	2335	B-Side Seal
1851	Drag Washer (C)	2086	Clutch Bar Guide	2336	Right Side Plate