


SOLSTACE

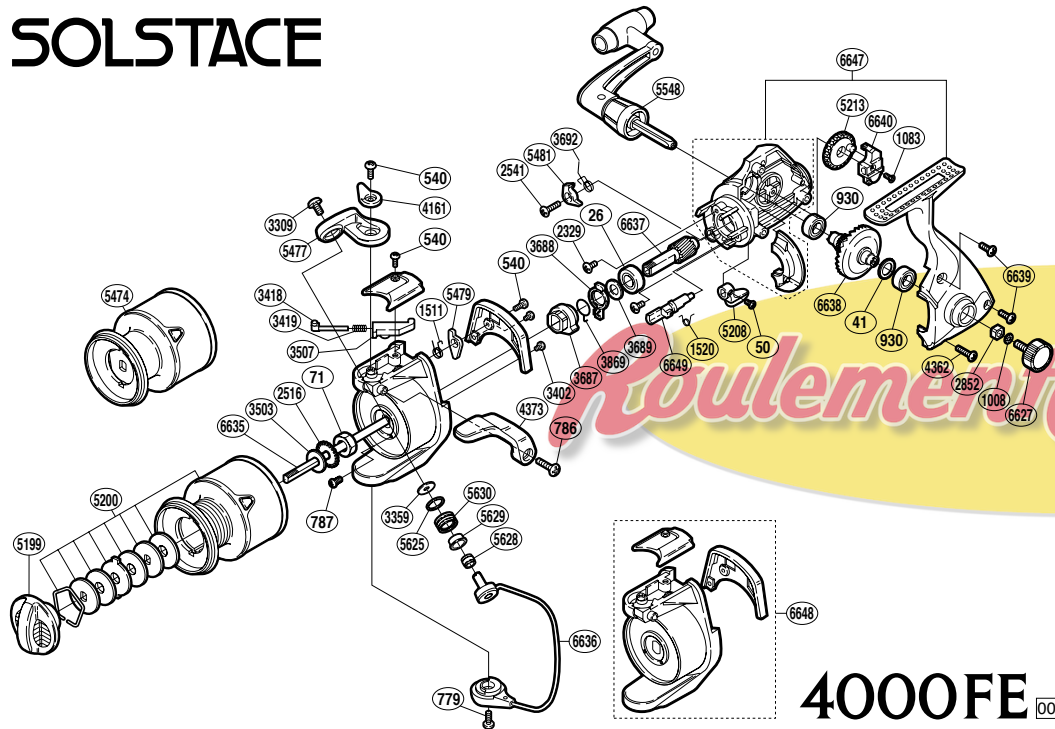

4000FE 00

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3402	Cover Screw	5479	Bail Trip Lever
0041	Drive Gear Washer	3418	Bail Spring Guide (A)	5481	Anti-Reverse Pawl
0050	Anti-Reverse Lever Screw	3419	Bail Spring	5548	Handle Assembly
0071	Rotor Nut	3503	Spool Washer	5625	Line Roller Spacer
0540	Multi-Purpose Screw	3507	Bail Spring Guide (B)	5628	Line Roller Collar
0779	Bail Hold Support Screw	3687	Anti-Reverse Ratchet	5629	Line Roller Bushing
0786	Trigger Screw	3688	Anti-Reverse Lock Out	5630	Line Roller
0787	Nut Lock Screw	3689	Bushing Washer	6627	Handle Screw Cap
0930	Ball Bearing	3692	Anti-Reverse Pawl Spring	6635	Main Shaft
1008	Handle Lock Washer	3869	Anti-Reverse Lock Out Spring	6636	Bail Assembly
1083	Slider Retainer Screw	4161	Trigger Cam	6637	Pinion Gear
1511	Lever Spring	4362	Side Cover Screw (long)	6638	Drive Gear
1520	Anti-Reverse Cam Spring	4373	Quick-Fire II Trigger	6639	Side Cover Screw (short)
2329	Bearing Retainer Screw	5199	Drag Knob	6640	Oscillating Slider
2516	Spool Support	5200	Spool Assembly (aluminum)	6647	Body Assembly
2541	Anti-Reverse Pawl Screw	5208	Anti-Reverse Lever	6648	Rotor Assembly
2852	Handle Screw Lock	5213	Oscillating Gear	6649	Anti-Reverse Cam
3309	Line Roller Screw	5474	Spool Assembly (graphite)		
3359	Line Roller Washer	5477	Bail Arm		