



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	6015	Main Shaft	6046	Idle Gear Washer
0930	Ball Bearing	6016	Bearing Spacer	6047	Idle Gear
2254	Ball Bearing	6017	Line Roller Bushing	6048	Worm Shaft
2298	Spacer	6018	Ball Bearing	6049	Bushing
2309	Side Cover Screw (short)	6019	Line Roller Washer	6050	Drive Gear
2401	Ball Bearing	6020	Click Spring	6051	Side Cover
2409	Worm Shaft Spacer	6021	Click Pin	6052	Side Cover Flange
2934	Clutch Cover Screw	6022	Bail Spring Guide (A)	6053	Rear Shield
3538	Spool Support	6023	Spring Guide (A) Support	6054	Rear Protector
3571	Anti-Reverse Cam Screw	6024	Bail Spring	6055	Rear Protector Screw
3600	Multi-Purpose Screw	6025	Bail Spring Guide (B)	6056	Handle Screw Cap (A)
4661	Anti-Reverse Cam Ring	6026	Bail Arm	6057	Cap Screw
4674	Side Cover Screw	6027	Line Roller Screw	6058	Handle Assembly
4675	Oscillating Pawl Cover Screw	6028	Bail Arm Screw	6059	Oscillating Pawl Cover
4684	"E" Lock	6029	Protector Screw	6060	Oscillating Slider Bushing
4716	Lever Spring Guide (B)	6030	Rotor Protector	6061	Oscillating Pawl
4717	Lever Spring	6032	Bail Spring Cover	6062	Oscillating Slider
4718	Lever Spring Guide (A)	6033	Bail Trip Lever	6063	Worm Shaft Retainer
5261	Slider Retainer Screw	6034	Bail Hold Support Shaft	6064	Worm Shaft Retainer Washer
6005	Drag Knob	6035	Line Roller	6065	Oscillating Guide (A)
6006	Spool Assembly	6036	Bail Hold Support Spacer	6066	Oscillating Guide (B)
6007	Spool Washer	6037	Bail Assembly	6067	Anti-Reverse Lever
6008	Set Screw	6038	Rotor	6068	Body
6009	Bearing Bushing	6040	Roller Clutch Assembly	6069	Handle Screw Cap (B)
6010	Nut Lock Screw	6041	Pinion Gear	6070	Wrench (accessory)
6011	Rotor Nut Lock Plate	6042	Friction Ring	6342	Roller Clutch Screw
6012	Ball Bearing	6043	Anti-Reverse Cam	7244	Roller Clutch Reinforce
6013	Main Shaft Spacer	6044	Anti-Reverse Cam Spring		
6014	Rotor Nut	6045	Worm Bushing		