



1000FA 00

| RD No. | PARTS NAMES | RD No. | PARTS NAMES | RD No. | PARTS NAMES |
|--------|--------------------------|--------|---------------------------|--------|------------------------------|
| 0026 | Ball Bearing | 3400 | Bail Trip Lever | 3869 | Anti-Reverse Lock Out Spring |
| 0041 | Drive Gear Washer | 3402 | Cover Screw | 4051 | Bail Spring |
| 0050 | Anti-Reverse Lever Screw | 3450 | Spool Assembly (graphite) | 4160 | Trigger Cam |
| 0071 | Rotor Nut | 3455 | Spool Washer | 4364 | Quick-Fire II Trigger |
| 0540 | Multi-Purpose Screw | 3471 | Anti-Reverse Cam Spring | 4366 | Bail Arm |
| 0642 | Side Cover Screw | 3646 | Main Shaft | 4367 | Line Roller Screw |
| 0779 | Bail Hold Support Screw | 3651 | Bail Spring Guide (A) | 4421 | Handle Screw Cap |
| 0786 | Trigger Screw | 3652 | Bail Spring Guide (B) | 4885 | Drag Knob |
| 0787 | Nut Lock Screw | 3656 | Anti-Reverse Ratchet | 4886 | Spool Assembly (aluminum) |
| 0792 | Bearing Retainer Screw | 3657 | Pinion Gear | 4890 | Anti-Reverse Lever |
| 0930 | Ball Bearing | 3658 | Anti-Reverse Pawl | 4927 | Side Cover |
| 1008 | Handle Lock Washer | 3659 | Anti-Reverse Pawl Spring | 4928 | Body |
| 1427 | Spool Support | 3660 | Anti-Reverse Cam | 5546 | Handle Assembly |
| 1890 | Bushing Washer | 3662 | Drive Gear | 5625 | Line Roller Spacer |
| 1891 | Bail Spring Cover Screw | 3663 | Oscillating Gear | 5628 | Line Roller Collar |
| 2280 | Anti-Reverse Lock Out | 3664 | Oscillating Slider | 5629 | Line Roller Bushing |
| 2283 | Anti-Reverse Pawl Screw | 3665 | Slider Retainer Screw | 5630 | Line Roller |
| 2293 | Drive Gear Bushing | 3700 | Rotor | 6733 | Bail Assembly |
| 2852 | Handle Screw Lock | 3702 | Bail Spring Cover | | |
| 3359 | Line Roller Washer | 3703 | Counterbalance Cover | | |