


TX

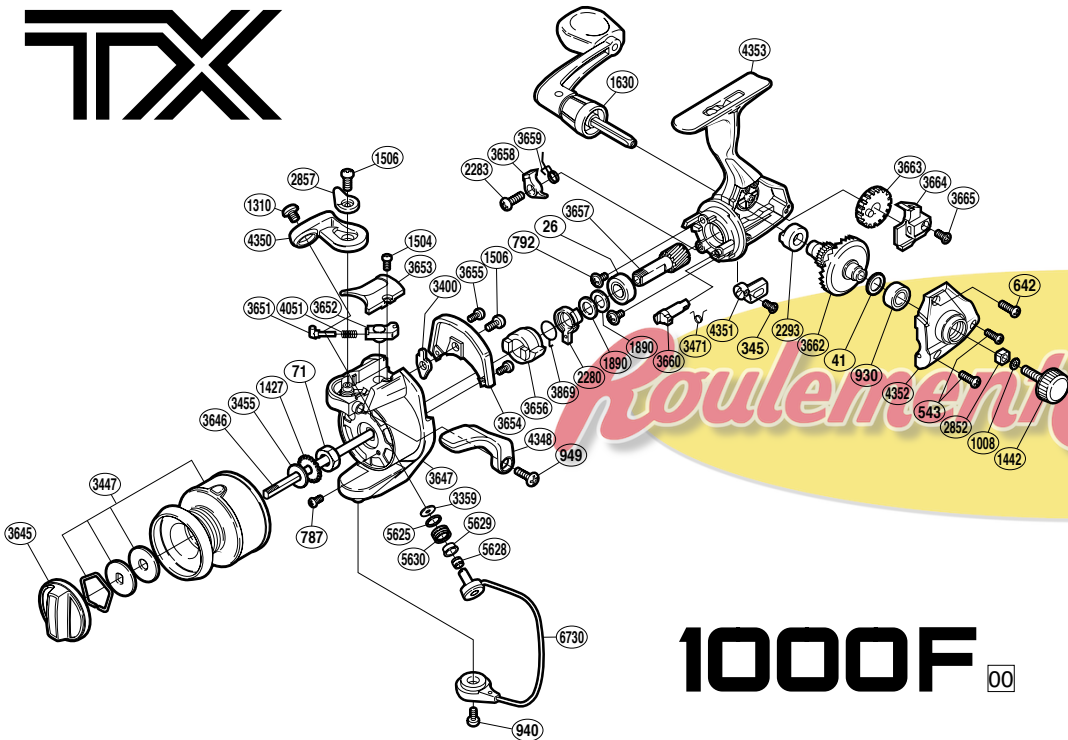

1000F 00

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2283	Anti-Reverse Pawl Screw	3659	Anti-Reverse Pawl Spring
0041	Drive Gear Washer	2293	Drive Gear Bushing	3660	Anti-Reverse Cam
0071	Rotor Nut	2852	Handle Screw Lock	3662	Drive Gear
0345	Anti-Reverse Lever Screw	2857	Trigger Cam	3663	Oscillating Gear
0543	Side Cover Screw (black)	3359	Line Roller Washer	3664	Oscillating Slider
0642	Side Cover Screw (silver)	3400	Bail Trip Lever	3665	Slider Retainer Screw
0787	Nut Lock Screw	3447	Spool Assembly	3869	Anti-Reverse Lock Out Spring
0792	Bearing Retainer Screw	3455	Spool Washer	4051	Bail Spring
0930	Ball Bearing	3471	Anti-Reverse Cam Spring	4348	Quick-Fire II Trigger
0940	Bail Hold Support Screw	3645	Drag Knob	4350	Bail Arm
0949	Trigger Screw	3646	Main Shaft	4351	Anti-Reverse Lever
1008	Handle Lock Washer	3647	Rotor	4352	Side Cover
1310	Line Roller Screw	3651	Bail Spring Guide (A)	4353	Body
1427	Spool Support	3652	Bail Spring Guide (B)	5625	Line Roller Spacer
1442	Handle Screw Cap	3653	Bail Spring Cover	5628	Line Roller Collar
1504	Bail Spring Cover Screw	3654	Counterbalance Cover	5629	Line Roller Bushing
1506	Multi-Purpose Screw	3655	Cover Screw	5630	Line Roller
1630	Handle Assembly	3656	Anti-Reverse Ratchet	6730	Bail Assembly
1890	Bushing Washer	3657	Pinion Gear		
2280	Anti-Reverse Lock Out	3658	Anti-Reverse Pawl		