


SHIMANO®

Catala

CTL-400

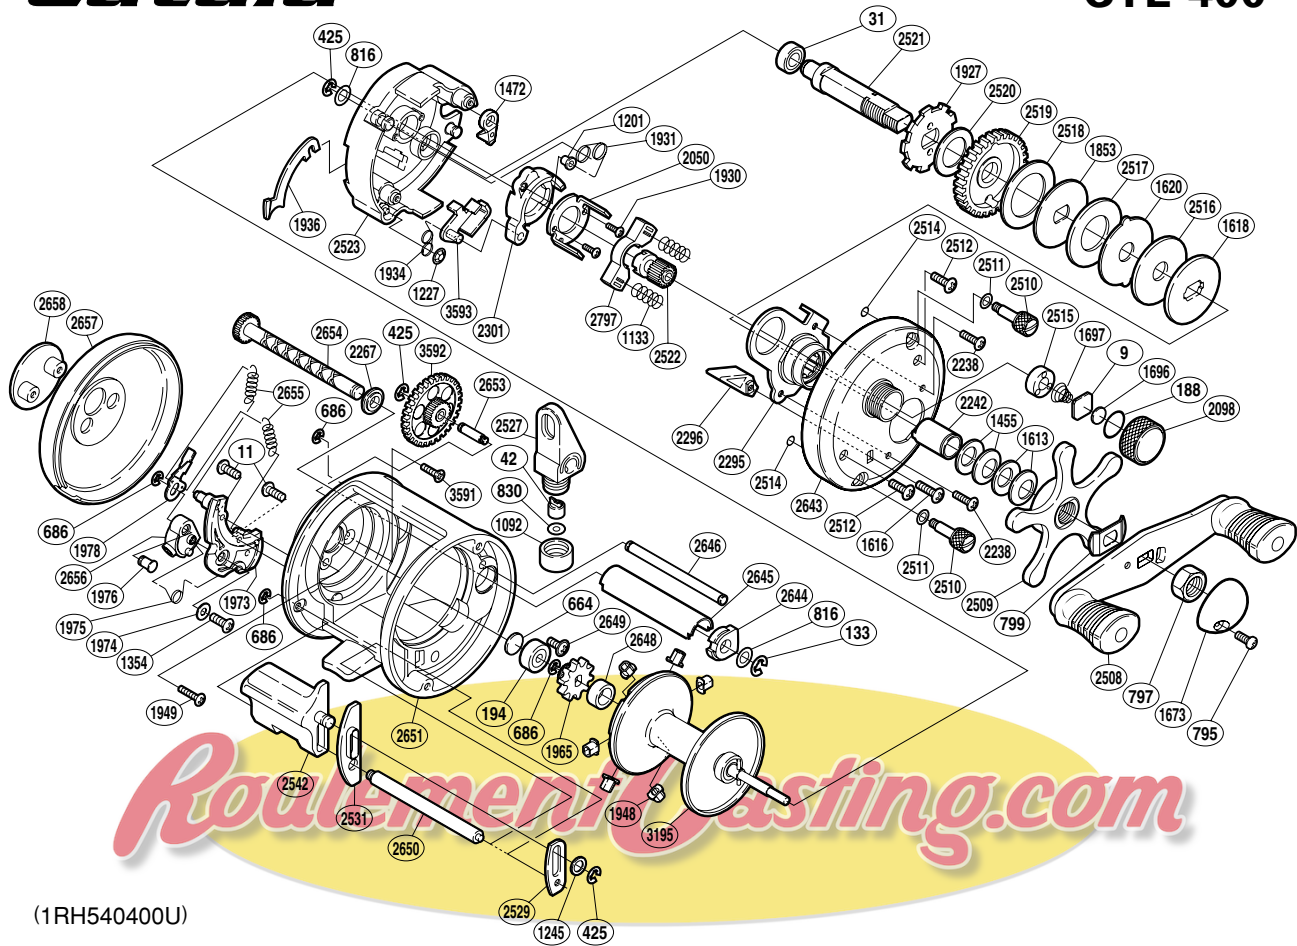

(1RH540400U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0009	Spacer (A)	BNT1853	Key Washer (A)	BNT2517	Drag Washer (CG)
BNT0011	Click Plate Screw	BNT1927	Anti-Reverse Ratchet	BNT2518	Drag Washer (BG)
BNT0031	Ball Bearing	BNT1930	Clutch Cam Screw	BNT2519	Drive Gear
BNT0042	Line Guide Pawl	BNT1931	Retractor Spring	BNT2520	Drive Shaft Washer (B)
BNT0133	Worm Shaft Retainer	BNT1934	Clutch Pawl Spring	BNT2521	Drive Shaft
BNT0188	"O" Ring	BNT1936	Clutch Plate	BNT2522	Pinion Gear
BNT0194	Ball Bearing	BNT1948	Brake Collar	BNT2523	Set Plate
BNT0425	"E" Lock	BNT1949	I.D. Plate Screw	BNT2527	Line Guide
BNT0664	Spacer (B)	BNT1965	Idle Gear (A)	BNT2529	Clutch Button Guide (A)
BNT0686	"E" Lock	BNT1973	Click Plate	BNT2531	Clutch Button Guide (B)
BNT0795	Handle Nut Plate Screw	BNT1974	Click Switch Washer	BNT2542	Quick-Fire II Clutch Bar
BNT0797	Handle Nut	BNT1975	Click Switch Spring	BNT2643	Right Side Plate
BNT0799	Friction Washer	BNT1976	Click Shaft	BNT2644	Worm Bushing (A)
BNT0816	Shaft Washer	BNT1978	Click Pawl	BNT2645	Level Wind Guard
BNT0830	Spacer (optional)	BNT2050	Clutch Cam Retainer	BNT2646	Stabilizer Bar
BNT1092	Pawl Cap	BNT2098	Cast Control Cap	BNT2648	Idle Gear (A) Bush
BNT1133	Yoke Spring	BNT2238	Bush Plate Screw	BNT2649	Bearing Screw
BNT1201	Retractor Spring Collar	BNT2242	Roller Clutch Inner Tube	BNT2650	Clutch Button Support Bar
BNT1227	Push Nut (SPN-2)	BNT2267	Worm Bushing (B)	BNT2651	One-Piece Frame
BNT1245	Clutch Bar Support Spacer	BNT2295	Roller Clutch Assembly	BNT2653	Idle Gear (B) Shaft
BNT1354	Click Switch Screw	BNT2296	Return Pin Guide	BNT2654	Worm Shaft
BNT1455	Drag Spring Washer (H)	BNT2301	Clutch Cam	BNT2655	Click Spring
BNT1472	Anti-Reverse Pawl	BNT2508	Handle Assembly	BNT2656	Click Switch
BNT1613	Drag Spring Washer (L)	BNT2509	Star Drag	BNT2657	Left Side Plate
BNT1616	Return Pin Guide Screw	BNT2510	Right Side Plate Nut	BNT2658	Left Side I.D. Plate
BNT1618	Key Washer (C)	BNT2511	Side Plate Nut Washer	BNT2797	Yoke
BNT1620	Eared Washer	BNT2512	Right Side Plate Screw	BNT3195	Spool Assembly
BNT1673	Handle Nut Plate	BNT2514	"O" Ring	BNT3591	I.D. Plate Screw
BNT1696	Cast Control Spacer (B)	BNT2515	Cast Control Bushing	BNT3592	Idle Gear (B)
BNT1697	Spool Tension Spring	BNT2516	Drag Washer (AG)	BNT3593	Clutch Pawl

(170901)