


SHIMANO®

Catala

CTL-401

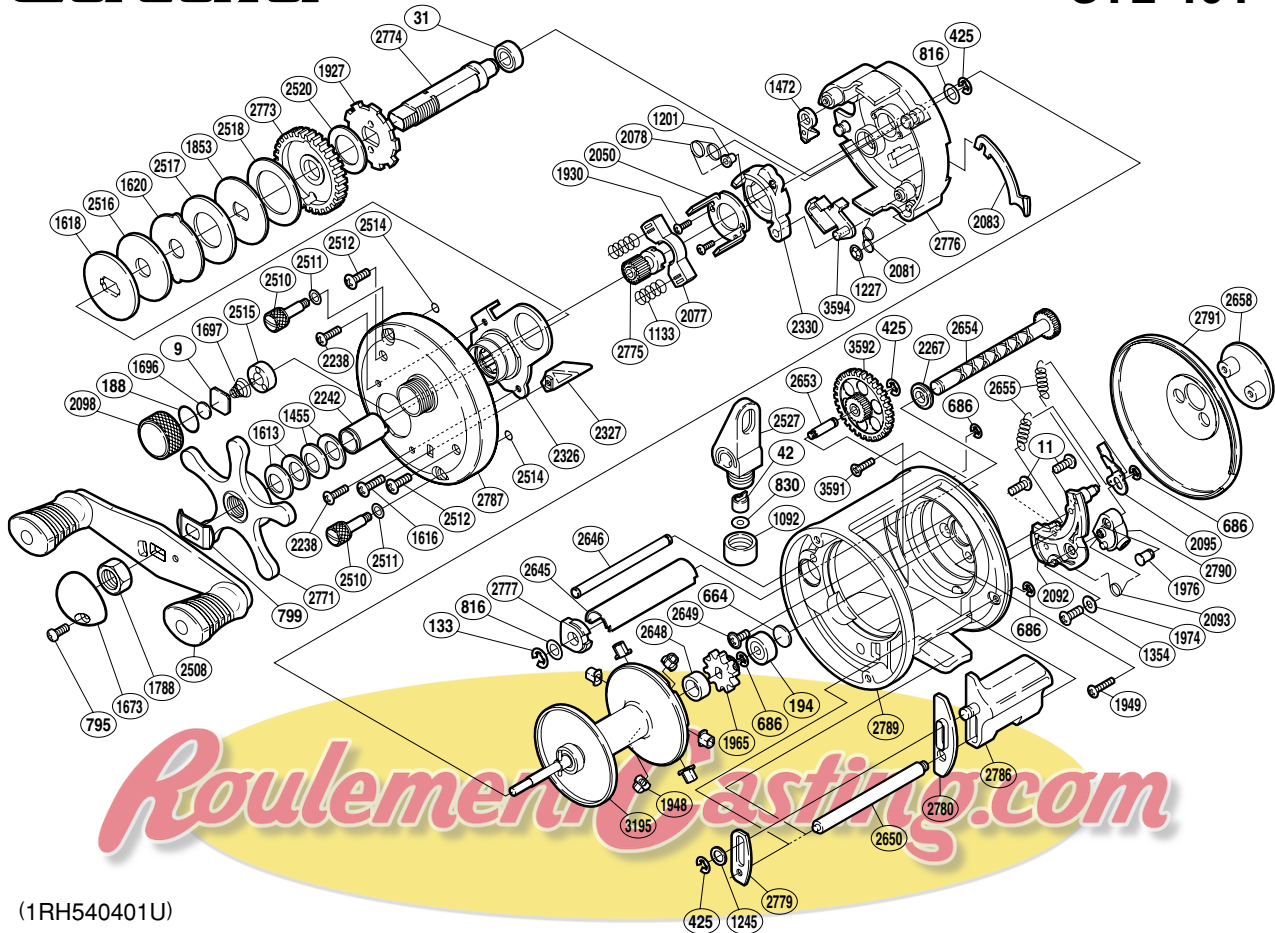

(1RH540401U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0009	Spacer (A)	BNT1853	Key Washer (A)	BNT2517	Drag Washer (CG)
BNT0011	Click Plate Screw	BNT1927	Anti-Reverse Ratchet	BNT2518	Drag Washer (BG)
BNT0031	Ball Bearing	BNT1930	Clutch Cam Screw	BNT2520	Drive Shaft Washer (B)
BNT0042	Line Guide Pawl	BNT1948	Brake Collar	BNT2527	Line Guide
BNT0133	Worm Shaft Retainer	BNT1949	I.D. Plate Screw	BNT2645	Level Wind Guard
BNT0188	"O" Ring	BNT1965	Idle Gear (A)	BNT2646	Stabilizer Bar
BNT0194	Ball Bearing	BNT1974	Click Switch Washer	BNT2648	Idle Gear (A) Bush
BNT0425	"E" Lock	BNT1976	Click Shaft	BNT2649	Bearing Screw
BNT0664	Spacer (B)	BNT2050	Clutch Cam Retainer	BNT2650	Clutch Button Support Bar
BNT0686	"E" Lock	BNT2077	Yoke	BNT2653	Idle Gear (B) Shaft
BNT0795	Handle Nut Plate Screw	BNT2078	Retractor Spring	BNT2654	Worm Shaft
BNT0799	Friction Washer	BNT2081	Clutch Pawl Spring	BNT2655	Click Spring
BNT0816	Shaft Washer	BNT2083	Clutch Plate	BNT2658	Right Side I.D. Plate
BNT0830	Spacer (optional)	BNT2092	Click Plate	BNT2771	Star Drag
BNT1092	Pawl Cap	BNT2093	Click Switch Spring	BNT2773	Drive Gear
BNT1133	Yoke Spring	BNT2095	Click Pawl	BNT2774	Drive Shaft
BNT1201	Retractor Spring Collar	BNT2098	Cast Control Cap	BNT2775	Pinion Gear
BNT1227	Push Nut (SPN-2)	BNT2238	Bush Plate Screw	BNT2776	Set Plate
BNT1245	Clutch Bar Support Spacer	BNT2242	Roller Clutch Inner Tube	BNT2777	Worm Bushing (A)
BNT1354	Click Switch Screw	BNT2267	Worm Bushing (B)	BNT2779	Clutch Button Guide (A)
BNT1455	Drag Spring Washer (H)	BNT2326	Roller Clutch Assembly	BNT2780	Clutch Button Guide (B)
BNT1472	Anti-Reverse Pawl	BNT2327	Return Pin Guide	BNT2786	Quick-Fire II Clutch Bar
BNT1613	Drag Spring Washer (L)	BNT2330	Clutch Cam	BNT2787	Left Side Plate
BNT1616	Return Pin Guide Screw	BNT2508	Handle Assembly	BNT2789	One-Piece Frame
BNT1618	Key Washer (C)	BNT2510	Left Side Plate Nut	BNT2790	Click Switch
BNT1620	Eared Washer	BNT2511	Side Plate Nut Washer	BNT2791	Right Side Plate
BNT1673	Handle Nut Plate	BNT2512	Left Side Plate Screw	BNT3195	Spool Assembly
BNT1696	Cast Control Spacer (B)	BNT2514	"O" Ring	BNT3591	I.D. Plate Screw
BNT1697	Spool Tension Spring	BNT2515	Cast Control Bushing	BNT3592	Idle Gear (B)
BNT1788	Handle Nut	BNT2516	Drag Washer (AG)	BNT3594	Clutch Pawl

(170901)