



# SLADE

## 4000FA 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2541	Anti-Reverse Pawl Screw	3871	Bushing Washer
0041	Drive Gear Washer	2852	Handle Screw Lock	3872	Anti-Reverse Pawl
0071	Rotor Nut	2934	Flange Screw	3873	Anti-Reverse Pawl Spring
0345	Anti-Reverse Lever Screw	3359	Line Roller Washer	3874	Anti-Reverse Cam
0543	Side Cover Screw (small)	3503	Spool Washer	3886	Bail Trip Lever
0787	Nut Lock Screw	3655	Cover Screw	4267	Bail Trip Lever Washer
0792	Bearing Retainer Screw	3665	Slider Retainer Screw	4351	Anti-Reverse Lever
0930	Ball Bearing	3676	Drag Knob	4362	Side Cover Screw (large-silver)
0940	Multi-Purpose Screw	3677	Main Shaft	4572	Bail Arm
1008	Handle Lock Washer	3681	Bail Spring Guide (A)	5625	Line Roller Spacer
1030	Handle Assembly	3682	Bail Spring	5628	Line Roller Collar
1310	Line Roller Screw	3683	Bail Spring Guide (B)	5629	Line Roller Bushing
1442	Handle Screw Cap	3690	Pinion Gear	5630	Line Roller
1506	Multi-Purpose Screw	3694	Drive Gear	6798	Bail Assembly
1511	Lever Spring	3695	Oscillating Gear	6850	Spool Assembly
1520	Anti-Reverse Cam Spring	3696	Oscillating Slider	7062	Bail Spring Cover
1676	Side Cover Screw (large-black)	3868	Lock Out Spring Holder	7063	Rotor
2293	Drive Gear Bushing	3869	Anti-Reverse Lock Out Spring	7064	Counterbalance Cover
2516	Spool Support	3870	Anti-Reverse Lock Out	7065	Body Assembly