



# STRADIC X 3000GTMH 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4838	Drive Gear Bushing	6332	Line Roller Washer
0041	Drive Gear Washer	5222	Idle Gear Lock	6353	Bail Spring Guide (A)
0050	Anti-Reverse Lever Screw	5253	Oscillating Guide	6354	Bail Spring
0071	Rotor Nut	5257	Oscillating Guide Retainer	6355	Bail Spring Guide (B)
0589	Lever Hold Spring	5258	Anti-Reverse Lever	6359	Bail Trip Lever
0806	Bail Hold Support Screw	5261	Slider Retainer Screw	6442	Rotor Protector
0930	Ball Bearing	5262	Oscillating Slider Retainer	6483	Bail Hold Support Spacer
1008	Handle Lock Washer	5263	Oscillating Slider	6515	Bail Spring Cover
1506	Clutch Cover Screw	5264	Eared Washer "B"	6517	Bail Assembly
1520	Anti-Reverse Cam Spring	5266	Drag Washer "H" (cloth)	6597	Side Cover Screw (small)
2094	Spacer	5269	Drag Washer "H" (blue)	6606	Side Cover Screw (medium)
2298	Spacer	5270	Eared Washer "B"	6674	Bail Arm
2346	Drag Washer "C" (cloth)	5275	Hold Click Spring	6739	Protector Screw (large)
2347	Click Gear	5276	Lever Click Gear	6894	Oscillating Slider Bushing
2348	Drag Washer "C" (blue)	5277	Fightin' Pressure Screw Washer	6917	Main Shaft
2409	Worm Shaft Spacer	5278	Fightin' Pressure Screw	6919	Roller Clutch Assembly
2852	Handle Screw Lock	5338	Drag Washer "C" (cloth)	6920	Spacer
3282	Roller Clutch Screw	5339	Drag Shaft (B)	6922	Worm Bushing
3306	Ball Bearing	5340	Key Washer "A"	6924	Anti-Reverse Cam
3309	Line Roller Screw	5341	Drag Coil Spring	6927	Rear Cover Screw (long)
3436	Drag Programmer Screw	5342	Drag Spring Washer	6932	Drag Shaft (A)
3655	Protector Screw (small)	5343	Pressure Screw	6952	Rotor
4254	Rear Cover Screw (short)	5344	Hold Click Spring Washer	6954	Body
4362	Side Cover Screw (long)	5880	Nut Lock Screw	6959	Spool Assembly
4421	Handle Screw Cap	6077	Click Pin	6960	Match Spool Assembly
4470	Double Paddle Handle Assembly	6085	Line Roller	6962	Worm Shaft
4652	Lever Spring Guide (B)	6132	Friction Ring	6963	Idle Gear
4653	Lever Spring	6290	Rotor Nut Lock Plate	6964	Drive Gear
4654	Lever Spring Guide (A)	6296	Click Spring	6965	Side Cover Assembly
4656	Trip Lever Spacer	6307	Bail Hold Support Shaft	6966	Rear Cover
4678	Oscillating Pawl	6329	Bearing Spacer	6967	Fightin' Drag II Lever
4724	Ball Bearing	6330	Line Roller Bushing	6968	Drag Programmer
4749	Bail Arm Screw	6331	Line Roller Spacer	7285	Pinion Gear