



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2283	Anti-Reverse Pawl Screw	3662	Drive Gear
0041	Drive Gear Washer	2293	Drive Gear Bushing	3664	Oscillating Slider
0071	Rotor Nut	2852	Handle Screw Lock	3665	Slider Retainer Screw
0345	Anti-Reverse Lever Screw	2857	Trigger Cam	3670	Rotor
0543	Side Cover Screw	3359	Line Roller Washer	3672	Counterbalance Cover
0787	Nut Lock Screw	3410	Bail Trip Lever	3673	Oscillating Gear
0792	Bearing Retainer Screw	3455	Spool Washer	3869	Anti-Reverse Lock Out Spring
0930	Ball Bearing	3471	Anti-Reverse Cam Spring	4051	Bail Spring
0940	Bail Hold Support Screw	3645	Drag Knob	4348	Quick-Fire II Trigger
0949	Trigger Screw	3646	Main Shaft	4350	Bail Arm
1008	Handle Lock Washer	3651	Bail Spring Guide (A)	4351	Anti-Reverse Lever
1025	Handle Assembly	3652	Bail Spring Guide (B)	5625	Line Roller Spacer
1310	Line Roller Screw	3653	Bail Spring Cover	5628	Line Roller Collar
1427	Spool Support	3655	Cover Screw	5629	Line Roller Bushing
1442	Handle Screw Cap	3656	Anti-Reverse Ratchet	5630	Line Roller
1504	Bail Spring Cover Screw	3657	Pinion Gear	6731	Bail Assembly
1506	Multi-Purpose Screw	3658	Anti-Reverse Pawl	6847	Spool Assembly
1890	Bushing Washer	3659	Anti-Reverse Pawl Spring	7067	Body Assembly
2280	Anti-Reverse Lock Out	3660	Anti-Reverse Cam		