


SHIMANO®

CALAIS A-RB

CL-200A

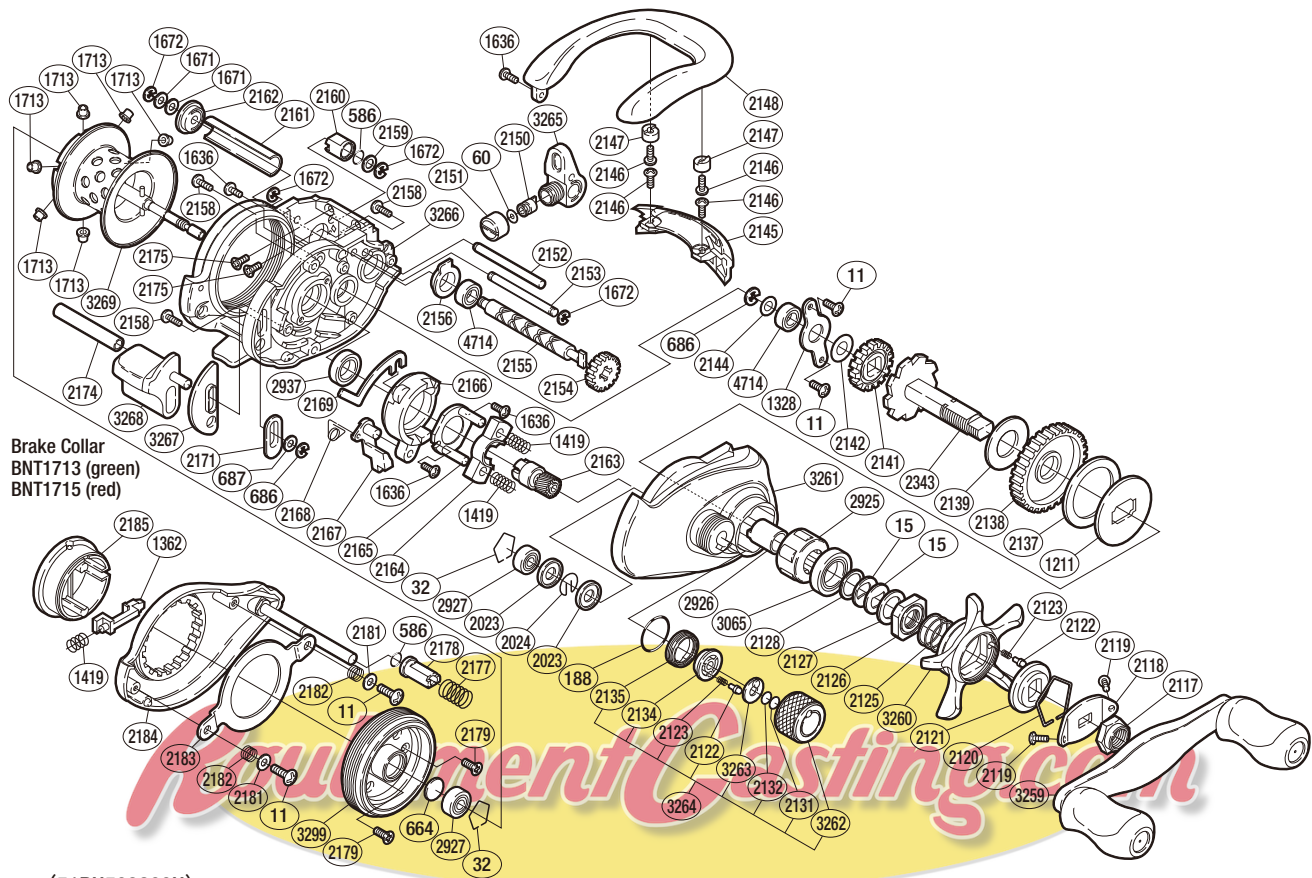

Brake Collar
BNT1713 (green)
BNT1715 (red)

(51RH503200U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2134	Click Pin Holder	BNT2174	Clutch Bar Support
BNT0015	Drag Spring Washer	BNT2135	Cast Control Click Holder	BNT2175	Screw
BNT0032	Bearing Retainer	BNT2137	Drag Washer C	BNT2177	Damper Spring
BNT0060	Spacer	BNT2138	Drive Gear	BNT2178	Damper A
BNT0188	O Ring	BNT2139	Drag Washer A	BNT2179	Screw
BNT0586	O Ring	BNT2141	Idle Gear A	BNT2181	Washer
BNT0664	Spacer B	BNT2142	Idle Gear A Spacer	BNT2182	Brake Case Ring Spring
BNT0686	E Lock	BNT2144	Washer	BNT2183	Brake Case Ring
BNT0687	Spacer	BNT2145	Level Wind Protector	BNT2184	Left Side Plate
BNT1211	Key Washer	BNT2146	Screw	BNT2185	Turnkey Dial
BNT1328	Drive Shaft Retainer	BNT2147	Line Guard Screw Cover	BNT2343	Drive Shaft
BNT1362	Turnkey Pawl	BNT2148	Thumb Rest	BNT2925	Roller Clutch Bearing
BNT1419	Yoke Spring	BNT2150	Line Guide Pawl	BNT2926	Roller Clutch Inner Tube
BNT1636	Screw	BNT2151	Pawl Cap	BNT2927	Ball Bearing
BNT1671	Washer	BNT2152	Level Wind Guide	BNT2937	Ball Bearing
BNT1672	E Lock	BNT2153	Line Guard C	BNT3065	Star Drag Bearing
BNT1713	Brake Collar (green)	BNT2154	Idle Gear C	BNT3259	Handle Assembly
BNT2023	Spool Shaft Clip Holder	BNT2155	Worm Shaft	BNT3260	Star Drag
BNT2024	Spool Shaft Clip	BNT2156	Worm Bushing A	BNT3261	Right Side Plate
BNT2117	Handle Nut	BNT2158	Screw	BNT3262	Cast Control Cap
BNT2118	Handle Nut Plate	BNT2159	Washer	BNT3263	Cast Control Click Plate
BNT2119	Screw	BNT2160	Damper B	BNT3264	Cast Control Cap Assembly
BNT2120	Click Plate Retainer	BNT2161	Level Wind Guard	BNT3265	Line Guide
BNT2121	Star Drag Click Plate	BNT2162	Worm Bushing B	BNT3266	One-Piece Frame
BNT2122	Click Pin	BNT2163	Pinion Gear	BNT3267	Clutch Bar Guide B
BNT2123	Click Spring	BNT2164	Yoke	BNT3268	Quick-Fire II Clutch Bar
BNT2125	Star Drag Spring	BNT2165	Clutch Cam Retainer	BNT3269	Spool Assembly
BNT2126	Star Drag Nut	BNT2166	Clutch Cam	BNT3299	Brake Case
BNT2127	Star Drag Spacer	BNT2167	Clutch Pawl	BNT4714	Ball Bearing
BNT2128	Bearing Washer	BNT2168	Clutch Pawl Spring		
BNT2131	Spool Tension Spacer B	BNT2169	Clutch Plate		
BNT2132	Spool Tension Spacer A	BNT2171	Clutch Bar Guide A	BNT1715	Brake Collar (red)