


# SHIMANO

## CURADO

### CU-201DPV

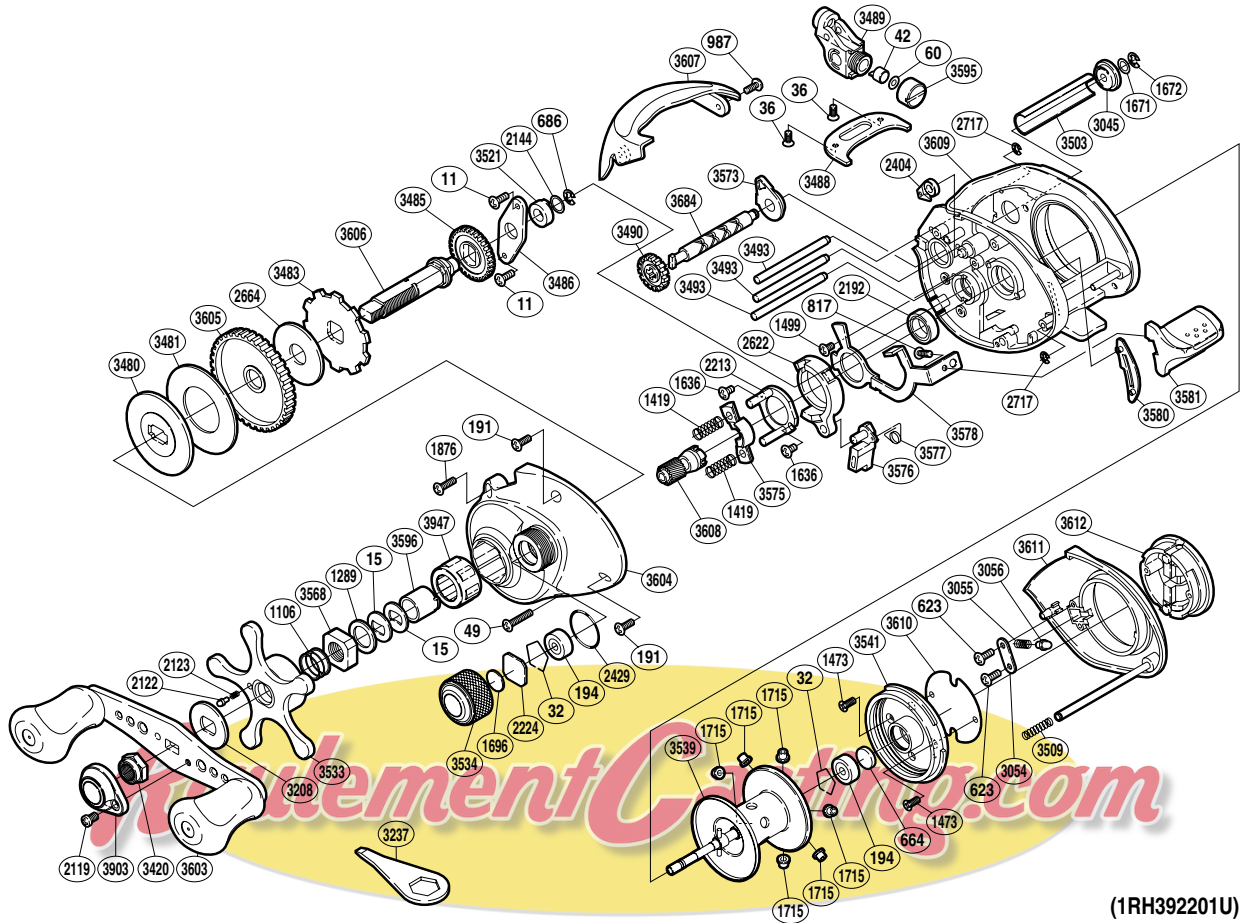

(1RH392201U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2144	Washer	BNT3534	Cast Control Cap
BNT0015	Drag Spring Washer	BNT2192	Ball Bearing	BNT3539	Spool Assembly
BNT0032	Bearing Retainer	BNT2213	Clutch Cam Retainer	BNT3541	Brake Case
BNT0036	Screw	BNT2224	Spool Tension Spacer	BNT3568	Star Drag Nut
BNT0042	Line Guide Pawl	BNT2404	Anti-Reverse Pawl	BNT3573	Worm Bushing A
BNT0049	Screw	BNT2429	O Ring	BNT3575	Yoke
BNT0060	Spacer	BNT2622	Clutch Cam	BNT3576	Clutch Pawl
BNT0191	Screw	BNT2664	Drag Washer	BNT3577	Clutch Pawl Spring
BNT0194	Ball Bearing	BNT2717	E Lock	BNT3578	Clutch Plate
BNT0623	Screw	BNT3045	Worm Bushing B	BNT3580	Clutch Bar Guide
BNT0664	Spacer B	BNT3054	Click Pin Retainer	BNT3581	Quick-Fire II Clutch Bar
BNT0686	E Lock	BNT3055	Click Spring	BNT3595	Pawl Cap
BNT0817	Screw	BNT3056	Click Pin	BNT3596	Roller Clutch Inner Tube
BNT0987	Screw	BNT3208	Star Drag Click Plate	BNT3603	Handle Assembly
BNT1106	Star Drag Spring	BNT3420	Handle Nut	BNT3604	Left Side Plate
BNT1289	Star Drag Spacer	BNT3480	Key Washer	BNT3605	Drive Gear
BNT1419	Yoke Spring	BNT3481	Drag Washer	BNT3606	Drive Shaft
BNT1473	Screw	BNT3483	Anti-Reverse Ratchet	BNT3607	Thumb Rest
BNT1499	Screw	BNT3485	Idle Gear A	BNT3608	Pinion Gear
BNT1636	Screw	BNT3486	Drive Shaft Retainer	BNT3609	One-Piece Frame
BNT1671	Washer	BNT3488	Line Guard	BNT3610	Brake Case Spacer
BNT1672	E Lock	BNT3489	Line Guide	BNT3611	Right Side Plate
BNT1696	Cast Control Spacer	BNT3490	Idle Gear C	BNT3612	Turnkey Dial
BNT1715	Brake Collar (red)	BNT3493	Stabilizer Bar	BNT3684	Worm Shaft
BNT1876	Screw	BNT3503	Level Wind Guard	BNT3903	Handle Retainer
BNT2119	Screw	BNT3509	Side Plate Spring	BNT3947	Roller Clutch Bearing
BNT2122	Click Pin	BNT3521	Drive Shaft Bushing		
BNT2123	Click Spring	BNT3533	Star Drag	BNT3237	Wrench (accessory)