


# SHIMANO

CORE S A-RB

COR-100MG

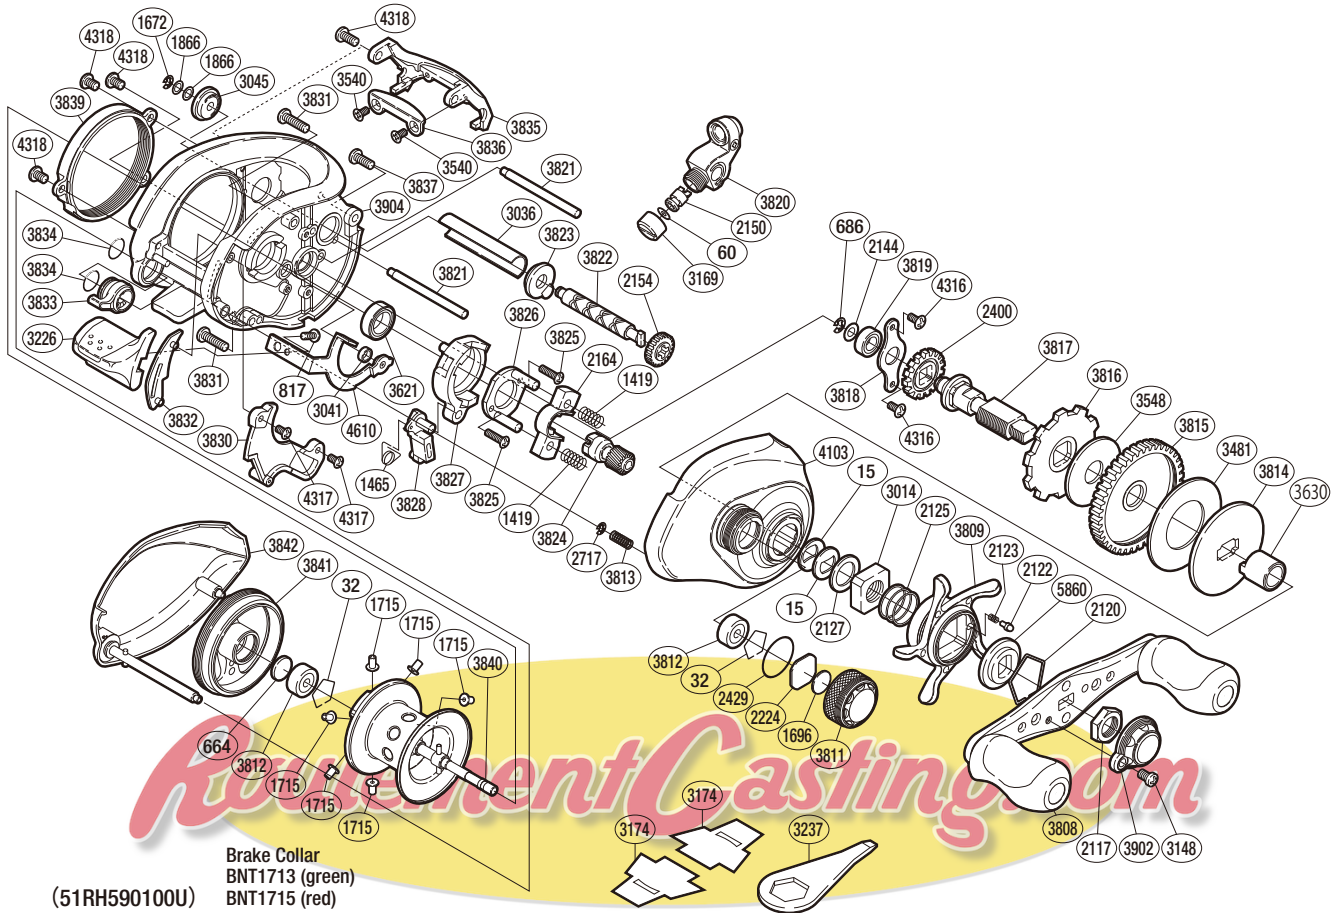

Brake Collar  
BNT1713 (green)  
BNT1715 (red)  
(51RH590100U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT3041	Clutch Plate Shaft Support	BNT3827	Clutch Cam
BNT0032	Bearing Retainer	BNT3045	Worm Bushing B	BNT3828	Clutch Pawl
BNT0060	Spacer	BNT3148	Screw	BNT3830	Clutch Guard
BNT0664	Spacer B	BNT3169	Pawl Cap	BNT3831	Screw
BNT0686	E Lock	BNT3226	Quick-Fire II Clutch Bar	BNT3832	Clutch Bar Guide B
BNT0817	Screw	BNT3481	Drag Washer	BNT3833	Side Plate Cam Lever
BNT1419	Yoke Spring	BNT3540	Screw	BNT3834	O Ring
BNT1465	Clutch Pawl Spring	BNT3548	Drag Washer	BNT3835	Level Wind Protector
BNT1672	E Lock	BNT3621	Ball Bearing	BNT3836	Line Guard Retainer
BNT1696	Cast Control Spacer	BNT3630	Roller Clutch Inner Tube	BNT3837	Screw
BNT1715	Brake Collar (red)	BNT3808	Handle Assembly	BNT3839	Side Frame Plate
BNT1866	Spacer	BNT3809	Star Drag	BNT3840	Spool Assembly
BNT2117	Handle Nut	BNT3811	Cast Control Cap	BNT3841	Brake Case
BNT2120	Click Plate Retainer	BNT3812	Ball Bearing	BNT3842	Left Side Plate
BNT2122	Click Pin	BNT3813	Damper Spring	BNT3902	Handle Retainer
BNT2123	Click Spring	BNT3814	Key Washer	BNT3904	One-Piece Frame
BNT2125	Star Drag Spring	BNT3815	Drive Gear	BNT4103	Right Side Plate
BNT2127	Star Drag Spacer	BNT3816	Anti-Reverse Ratchet	BNT4316	Screw
BNT2144	Washer	BNT3817	Drive Shaft	BNT4317	Screw
BNT2150	Line Guide Pawl	BNT3818	Drive Shaft Retainer	BNT4318	Screw
BNT2154	Idle Gear	BNT3819	Ball Bearing	BNT4610	Clutch Plate
BNT2164	Yoke	BNT3820	Line Guide	BNT5860	Star Drag Click Plate
BNT2224	Spool Tension Spacer	BNT3821	Level Wind Guide		
BNT2400	Idle Gear	BNT3822	Worm Shaft		
BNT2429	O Ring	BNT3823	Worm Bushing A		
BNT2717	E Lock	BNT3824	Pinion Gear	BNT1713	Brake Collar (green) (accessory)
BNT3014	Star Drag Nut	BNT3825	Screw	BNT3174	Reel Seat Spacer (accessory)
BNT3036	Level Wind Guard	BNT3826	Clutch Cam Retainer	BNT3237	Wrench (accessory)