


SHIMANO

CURADO

CU-301DSV

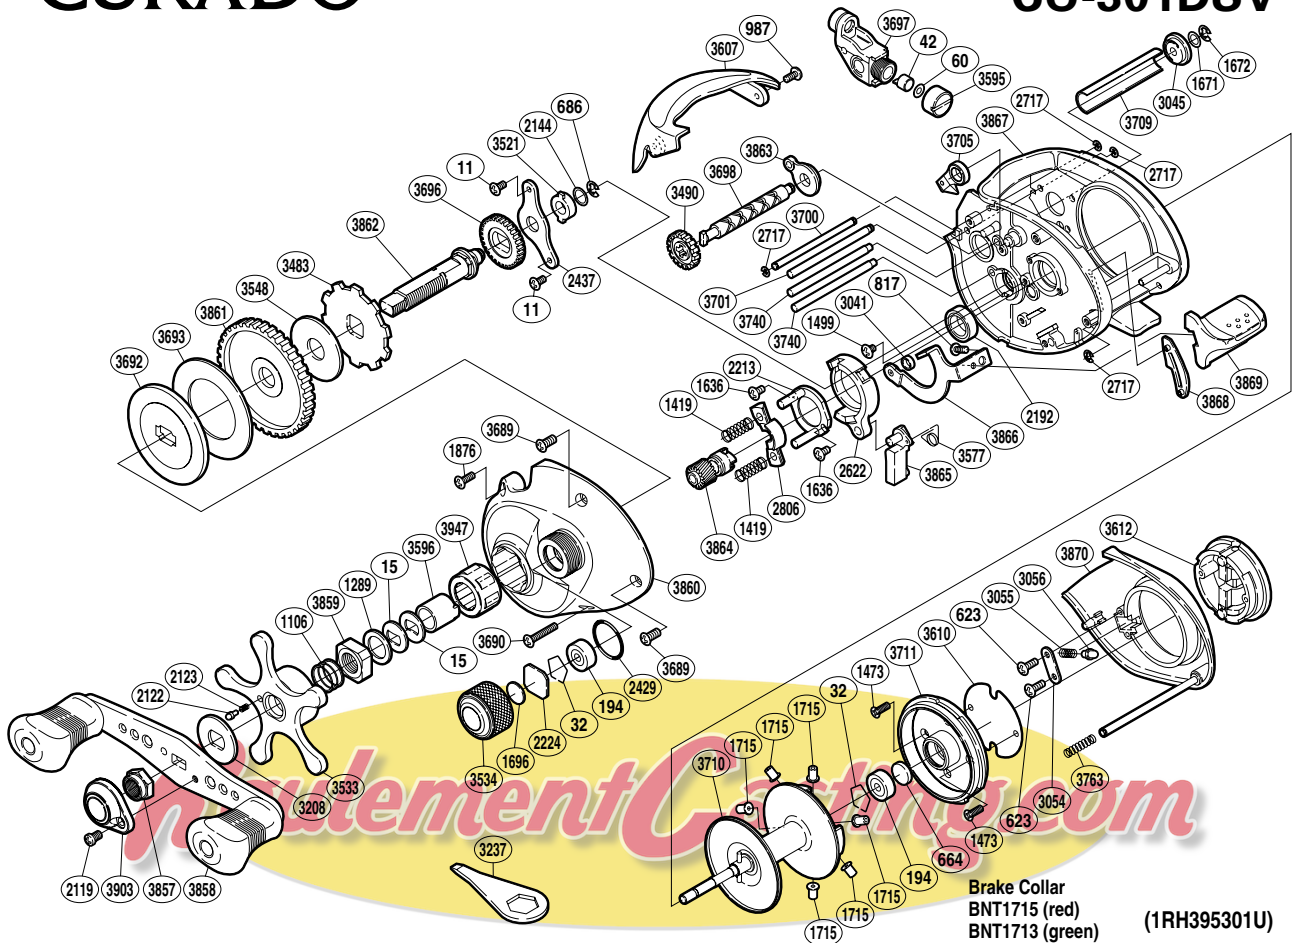

Brake Collar
 BNT1715 (red)
 BNT1713 (green) (1RH395301U)

| Part No. | Description | Part No. | Description | Part No. | Description |
|----------|----------------------|----------|----------------------------|----------|----------------------------------|
| BNT0011 | Screw | BNT2429 | O Ring | BNT3698 | Worm Shaft |
| BNT0015 | Drag Spring Washer | BNT2437 | Drive Shaft Retainer | BNT3700 | Line Guard |
| BNT0032 | Bearing Retainer | BNT2622 | Clutch Cam | BNT3701 | Level Wind Guide |
| BNT0042 | Line Guide Pawl | BNT2717 | E Lock | BNT3705 | Anti-Reverse Pawl |
| BNT0060 | Spacer | BNT2806 | Yoke | BNT3709 | Level Wind Guard |
| BNT0194 | Ball Bearing | BNT3041 | Clutch Plate Shaft Support | BNT3710 | Spool Assembly |
| BNT0623 | Screw | BNT3045 | Worm Bushing B | BNT3711 | Brake Case |
| BNT0664 | Spacer B | BNT3054 | Click Pin Retainer | BNT3740 | Stabilizer Bar |
| BNT0686 | E Lock | BNT3055 | Click Spring | BNT3763 | Side Plate Spring |
| BNT0817 | Screw | BNT3056 | Click Pin | BNT3857 | Handle Nut |
| BNT0987 | Screw | BNT3208 | Star Drag Click Plate | BNT3858 | Handle Assembly |
| BNT1106 | Star Drag Spring | BNT3483 | Anti-Reverse Ratchet | BNT3859 | Star Drag Nut |
| BNT1289 | Star Drag Spacer | BNT3490 | Idle Gear | BNT3860 | Left Side Plate |
| BNT1419 | Yoke Spring | BNT3521 | Drive Shaft Bushing | BNT3861 | Drive Gear |
| BNT1473 | Screw | BNT3533 | Star Drag | BNT3862 | Drive Shaft |
| BNT1499 | Screw | BNT3534 | Cast Control Cap | BNT3863 | Worm Bushing A |
| BNT1636 | Screw | BNT3548 | Drag Washer | BNT3864 | Pinion Gear |
| BNT1671 | Washer | BNT3577 | Clutch Pawl Spring | BNT3865 | Clutch Pawl |
| BNT1672 | E Lock | BNT3595 | Pawl Cap | BNT3866 | Clutch Plate |
| BNT1696 | Cast Control Spacer | BNT3596 | Roller Clutch Inner Tube | BNT3867 | One-Piece Frame |
| BNT1715 | Brake Collar (red) | BNT3607 | Thumb Rest | BNT3868 | Clutch Bar Guide B |
| BNT1876 | Screw | BNT3610 | Brake Case Spacer | BNT3869 | Quick-Fire II Clutch Bar |
| BNT2119 | Screw | BNT3612 | Turnkey Dial | BNT3870 | Right Side Plate |
| BNT2122 | Click Pin | BNT3689 | Screw | BNT3903 | Handle Retainer |
| BNT2123 | Click Spring | BNT3690 | Screw | BNT3947 | Roller Clutch Bearing |
| BNT2144 | Washer | BNT3692 | Key Washer | | |
| BNT2192 | Ball Bearing | BNT3693 | Drag Washer | | |
| BNT2213 | Clutch Cam Retainer | BNT3696 | Idle Gear | BNT1713 | Brake Collar (green) (accessory) |
| BNT2224 | Spool Tension Spacer | BNT3697 | Line Guide | BNT3237 | Wrench (accessory) |