


SHIMANO

CURADO 

CU-200E5

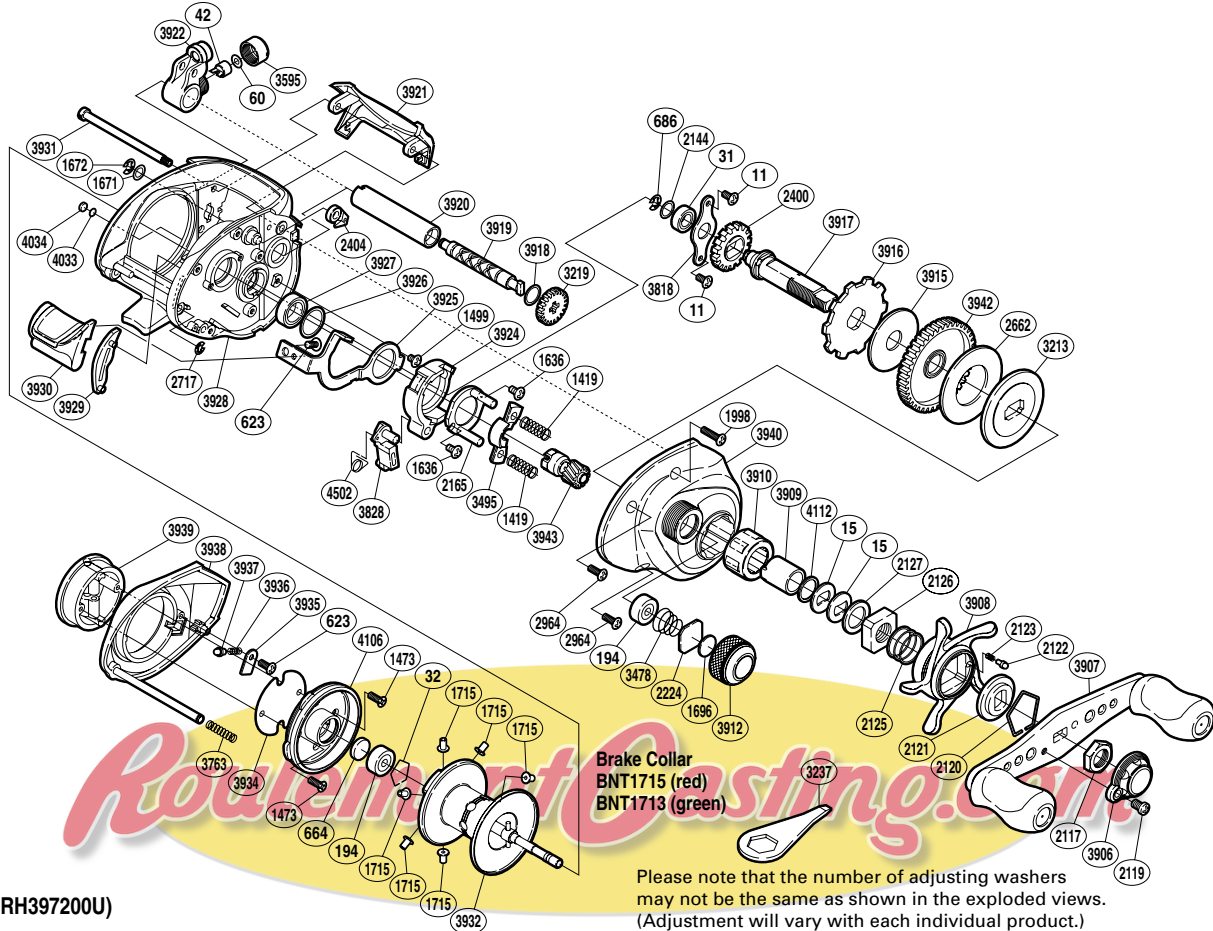

(1RH397200U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2144	Washer	BNT3921	Level Wind Protector
BNT0015	Drag Spring Washer	BNT2165	Clutch Cam Retainer	BNT3922	Line Guide
BNT0031	Ball Bearing	BNT2224	Spool Tension Spacer	BNT3924	Clutch Cam
BNT0032	Bearing Retainer	BNT2400	Idle Gear	BNT3925	Clutch Plate
BNT0042	Line Guide Pawl	BNT2404	Anti-Reverse Pawl	BNT3926	Washer
BNT0060	Spacer	BNT2662	Drag Washer	BNT3927	Ball Bearing
BNT0194	Ball Bearing	BNT2717	E Lock	BNT3928	One-Piece Frame
BNT0623	Screw	BNT2964	Screw	BNT3929	Clutch Bar Guide
BNT0664	Spacer B	BNT3213	Key Washer	BNT3930	Quick-Fire II Clutch Bar
BNT0686	E Lock	BNT3219	Idle Gear	BNT3931	Level Wind Guide
BNT1419	Yoke Spring	BNT3478	Spool Tension Spring	BNT3932	Spool Assembly
BNT1473	Screw	BNT3495	Yoke	BNT3934	Brake Case Spacer
BNT1499	Screw	BNT3595	Pawl Cap	BNT3935	Brake Spring Retainer
BNT1636	Screw	BNT3763	Side Plate Spring	BNT3936	Click Spring
BNT1671	Washer	BNT3818	Drive Shaft Retainer	BNT3937	Click Pin
BNT1672	E Lock	BNT3828	Clutch Pawl	BNT3938	Left Side Plate
BNT1696	Cast Control Spacer	BNT3906	Handle Retainer	BNT3939	Turnkey Dial
BNT1715	Brake Collar (red)	BNT3907	Handle Assembly	BNT3940	Right Side Plate
BNT1998	Screw	BNT3908	Star Drag	BNT3942	Drive Gear
BNT2117	Handle Nut	BNT3909	Roller Clutch Inner Tube	BNT3943	Pinion Gear
BNT2119	Screw	BNT3910	Roller Clutch Bearing	BNT4033	Washer
BNT2120	Click Plate Retainer	BNT3912	Cast Control Cap	BNT4034	Anti-Thrust Washer
BNT2121	Star Drag Click	BNT3915	Drag Washer	BNT4106	Brake Case
BNT2122	Click Pin	BNT3916	Anti-Reverse Ratchet	BNT4112	Washer
BNT2123	Click Spring	BNT3917	Drive Shaft	BNT4502	Clutch Pawl Spring
BNT2125	Star Drag Spring	BNT3918	Washer		
BNT2126	Star Drag Nut	BNT3919	Worm Shaft	BNT1713	Brake Collar (green) (accessory)
BNT2127	Star Drag Spacer	BNT3920	Level Wind Guard	BNT3237	Wrench (accessory)

(231028)