


SHIMANO

CURADO



CU-300E

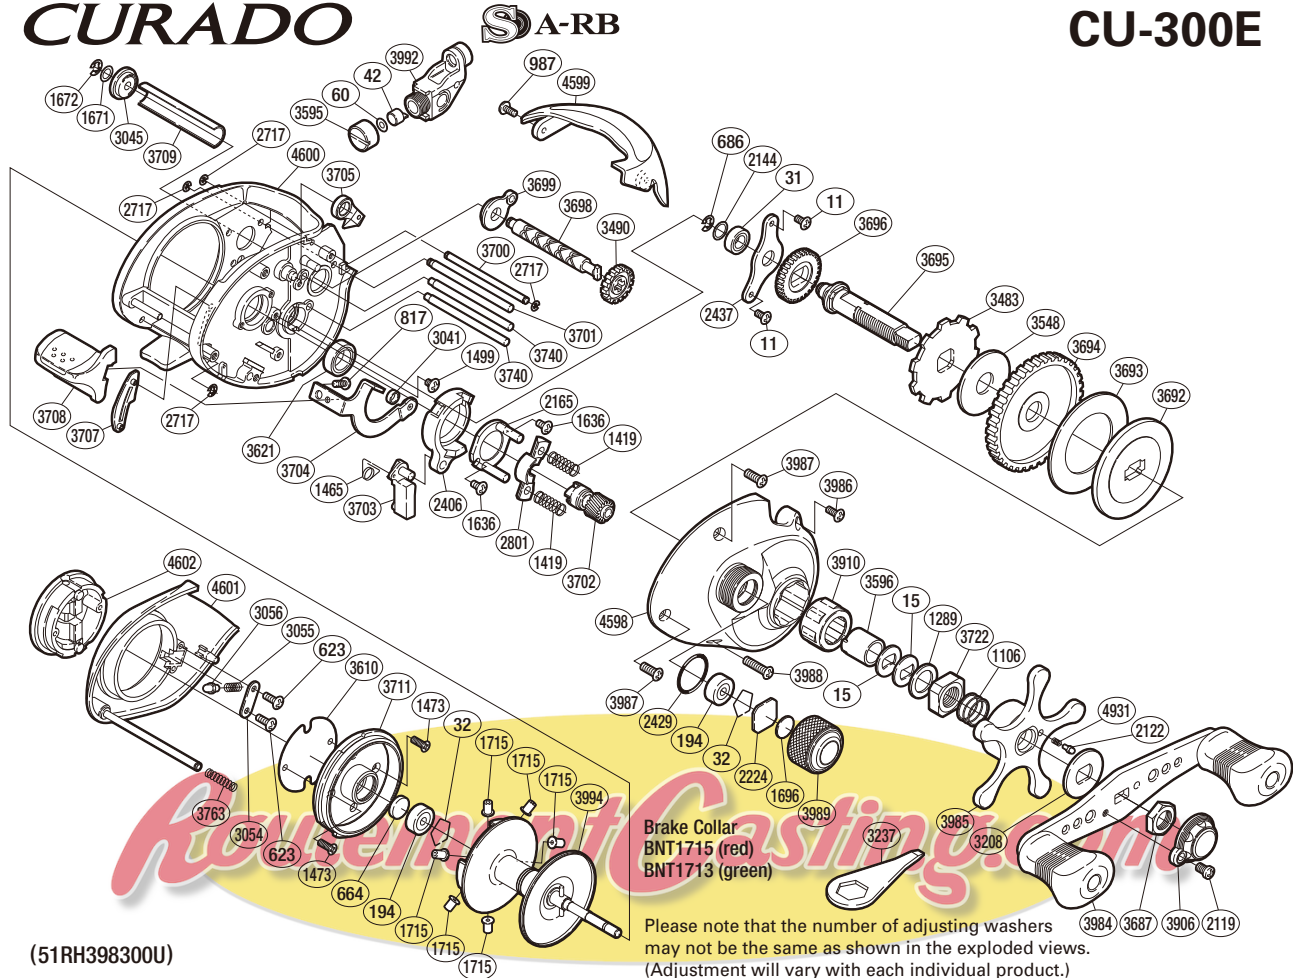

(51RH398300U)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

| Part No. | Description | Part No. | Description | Part No. | Description |
|----------|----------------------|----------|----------------------------|----------|----------------------------------|
| BNT0011 | Screw | BNT2429 | O Ring | BNT3704 | Clutch Plate |
| BNT0015 | Drag Spring Washer | BNT2437 | Drive Shaft Retainer | BNT3705 | Anti-Reverse Pawl |
| BNT0031 | Ball Bearing | BNT2717 | E Lock | BNT3707 | Clutch Bar Guide B |
| BNT0032 | Bearing Retainer | BNT2801 | Yoke | BNT3708 | Quick-Fire II Clutch Bar |
| BNT0042 | Line Guide Pawl | BNT3041 | Clutch Plate Shaft Support | BNT3709 | Level Wind Guard |
| BNT0060 | Spacer | BNT3045 | Worm Bushing B | BNT3711 | Brake Case |
| BNT0194 | Ball Bearing | BNT3054 | Click Pin Retainer | BNT3722 | Star Drag Nut |
| BNT0623 | Screw | BNT3055 | Click Spring | BNT3740 | Stabilizer Bar |
| BNT0664 | Spacer B | BNT3056 | Click Pin | BNT3763 | Side Plate Spring |
| BNT0686 | E Lock | BNT3208 | Star Drag Click Plate | BNT3906 | Handle Retainer |
| BNT0817 | Screw | BNT3483 | Anti-Reverse Ratchet | BNT3910 | Roller Clutch Bearing |
| BNT0987 | Screw | BNT3490 | Idle Gear | BNT3984 | Handle Assembly |
| BNT1106 | Star Drag Spring | BNT3548 | Drag Washer | BNT3985 | Star Drag |
| BNT1289 | Star Drag Spacer | BNT3595 | Pawl Cap | BNT3986 | Screw |
| BNT1419 | Yoke Spring | BNT3596 | Roller Clutch Inner Tube | BNT3987 | Screw |
| BNT1465 | Clutch Pawl Spring | BNT3610 | Brake Case Spacer | BNT3988 | Screw |
| BNT1473 | Screw | BNT3621 | Ball Bearing | BNT3989 | Cast Control Cap |
| BNT1499 | Screw | BNT3687 | Handle Nut | BNT3992 | Line Guide |
| BNT1636 | Screw | BNT3692 | Key Washer | BNT3994 | Spool Assembly |
| BNT1671 | Washer | BNT3693 | Drag Washer | BNT4598 | Right Side Plate |
| BNT1672 | E Lock | BNT3694 | Drive Gear | BNT4599 | Thumb Rest |
| BNT1696 | Cast Control Spacer | BNT3695 | Drive Shaft | BNT4600 | One-Piece Frame |
| BNT1715 | Brake Collar (red) | BNT3696 | Idle Gear | BNT4601 | Left Side Plate |
| BNT2119 | Screw | BNT3698 | Worm Shaft | BNT4602 | Turnkey Dial |
| BNT2122 | Click Pin | BNT3699 | Worm Bushing A | BNT4931 | Click Spring |
| BNT2144 | Washer | BNT3700 | Line Guard | | |
| BNT2165 | Clutch Cam Retainer | BNT3701 | Level Wind Guide | | |
| BNT2224 | Spool Tension Spacer | BNT3702 | Pinion Gear | BNT1713 | Brake Collar (green) (accessory) |
| BNT2406 | Clutch Cam | BNT3703 | Clutch Pawl | BNT3237 | Wrench (accessory) |