


# SHIMANO

## CURADO S A-RB

## CU-301E

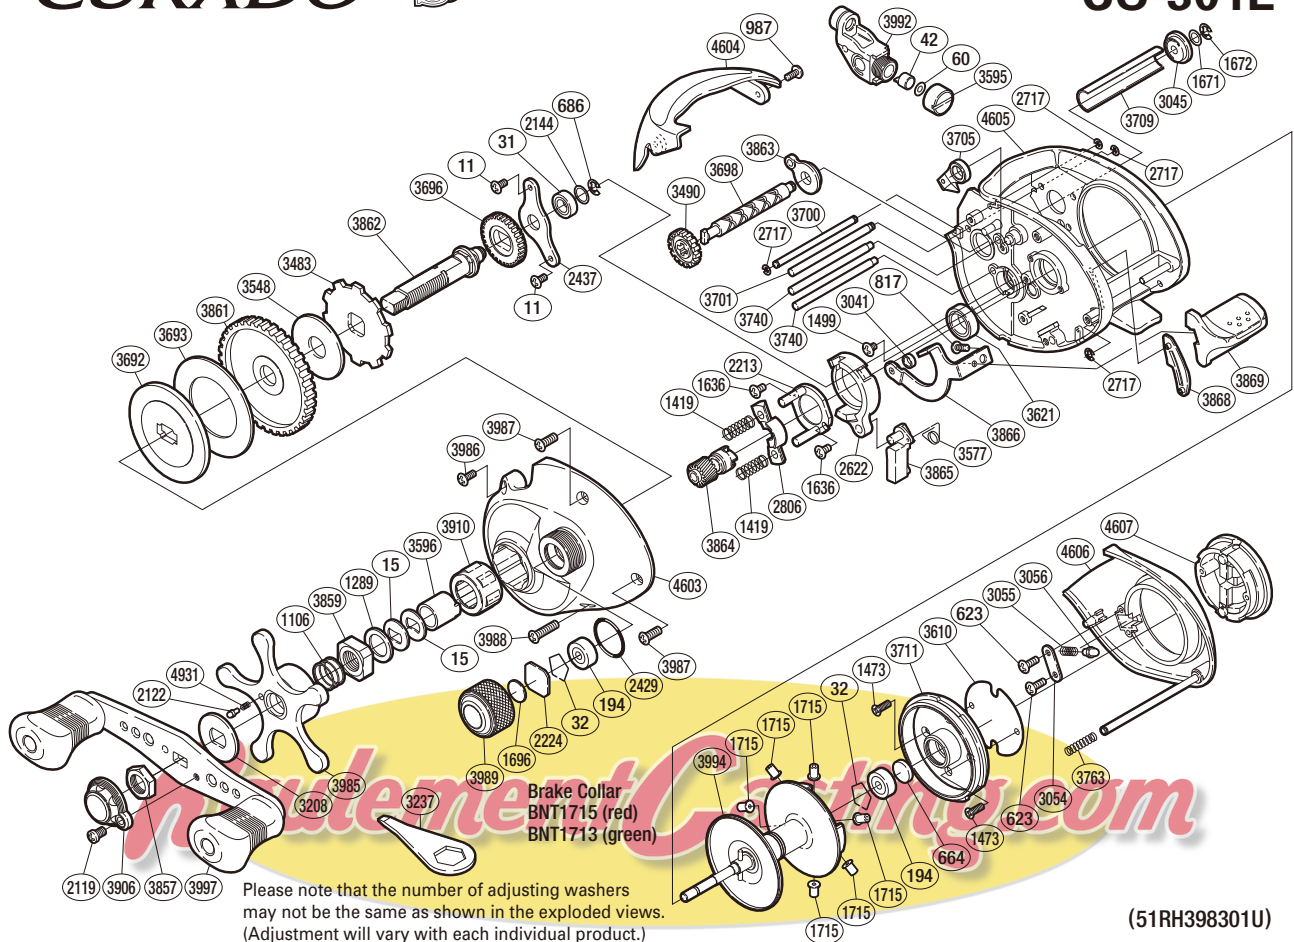

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2622	Clutch Cam	BNT3859	Star Drag Nut
BNT0015	Drag Spring Washer	BNT2717	E Lock	BNT3861	Drive Gear
BNT0031	Ball Bearing	BNT2806	Yoke	BNT3862	Drive Shaft
BNT0032	Bearing Retainer	BNT3041	Clutch Plate Shaft Support	BNT3863	Worm Bushing A
BNT0042	Line Guide Pawl	BNT3045	Worm Bushing B	BNT3864	Pinion Gear
BNT0060	Spacer	BNT3054	Click Pin Retainer	BNT3865	Clutch Pawl
BNT0194	Ball Bearing	BNT3055	Click Spring	BNT3866	Clutch Plate
BNT0623	Screw	BNT3056	Click Pin	BNT3868	Clutch Bar Guide B
BNT0664	Spacer B	BNT3208	Star Drag Click Plate	BNT3869	Quick-Fire II Clutch Bar
BNT0686	E Lock	BNT3483	Anti-Reverse Ratchet	BNT3906	Handle Retainer
BNT0817	Screw	BNT3490	Idle Gear	BNT3910	Roller Clutch Bearing
BNT0987	Screw	BNT3548	Drag Washer	BNT3985	Star Drag
BNT1106	Star Drag Spring	BNT3577	Clutch Pawl Spring	BNT3986	Screw
BNT1289	Star Drag Spacer	BNT3595	Pawl Cap	BNT3987	Screw
BNT1419	Yoke Spring	BNT3596	Roller Clutch Inner Tube	BNT3988	Screw
BNT1473	Screw	BNT3610	Brake Case Spacer	BNT3989	Cast Control Cap
BNT1499	Screw	BNT3621	Ball Bearing	BNT3992	Line Guide
BNT1636	Screw	BNT3692	Key Washer	BNT3994	Spool Assembly
BNT1671	Washer	BNT3693	Drag Washer	BNT3997	Handle Assembly
BNT1672	E Lock	BNT3696	Idle Gear	BNT4603	Left Side Plate
BNT1696	Cast Control Spacer	BNT3698	Worm Shaft	BNT4604	Thumb Rest
BNT1715	Brake Collar (red)	BNT3700	Line Guard	BNT4605	One-Piece Frame
BNT2119	Screw	BNT3701	Level Wind Guide	BNT4606	Right Side Plate
BNT2122	Click Pin	BNT3705	Anti-Reverse Pawl	BNT4607	Turnkey Dial
BNT2144	Washer	BNT3709	Level Wind Guard	BNT4931	Click Spring
BNT2213	Clutch Cam Retainer	BNT3711	Brake Case		
BNT2224	Spool Tension Spacer	BNT3740	Stabilizer Bar		
BNT2429	O Ring	BNT3763	Side Plate Spring	BNT1713	Brake Collar (green) (accessory)
BNT2437	Drive Shaft Retainer	BNT3857	Handle Nut	BNT3237	Wrench (accessory)