


# SHIMANO

## CAENAN

### CAE-101

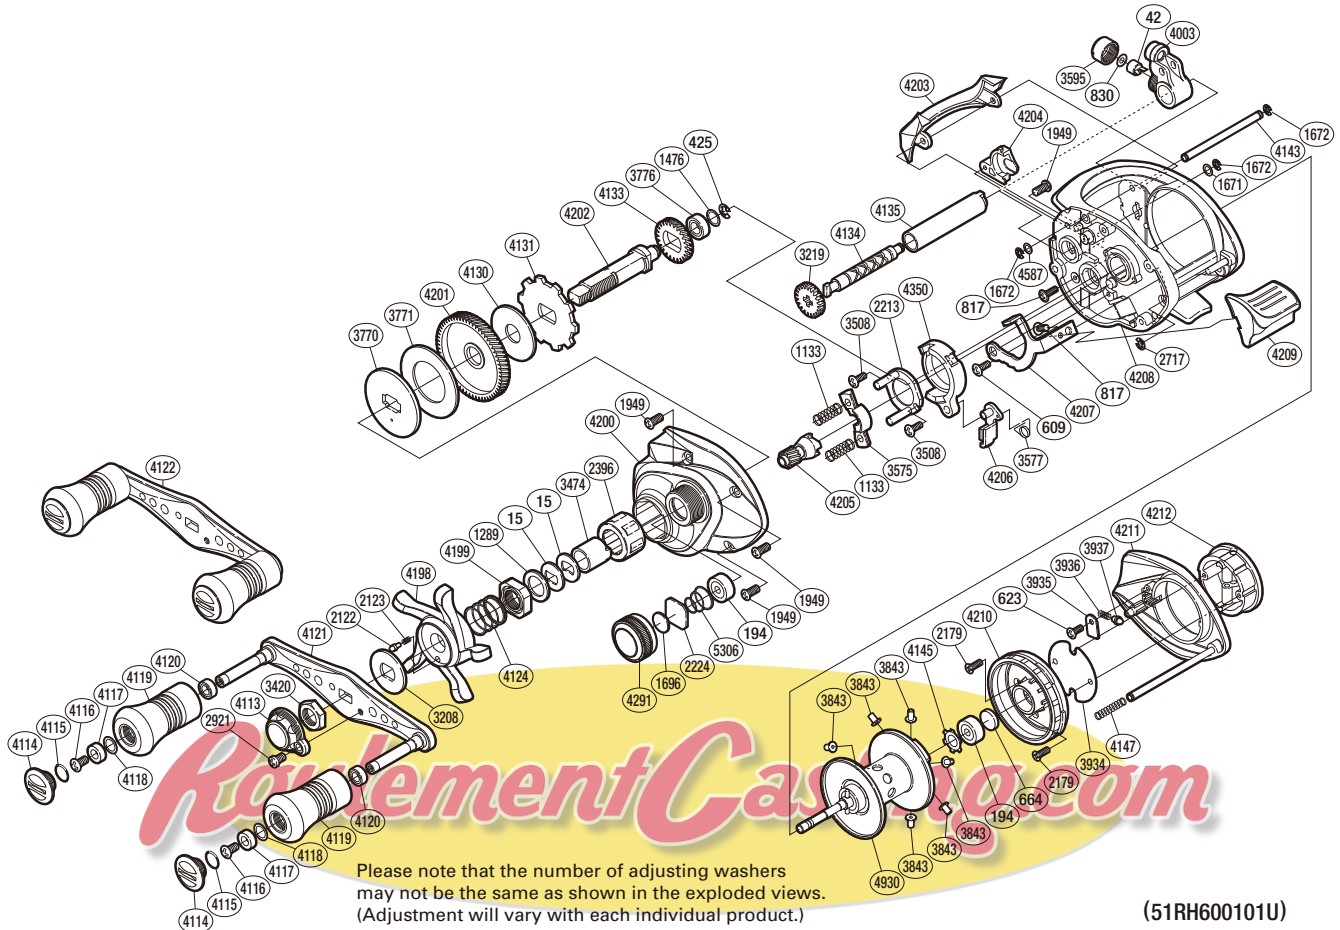

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT3474	Roller Clutch Inner Tube	BNT4133	Idle Gear
BNT0042	Line Guide Pawl	BNT3508	Screw	BNT4134	Worm Shaft
BNT0194	Ball Bearing	BNT3575	Yoke	BNT4135	Level Wind Guard
BNT0425	E Lock	BNT3577	Clutch Pawl Spring	BNT4143	Stabilizer Bar
BNT0609	Screw	BNT3595	Pawl Cap	BNT4145	CR Lock
BNT0623	Screw	BNT3770	Key Washer	BNT4147	Damper Spring
BNT0664	Spacer B	BNT3771	Drag Washer	BNT4198	Star Drag
BNT0817	Screw	BNT3776	Ball Bearing	BNT4199	Star Drag Nut
BNT0830	Spacer	BNT3843	Brake Collar (orange)	BNT4200	Left Side Plate
BNT1133	Yoke Spring	BNT3934	Brake Case Spacer	BNT4201	Drive Gear
BNT1289	Star Drag Spacer	BNT3935	Brake Spring Retainer	BNT4202	Drive Shaft
BNT1476	Washer	BNT3936	Click Spring	BNT4203	Level Wind Protector
BNT1671	Washer	BNT3937	Click Pin	BNT4204	Drive Shaft Cover
BNT1672	E Lock	BNT4003	Line Guide	BNT4205	Pinion Gear
BNT1696	Cast Control Spacer	BNT4113	Handle Retainer	BNT4206	Clutch Pawl
BNT1949	Screw	BNT4114	Handle Knob Seal	BNT4207	Clutch Plate
BNT2122	Click Pin	BNT4115	O Ring	BNT4208	One-Piece Frame
BNT2123	Click Spring	BNT4116	Screw	BNT4209	Quick-Fire II Clutch Bar
BNT2179	Screw	BNT4117	Handle Knob Bushing	BNT4210	Brake Case
BNT2213	Clutch Cam Retainer	BNT4118	Washer	BNT4211	Right Side Plate
BNT2224	Spool Tension Spacer	BNT4119	Handle Knob	BNT4212	Turnkey Dial
BNT2396	Roller Clutch Bearing	BNT4120	Ball Bearing	BNT4291	Cast Control Cap
BNT2717	E Lock	BNT4121	Handle Shank Assembly	BNT4350	Clutch Cam
BNT2921	Screw	BNT4122	Handle Assembly	BNT4587	Washer
BNT3208	Star Drag Click Plate	BNT4124	Star Drag Spring	BNT4930	Spool Assembly
BNT3219	Idle Gear	BNT4130	Drag Washer	BNT5306	Spool Tension Spring
BNT3420	Handle Nut	BNT4131	Anti-Reverse Ratchet		