


SHIMANO

Metanium SA-RB

META-XGL

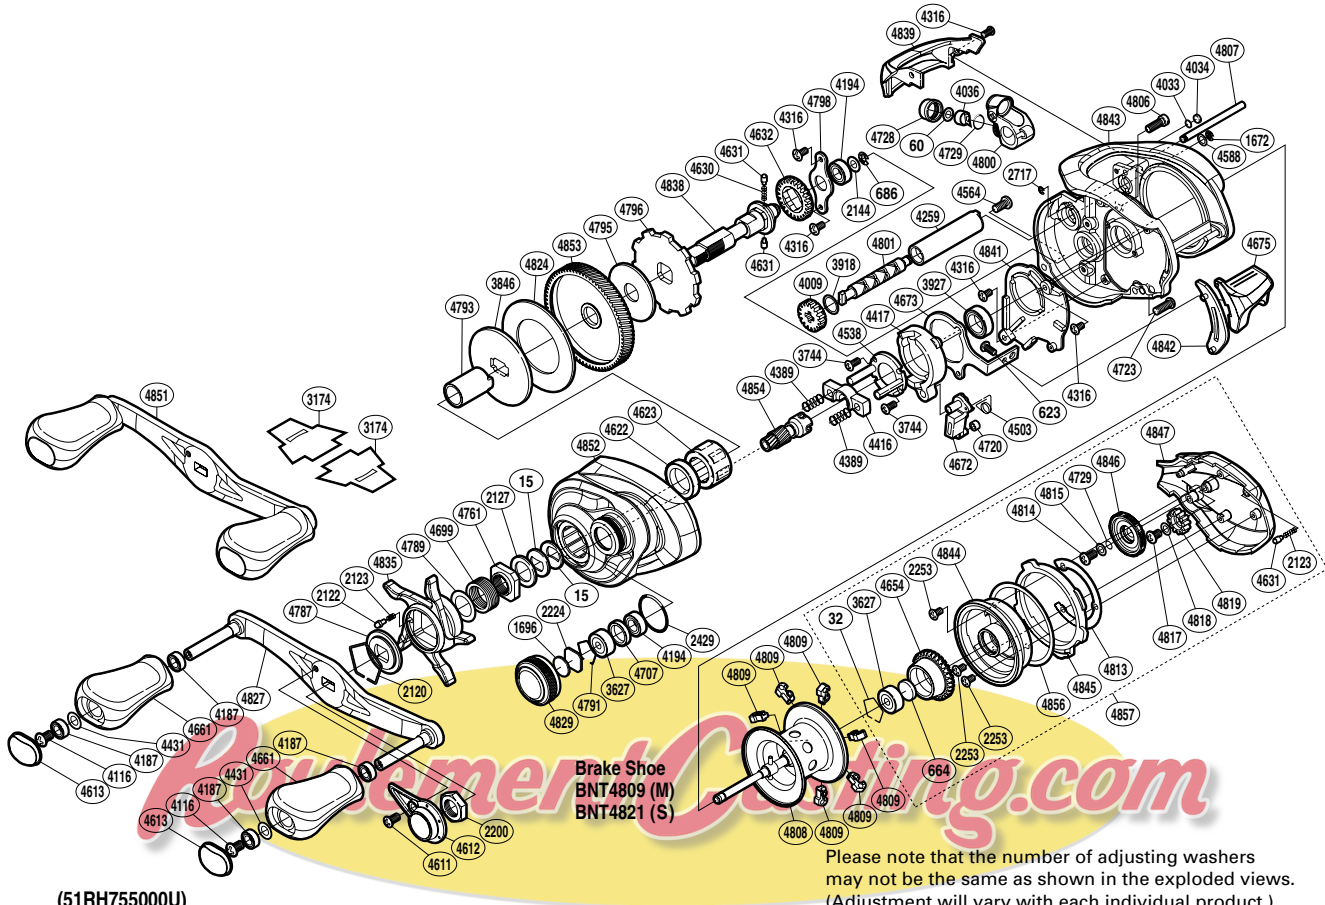

(51RH755000U)

Brake Shoe
BNT4809 (M)
BNT4821 (S)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4417	Clutch Cam	BNT4801	Worm Shaft
BNT0032	Bearing Retainer	BNT4431	Washer	BNT4806	Screw
BNT0060	Spacer	BNT4503	Clutch Pawl Spring	BNT4807	Level Wind Guide
BNT0623	Screw	BNT4538	Clutch Cam Retainer	BNT4808	Spool Assembly
BNT0664	Spacer B	BNT4564	Screw	BNT4809	Brake Shoe M
BNT0686	E Lock	BNT4588	Washer	BNT4813	Brake Case Washer
BNT1672	E Lock	BNT4611	Screw	BNT4814	Screw
BNT1696	Cast Control Spacer	BNT4612	Handle Retainer	BNT4815	Washer
BNT2120	Click Plate Retainer	BNT4613	Handle Knob Seal	BNT4817	Screw
BNT2122	Click Pin	BNT4622	Drive Shaft Holder Bushing	BNT4818	Washer
BNT2123	Click Spring	BNT4623	Roller Clutch Bearing	BNT4819	Idle Gear
BNT2127	Star Drag Spacer	BNT4630	Idle Gear Spring	BNT4824	Drag Washer
BNT2144	Washer	BNT4631	Idle Gear Pin	BNT4827	Handle Shank Assembly
BNT2200	Handle Nut	BNT4632	Idle Gear	BNT4829	Cast Control Cap
BNT2224	Spool Tension Spacer	BNT4654	Brake Pipe Gear	BNT4835	Star Drag
BNT2253	Screw	BNT4661	Handle Knob	BNT4838	Drive Shaft
BNT2429	O Ring	BNT4672	Clutch Pawl	BNT4839	Level Wind Protector
BNT2717	E Lock	BNT4673	Clutch Plate	BNT4841	Clutch Guard
BNT3627	Ball Bearing	BNT4675	Quick-Fire II Clutch Bar	BNT4842	Clutch Bar Guide
BNT3744	Screw	BNT4699	Star Drag Spring	BNT4843	One-Piece Frame
BNT3846	Key Washer	BNT4707	Bearing Spacer	BNT4844	Brake Case
BNT3918	Washer	BNT4720	Clutch Pawl Bushing	BNT4845	Side Plate Cam Lever
BNT3927	Ball Bearing	BNT4723	Screw	BNT4846	BR Dial
BNT4009	Idle Gear	BNT4728	Pawl Cap	BNT4847	Right Side Plate
BNT4033	Washer	BNT4729	O Ring	BNT4851	Handle Assembly
BNT4034	Anti-Thrust Washer	BNT4761	Star Drag Nut	BNT4852	Left Side Plate
BNT4036	Line Guide Pawl	BNT4787	Star Drag Click Plate	BNT4853	Drive Gear
BNT4116	Screw	BNT4789	Washer	BNT4854	Pinion Gear
BNT4187	Ball Bearing	BNT4791	Bearing Retainer	BNT4856	Washer
BNT4194	Ball Bearing	BNT4793	Roller Clutch Inner Tube	BNT4857	Right Side Plate Assembly
BNT4259	Level Wind Guard	BNT4795	Drag Washer		
BNT4316	Screw	BNT4796	Anti-Reverse Ratchet	BNT3174	Reel Seat Spacer (accessory)
BNT4389	Yoke Spring	BNT4798	Drive Shaft Retainer	BNT4692	B-100 Oil (accessory)
BNT4416	Yoke	BNT4800	Line Guide	BNT4821	Brake Shoe S (accessory)