


# SHIMANO

CHRONARCH

A-RB

CH G-151HG

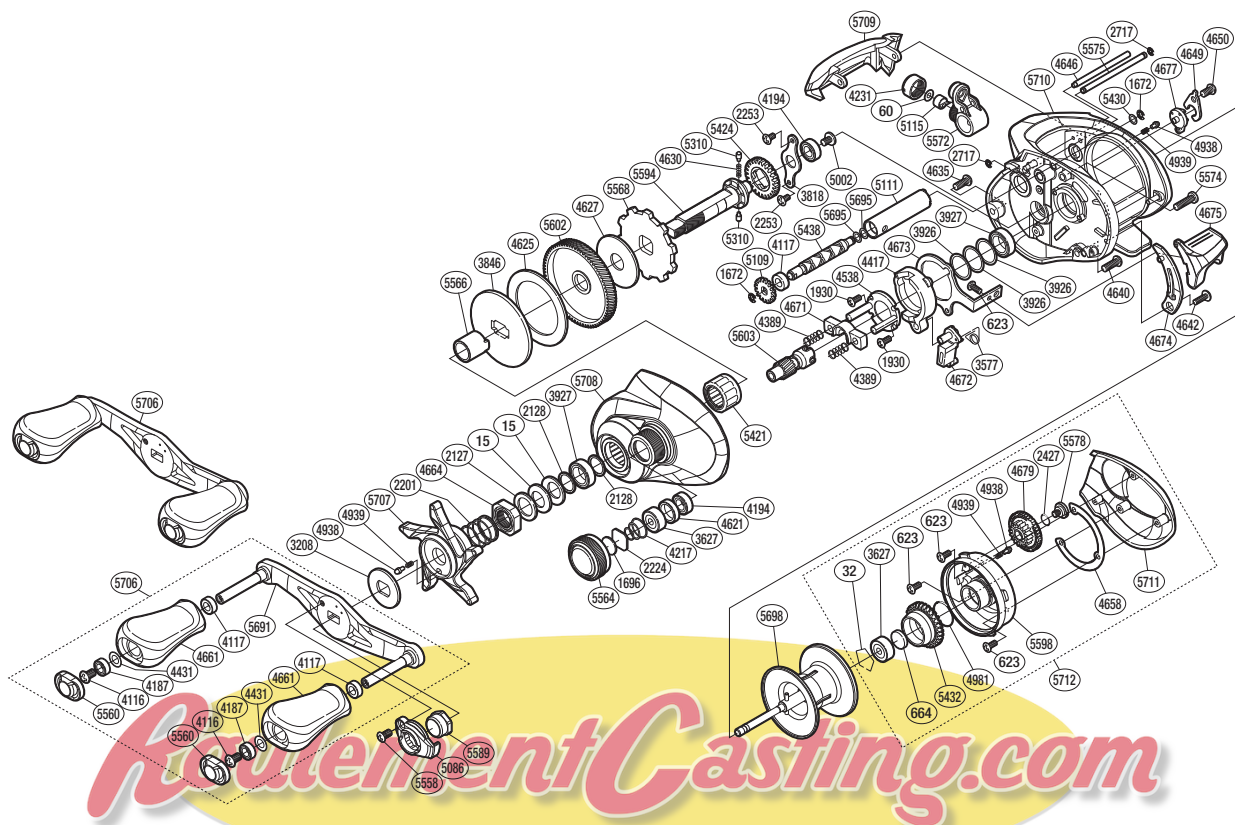

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

(51RH29F151X)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4538	Clutch Cam Retainer	BNT5424	Idle Gear
BNT0032	Bearing Retainer	BNT4621	Bearing Spacer	BNT5430	Washer
BNT0060	Spacer	BNT4625	Drag Washer	BNT5432	Brake Pipe Gear Assembly
BNT0623	Screw	BNT4627	Drag Washer	BNT5438	Worm Shaft
BNT0664	Spacer B	BNT4630	Idle Gear Spring	BNT5558	Screw
BNT1672	E Lock	BNT4635	Screw	BNT5560	Handle Knob Seal
BNT1696	Cast Control Spacer	BNT4640	Screw	BNT5564	Cast Control Cap
BNT1930	Screw	BNT4642	Screw	BNT5566	Roller Clutch Inner Tube
BNT2127	Star Drag Spacer	BNT4646	Stabilizer Bar	BNT5568	Anti-Reverse Ratchet
BNT2128	Bearing Washer	BNT4649	Cam Lever Retainer	BNT5572	Line Guide Assembly
BNT2201	Star Drag Spring	BNT4650	Screw	BNT5574	Screw
BNT2224	Spool Tension Spacer	BNT4658	Washer	BNT5575	Line Guard
BNT2253	Screw	BNT4661	Handle Knob	BNT5578	Screw
BNT2427	O Ring	BNT4664	Star Drag Nut	BNT5589	Handle Nut
BNT2717	E Lock	BNT4671	Yoke	BNT5594	Drive Shaft
BNT3208	Star Drag Click Plate	BNT4672	Clutch Pawl	BNT5598	Brake Case Assembly
BNT3577	Clutch Pawl Spring	BNT4673	Clutch Plate	BNT5602	Drive Gear
BNT3627	Ball Bearing	BNT4674	Clutch Bar Guide	BNT5603	Pinion Gear
BNT3818	Drive Shaft Retainer	BNT4675	Quick-Fire II Clutch Bar Assembly	BNT5691	Handle Shank Assembly
BNT3846	Key Washer	BNT4677	Side Plate Cam Lever	BNT5695	Washer
BNT3926	Washer	BNT4679	Br Dial	BNT5698	Spool Assembly
BNT3927	Ball Bearing	BNT4938	Click Pin	BNT5706	Handle Assembly
BNT4116	Screw	BNT4939	Click Spring	BNT5707	Star Drag
BNT4117	Bushing	BNT4981	O Ring	BNT5708	Left Side Plate Assembly
BNT4187	Ball Bearing	BNT5002	Screw	BNT5709	Level Wind Protector
BNT4194	Ball Bearing	BNT5086	Handle Retainer	BNT5710	Frame Assembly
BNT4217	Spool Tension Spring	BNT5109	Idle Gear	BNT5711	Right Side Plate
BNT4231	Pawl Cap	BNT5111	Level Wind Guard	BNT5712	Right Side Plate Assembly
BNT4389	Yoke Spring	BNT5115	Line Guide Pawl		
BNT4417	Clutch Cam	BNT5310	Idle Gear Pin		
BNT4431	Washer	BNT5421	Roller Clutch Bearing	BNT4692	B-100 Oil (accessory)