


# DX

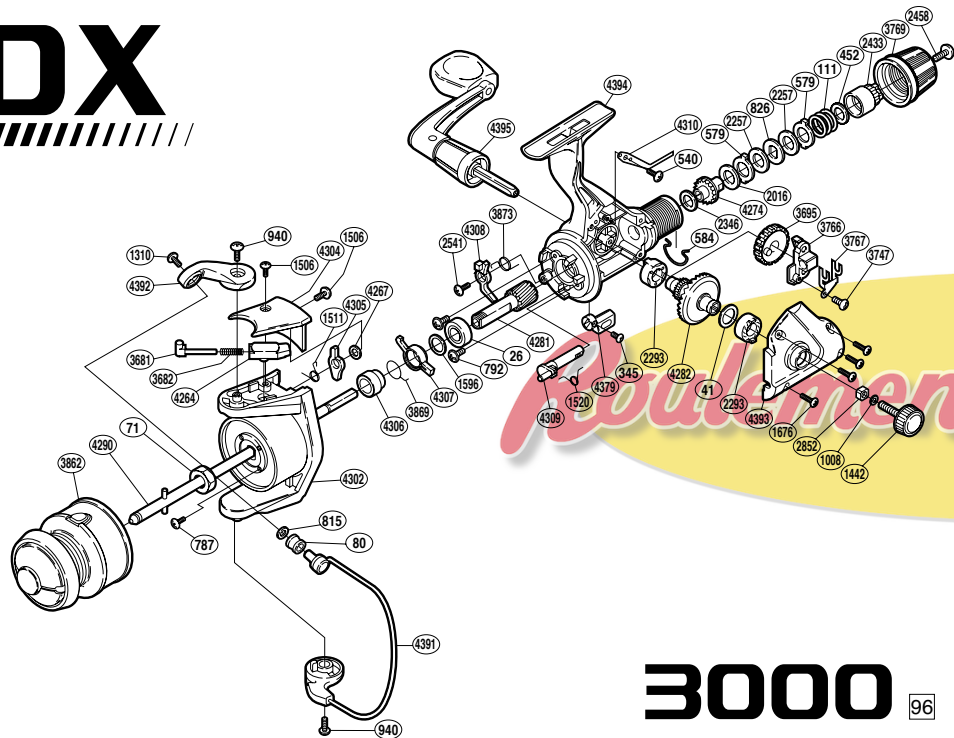

# 3000

96

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	1596	Bushing Washer	4267	Bail Trip Lever Washer
0041	Drive Gear Washer	1676	Side Cover Screw	4274	Drag Shaft
0071	Rotor Nut	2016	Drag Washer "H" (cloth)	4281	Pinion Gear
0080	Line Roller	2257	Drag Washer "H" (blue)	4282	Drive Gear
0111	Drag Coil Spring	2293	Drive Gear Bushing	4290	Main Shaft Assembly
0345	Anti-Reverse Lever Screw	2346	Drag Washer "C" (cloth)	4302	Rotor
0452	Drag Spring Washer	2433	Pressure Screw	4304	Bail Spring Cover
0540	Drag Click Screw	2458	Drag Knob Screw	4305	Bail Trip Lever
0579	Eared Washer "B"	2541	Anti-Reverse Pawl Screw	4306	Lock Out Spring Holder
0584	Hold Click Spring	2852	Handle Screw Lock	4307	Anti-Reverse Lock Out
0787	Nut Lock Screw	3681	Bail Spring Guide (A)	4308	Anti-Reverse Pawl
0792	Bearing Retainer Screw	3682	Bail Spring	4309	Anti-Reverse Cam
0815	Line Roller Washer	3695	Oscillating Gear	4310	Drag Click
0826	Key Washer "A"	3747	Slider Retainer Screw	4379	Anti-Reverse Lever
0940	Multi-Purpose Screw	3766	Oscillating Slider	4391	Bail Assembly
1008	Handle Lock Washer	3767	Oscillating Slider Retainer	4392	Bail Arm
1310	Line Roller Screw	3769	Drag Knob	4393	Side Cover
1442	Handle Screw Cap	3862	Spool Assembly (S-3)	4394	Body
1506	Bail Spring Cover Screw	3869	Anti-Reverse Lock Out Spring	4395	Handle Assembly
1511	Lever Spring	3873	Anti-Reverse Pawl Spring		
1520	Anti-Reverse Cam Spring	4264	Bail Spring Guide (B)		

(070602)