



1000 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2852	Handle Screw Lock	3854	Anti-Reverse Lock Out Spring
0041	Drive Gear Washer	3359	Line Roller Washer	3855	Lock Out Spring Holder
0071	Rotor Nut	3397	Bail Spring	3856	Anti-Reverse Pawl
0345	Anti-Reverse Lever Screw	3455	Spool Washer	3857	Anti-Reverse Pawl Spring
0543	Side Cover Screw	3471	Anti-Reverse Cam Spring	3858	Anti-Reverse Cam
0787	Nut Lock Screw	3645	Drag Knob	4163	Line Roller Bushing
0792	Bearing Retainer Screw	3646	Main Shaft	4229	Rotor
0940	Multi-Purpose Screw	3655	Cover Screw	4230	Bail Spring Cover
1008	Handle Lock Washer	3657	Pinion Gear	4231	Counterbalance Cover
1310	Line Roller Screw	3662	Drive Gear	4351	Anti-Reverse Lever
1427	Spool Support	3663	Oscillating Gear	4553	Line Roller
1442	Handle Screw Cap	3664	Oscillating Slider	4567	Bail Assembly
1504	Bail Spring Cover Screw	3665	Slider Retainer Screw	4568	Bail Arm
1506	Bail Trip Lever Screw	3848	Bail Spring Guide (A)	5117	Spool Assembly
1630	Handle Assembly	3849	Bail Spring Guide (B)	5118	Side Cover
2283	Anti-Reverse Pawl Screw	3851	Bail Trip Lever	5119	Body
2293	Drive Gear Bushing	3853	Anti-Reverse Lock Out		