



6000 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0244	Ball Bearing	2571	Bail Arm Screw	3999	Bearing Retainer Screw
0345	Anti-Reverse Lever Screw	2722	Counterbalance Cover Screw	4000	Anti-Reverse Pawl
0521	Rotor Nut	3182	Spool Support	4001	Anti-Reverse Pawl Spring
0690	Drive Gear Washer	3195	Bushing	4002	Anti-Reverse Cam
0787	Nut Lock Screw	3202	Anti-Reverse Lever	4004	Drive Gear Bushing
0940	Bail Hold Support Screw	3307	Line Roller Bushing	4005	Drive Gear
1008	Handle Lock Washer	3359	Line Roller Washer	4006	Oscillating Gear Bushing
1109	Slider Retainer Screw	3387	Handle Screw Lock	4007	Oscillating Gear
1310	Line Roller Screw	3949	Pinion Gear	4008	Oscillating Slider
1511	Lever Spring	3987	Drag Knob	4498	Line Roller Collar (A)
1520	Anti-Reverse Cam Spring	3989	Main Shaft	4499	Line Roller Collar (B)
1863	Handle Screw Cap	3990	Spool Washer	4580	Bail Assembly
2342	Side Cover Screw (large)	3991	Rotor	4581	Bail Arm
2530	Bail Spring Cover Screw	3993	Bail Spring Cover	4582	Side Cover Flange
2532	Bail Spring Guide (A)	3994	Bail Trip Lever	4585	Handle Assembly
2533	Bail Spring	3995	Counterbalance Cover	5126	Spool Assembly
2534	Bail Spring Guide (B)	3996	Anti-Reverse Lock Out	5127	Side Cover
2541	Anti-Reverse Pawl Screw	3997	Anti-Reverse Lock Out Spring	5128	Body
2548	Side Cover Screw (small)	3998	Lock Out Spring Holder	5370	Line Roller

(080925)