




EX

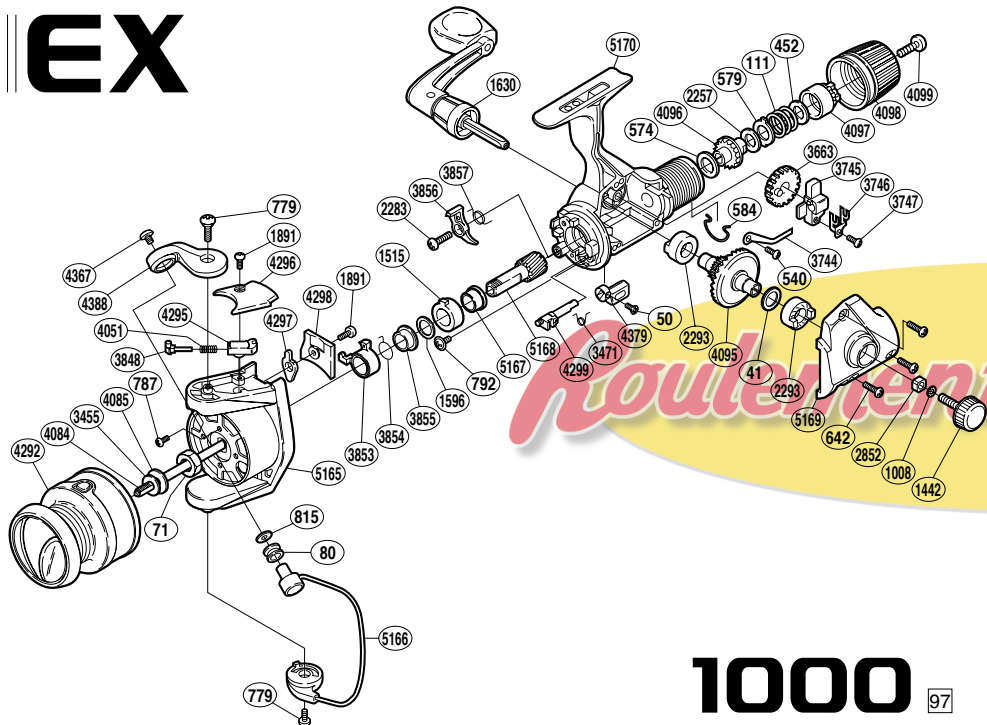

1000

97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	2257	Drag Washer "H" (blue)	4096	Drag Shaft
0050	Anti-Reverse Lever Screw	2283	Anti-Reverse Pawl Screw	4097	Pressure Screw
0071	Rotor Nut	2293	Drive Gear Bushing	4098	Drag Knob
0080	Line Roller	2852	Handle Screw Lock	4099	Drag Knob Screw
0111	Drag Coil Spring	3455	Spool Washer	4292	Spool Assembly
0452	Drag Spring Washer	3471	Anti-Reverse Cam Spring	4295	Bail Spring Guide (B)
0540	Drag Click Screw	3663	Oscillating Gear	4296	Bail Spring Cover
0574	Drag Washer "C" (cloth)	3744	Drag Click	4297	Bail Trip Lever
0579	Eared Washer "B"	3745	Oscillating Slider	4298	Counterbalance Cover
0584	Hold Click Spring	3746	Oscillating Slider Retainer	4299	Anti-Reverse Cam
0642	Side Cover Screw	3747	Slider Retainer Screw	4367	Line Roller Screw
0779	Multi-Purpose Screw	3848	Bail Spring Guide (A)	4379	Anti-Reverse Lever
0787	Nut Lock Screw	3853	Anti-Reverse Lock Out	4388	Bail Arm
0792	Bushing Retainer Screw	3854	Anti-Reverse Lock Out Spring	5165	Rotor
0815	Line Roller Washer	3855	Lock Out Spring Holder	5166	Bail Assembly
1008	Handle Lock Washer	3856	Anti-Reverse Pawl	5167	Bushing Spacer
1442	Handle Screw Cap	3857	Anti-Reverse Pawl Spring	5168	Pinion Gear
1515	Bushing	4051	Bail Spring	5169	Side Cover
1596	Bushing Washer	4084	Main Shaft	5170	Body
1630	Handle Assembly	4085	Spool Support		
1891	Multi-Purpose Screw	4095	Drive Gear		

(080715)