


EX

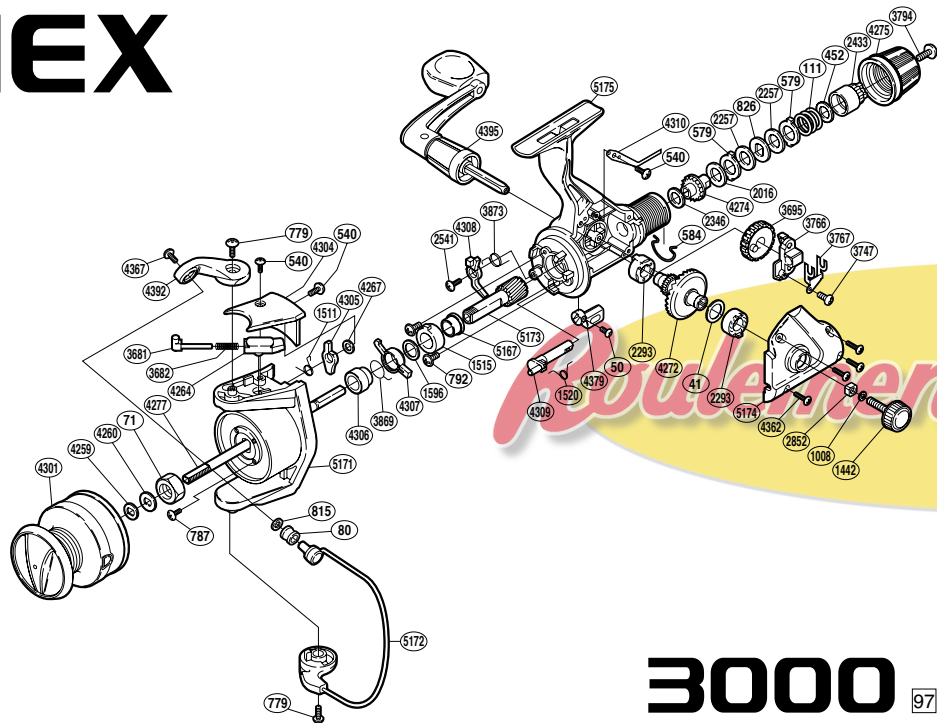

3000

97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	2257	Drag Washer "H" (blue)	4275	Drag Knob
0050	Anti-Reverse Lever Screw	2293	Drive Gear Bushing	4277	Main Shaft
0071	Rotor Nut	2346	Drag Washer "C" (cloth)	4301	Spool Assembly
0080	Line Roller	2433	Pressure Screw	4304	Bail Spring Cover
0111	Drag Coil Spring	2541	Anti-Reverse Pawl Screw	4305	Bail Trip Lever
0452	Drag Spring Washer	2852	Handle Screw Lock	4306	Lock Out Spring Holder
0540	Multi-Purpose Screw	3681	Bail Spring Guide (A)	4307	Anti-Reverse Lock Out
0579	Eared Washer "B"	3682	Bail Spring	4308	Anti-Reverse Pawl
0584	Hold Click Spring	3695	Oscillating Gear	4309	Anti-Reverse Cam
0779	Multi-Purpose Screw	3747	Slider Retainer Screw	4310	Drag Click
0787	Nut Lock Screw	3766	Oscillating Slider	4362	Side Cover Screw
0792	Bushing Retainer Screw	3767	Oscillating Slider Retainer	4367	Line Roller Screw
0815	Line Roller Washer	3794	Drag Knob Screw	4379	Anti-Reverse Lever
0826	Key Washer "A"	3869	Anti-Reverse Lock Out Spring	4392	Bail Arm
1008	Handle Lock Washer	3873	Anti-Reverse Pawl Spring	4395	Handle Assembly
1442	Handle Screw Cap	4259	Spool Washer	5167	Bushing Spacer
1511	Lever Spring	4260	Spool Support	5171	Rotor
1515	Bushing	4264	Bail Spring Guide (B)	5172	Bail Assembly
1520	Anti-Reverse Cam Spring	4267	Bail Trip Lever Washer	5173	Pinion Gear
1596	Bushing Washer	4272	Drive Gear	5174	Side Cover
2016	Drag Washer "H" (cloth)	4274	Drag Shaft	5175	Body

(080715)