



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3359	Line Roller Washer	3936	Oscillating Pawl Cover Screw
0041	Drive Gear Washer	3474	"O" Ring	4057	Main Shaft
0071	Rotor Nut	3486	Oscillating Pawl	4058	Oscillating Pawl Cover
0787	Nut Lock Screw	3503	Spool Washer	4059	Oscillating Slider
0930	Ball Bearing	3506	Bail Spring Guide (A)	4078	Worm Bearing
0940	Bail Arm Screw	3507	Bail Spring Guide (B)	4402	Bail Assembly
1008	Handle Lock Washer	3509	Bail Trip Lever	4403	Line Roller Screw
1442	Handle Screw Cap	3511	Anti-Reverse Lock Out	4473	Bail Arm
1490	Anti-Reverse Lever Screw	3512	Anti-Reverse Lock Out Spring	4498	Line Roller Collar (A)
1504	Rear Protector Screw	3513	Lock Out Spring Holder	4499	Line Roller Collar (B)
1506	Multi-Purpose Screw	3514	Bearing Retainer	4743	Line Roller Bushing
1509	Bail Spring	3516	Anti-Reverse Cam Spring	5069	Anti-Reverse Lever
1511	Lever Spring	3517	Anti-Reverse Cam	5071	Drag Knob
1676	Side Cover Screw	3518	Anti-Reverse Pawl Screw	5073	Pinion Gear
1891	Multi-Purpose Screw	3519	Anti-Reverse Pawl	5074	Idle Gear
2293	Drive Gear Bushing	3520	Anti-Reverse Pawl Spring	5075	Worm Shaft
2298	Spacer	3521	Anti-Reverse Pawl Spacer	5076	Drive Gear
2309	Slider Retainer Screw	3522	Oscillating Slider Bushing	5077	Side Cover Flange
2362	Spool Support	3529	Oscillating Guide Holder	5078	Side Cover
2404	"E" Lock	3530	Oscillating Guide	5080	Rear Protector
2409	Worm Shaft Spacer	3655	Cover Screw	5081	Spool Assembly
2852	Handle Screw Lock	3799	Rotor	5082	Body
2867	Bushing	3801	Bail Spring Cover	5354	Line Roller
3102	Handle Assembly	3802	Counter Balance Cover		

4000FGT 97