



1000

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3471	Anti-Reverse Cam Spring	3845	Spool Assembly (S-1)
0041	Drive Gear Washer	3655	Cover Screw	3848	Bail Spring Guide (A)
0071	Rotor Nut	3663	Oscillating Gear	3849	Bail Spring Guide (B)
0345	Anti-Reverse Lever Screw	3739	Main Shaft	3851	Bail Trip Lever
0543	Side Cover Screw	3740	Pinion Gear	3853	Anti-Reverse Lock Out
0544	Drag Washer "C" (cloth)	3742	Drive Gear	3854	Anti-Reverse Lock Out Spring
0787	Nut Lock Screw	3743	Hold Click Spring	3855	Lock Out Spring Holder
0792	Bearing Retainer Screw	3744	Drag Click	3856	Anti-Reverse Pawl
0940	Multi-Purpose Screw	3745	Oscillating Slider	3857	Anti-Reverse Pawl Spring
1008	Handle Lock Washer	3746	Oscillating Slider Retainer	3858	Anti-Reverse Cam
1310	Line Roller Screw	3747	Slider Retainer Screw	3859	Drag Knob
1442	Handle Screw Cap	3748	Drag Shaft	4163	Line Roller Bushing
1504	Bail Spring Cover Screw	3749	Drag Washer "C" (white)	4229	Rotor
1506	Bail Trip Lever Screw	3750	Eared Washer "B"	4230	Bail Spring Cover
1630	Handle Assembly	3751	Drag Washer "C" (blue)	4231	Counterbalance Cover
2283	Anti-Reverse Pawl Screw	3752	Key Washer "A"	4379	Anti-Reverse Lever
2293	Drive Gear Bushing	3753	Drag Coil Spring	4553	Line Roller
2852	Handle Screw Lock	3754	Drag Spring Washer	4567	Bail Assembly
3125	Drag Click Screw	3755	Pressure Screw	4568	Bail Arm
3359	Line Roller Washer	3756	Drag Knob Spacer	5154	Side Cover
3397	Bail Spring	3758	Drag Knob Screw	5155	Body