



3000

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2432	Drag Shaft	3865	Bail Spring Cover
0041	Drive Gear Washer	2433	Pressure Screw	3866	Bail Trip Lever
0071	Rotor Nut	2458	Drag Knob Screw	3867	Counterbalance Cover
0111	Drag Coil Spring	2541	Anti-Reverse Pawl Screw	3868	Lock Out Spring Holder
0345	Anti-Reverse Lever Screw	2852	Handle Screw Lock	3869	Anti-Reverse Lock Out Spring
0452	Drag Spring Washer	2934	Flange Screw	3870	Anti-Reverse Lock Out
0540	Bearing Retainer Screw	3125	Drag Click Screw	3871	Bushing Washer
0543	Side Cover Screw (small)	3359	Line Roller Washer	3872	Anti-Reverse Pawl
0787	Nut Lock Screw	3655	Cover Screw	3873	Anti-Reverse Pawl Spring
0826	Key Washer "A"	3681	Bail Spring Guide (A)	3874	Anti-Reverse Cam
0940	Multi-Purpose Screw	3682	Bail Spring	3875	Drag Knob
1008	Handle Lock Washer	3683	Bail Spring Guide (B)	4163	Line Roller Bushing
1310	Line Roller Screw	3694	Drive Gear	4198	Main Shaft
1442	Handle Screw Cap	3695	Oscillating Gear	4379	Anti-Reverse Lever
1506	Multi-Purpose Screw	3747	Slider Retainer Screw	4395	Handle Assembly
1511	Lever Spring	3763	Pinion Gear	4553	Line Roller
1520	Anti-Reverse Cam Spring	3764	Hold Click Spring	4571	Bail Assembly
1676	Side Cover Screw (large)	3765	Drag Click	4572	Bail Arm
2016	Drag Washer "H" (cloth)	3766	Oscillating Slider	5156	Side Cover Flange
2108	Eared Washer "B"	3767	Oscillating Slider Retainer	5157	Side Cover
2257	Drag Washer "H" (blue)	3768	Drag Knob Spacer	5158	Body
2293	Drive Gear Bushing	3862	Spool Assembly (S-3)		
2346	Drag Washer "C" (cloth)	3863	Rotor		