



4000

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	2346	Drag Washer "C" (cloth)	3868	Lock Out Spring Holder
0041	Drive Gear Washer	2432	Drag Shaft	3869	Anti-Reverse Lock Out Spring
0071	Rotor Nut	2433	Pressure Screw	3870	Anti-Reverse Lock Out
0111	Drag Coil Spring	2458	Drag Knob Screw	3871	Bushing Washer
0345	Anti-Reverse Lever Screw	2541	Anti-Reverse Pawl Screw	3872	Anti-Reverse Pawl
0452	Drag Spring Washer	2852	Handle Screw Lock	3873	Anti-Reverse Pawl Spring
0540	Bearing Retainer Screw	2934	Flange Screw	3874	Anti-Reverse Cam
0543	Side Cover Screw (small)	3125	Drag Click Screw	3875	Drag Knob
0787	Nut Lock Screw	3359	Line Roller Washer	3882	Spool Assembly (S-4)
0826	Key Washer "A"	3655	Cover Screw	3884	Rotor
0940	Multi-Purpose Screw	3681	Bail Spring Guide (A)	3886	Bail Trip Lever
1008	Handle Lock Washer	3682	Bail Spring	3887	Counterbalance Cover
1030	Handle Assembly	3683	Bail Spring Guide (B)	4163	Line Roller Bushing
1310	Line Roller Screw	3694	Drive Gear	4198	Main Shaft
1442	Handle Screw Cap	3695	Oscillating Gear	4379	Anti-Reverse Lever
1506	Multi-Purpose Screw	3747	Slider Retainer Screw	4572	Bail Arm
1511	Lever Spring	3763	Pinion Gear	4576	Bail Assembly
1520	Anti-Reverse Cam Spring	3764	Hold Click Spring	5156	Side Cover Flange
1676	Side Cover Screw (large)	3765	Drag Click	5161	Side Cover
2016	Drag Washer "H" (cloth)	3766	Oscillating Slider	5162	Body
2108	Eared Washer "B"	3767	Oscillating Slider Retainer	5369	Line Roller
2257	Drag Washer "H" (blue)	3768	Drag Knob Spacer		
2293	Drive Gear Bushing	3865	Bail Spring Cover		