



## 1000RB 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	1891	Bail Spring Cover Screw	4097	Pressure Screw
0041	Drive Gear Washer	2257	Drag Washer "H" (blue)	4099	Drag Knob Screw
0050	Anti-Reverse Lever Screw	2280	Anti-Reverse Lock Out	4111	Pinion Gear
0071	Rotor Nut	2283	Anti-Reverse Pawl Screw	4112	Drive Gear
0080	Line Roller	2852	Handle Screw Lock	4286	Main Shaft
0111	Drag Coil Spring	3402	Cover Screw	4364	Quick-Fire II Trigger
0452	Drag Spring Washer	3471	Anti-Reverse Cam Spring	4367	Line Roller Screw
0540	Multi-Purpose Screw	3651	Bail Spring Guide (A)	4421	Handle Screw Cap
0574	Drag Washer "C" (cloth)	3652	Bail Spring Guide (B)	4905	Spool Assembly
0579	Eared Washer "B"	3656	Anti-Reverse Ratchet	4906	Anti-Reverse Lever
0584	Hold Click Spring	3658	Anti-Reverse Pawl	4933	Rotor
0642	Side Cover Screw	3659	Anti-Reverse Pawl Spring	4934	Bail Assembly
0779	Multi-Purpose Screw	3663	Oscillating Gear	4935	Bail Arm
0786	Trigger Screw	3744	Drag Click	4936	Bail Spring Cover
0787	Nut Lock Screw	3745	Oscillating Slider	4937	Counterbalance Cover
0792	Bearing Retainer Screw	3746	Oscillating Slider Retainer	4938	Side Cover
0815	Line Roller Washer	3747	Slider Retainer Screw	4939	Body
0930	Ball Bearing	4051	Bail Spring	4940	Drag Knob
1008	Handle Lock Washer	4089	Bail Trip Lever	5547	Handle Assembly
1596	Bushing Washer	4093	Anti-Reverse Cam		
1888	Anti-Reverse Lock Out Spring	4096	Drag Shaft		