



## 2000R 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	1891	Bail Spring Cover Screw	4097	Pressure Screw
0041	Drive Gear Washer	2257	Drag Washer "H" (blue)	4099	Drag Knob Screw
0050	Anti-Reverse Lever Screw	2280	Anti-Reverse Lock Out	4105	Bail Trip Lever
0071	Rotor Nut	2283	Anti-Reverse Pawl Screw	4111	Pinion Gear
0080	Line Roller	2293	Drive Gear Bushing	4112	Drive Gear
0111	Drag Coil Spring	2852	Handle Screw Lock	4286	Main Shaft
0452	Drag Spring Washer	3402	Cover Screw	4364	Quick-Fire II Trigger
0540	Multi-Purpose Screw	3471	Anti-Reverse Cam Spring	4367	Line Roller Screw
0574	Drag Washer "C" (cloth)	3651	Bail Spring Guide (A)	4421	Handle Screw Cap
0579	Eared Washer "B"	3652	Bail Spring Guide (B)	4906	Anti-Reverse Lever
0584	Hold Click Spring	3656	Anti-Reverse Ratchet	4909	Spool Assembly
0642	Side Cover Screw	3658	Anti-Reverse Pawl	4935	Bail Arm
0779	Multi-Purpose Screw	3659	Anti-Reverse Pawl Spring	4936	Bail Spring Cover
0786	Trigger Screw	3673	Oscillating Gear	4940	Drag Knob
0787	Nut Lock Screw	3744	Drag Click	4941	Rotor
0792	Bearing Retainer Screw	3745	Oscillating Slider	4942	Bail Assembly
0815	Line Roller Washer	3746	Oscillating Slider Retainer	4943	Counterbalance Cover
0930	Ball Bearing	3747	Slider Retainer Screw	4951	Side Cover
1008	Handle Lock Washer	4051	Bail Spring	4953	Body
1596	Bushing Washer	4093	Anti-Reverse Cam	5547	Handle Assembly
1888	Anti-Reverse Lock Out Spring	4096	Drag Shaft		