



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4661	Anti-Reverse Cam Ring	5302	Bail Arm
0041	Drive Gear Washer	4677	Oscillating Slider Bushing	5303	Bail Spring Cover Screw (large)
0071	Rotor Nut	4678	Oscillating Pawl	5304	Bail Spring Cover
0345	Anti-Reverse Lever Screw	4698	Bail Spring Guide (A)	5305	Bail Hold Support Guard
0787	Multi-Purpose Screw	4699	Bail Spring	5306	Bail Hold Support Spacer
1008	Handle Lock Washer	4700	Bail Spring Guide (B)	5308	Rotor
1442	Handle Screw Cap	4702	Bail Arm Bushing	5310	Bushing
1504	Multi-Purpose Screw	4829	Roller Clutch Screw	5311	Anti-Reverse Lever
1506	Clutch Cover Screw	4838	Drive Gear Bushing	5312	Side Cover Flange
1520	Anti-Reverse Cam Spring	4972	Bail Trip Lever	5313	Side Cover
1676	Side Cover Screw	4999	Line Roller Bushing	5314	Rear Cover Screw (short)
2293	Drive Gear Bushing	5000	Line Roller Collar	5318	Body
2298	Spacer	5001	Line Roller Washer	5327	Pinion Gear
2347	Click Gear	5021	Drive Gear	5328	Worm Shaft
2353	Drag Knob Screw	5222	Idle Gear Lock	5329	Idle Gear
2404	"E" Lock	5249	Main Shaft	5336	Click Gear Spacer
2409	Worm Shaft Spacer	5251	Roller Clutch Assembly	5337	Rear Cover
2459	Handle Assembly	5252	Anti-Reverse Cam	5338	Drag Washer "C" (cloth)
2852	Handle Screw Lock	5253	Oscillating Guide	5339	Drag Shaft (B)
3655	Bail Spring Cover Screw (small)	5254	Worm Bushing	5340	Key Washer "A"
4236	Spool Assembly (AERO S-6)	5257	Oscillating Guide Retainer	5341	Drag Coil Spring
4403	Line Roller Screw	5261	Slider Retainer Screw	5342	Drag Spring Washer
4631	Spacer	5262	Oscillating Slider Retainer	5343	Pressure Screw
4649	Spacer	5263	Oscillating Slider	5344	Hold Click Spring Washer
4650	Bail Hold Support Shaft	5266	Drag Washer "H" (cloth)	5345	Knob Spacer
4652	Lever Spring Guide (B)	5267	Drag Shaft (A)	5346	Drag Knob
4653	Lever Spring	5269	Drag Washer "H" (blue)	5350	Line Roller
4654	Lever Spring Guide (A)	5270	Eared Washer "B"	5367	Bail Assembly
4656	Trip Lever Spacer	5275	Hold Click Spring	5545	Bail Arm Screw