



6000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0521	Rotor Nut	4748	Bail Spring Guide (B)	5036	Bail Hold Support Guard
0540	Bail Spring Cover Screw (large)	4750	Bail Arm Bushing	5037	Bail Hold Support Spacer
0642	Side Cover Screw (small)	4756	Bail Hold Support Shaft	5038	Bail Assembly
0690	Drive Gear Washer	4758	Lever Spring Guide (B)	5039	Rotor
0787	Nut Lock Screw	4759	Lever Spring	5040	Roller Clutch Screw
0998	Cover Screw (long)	4760	Lever Spring Guide (A)	5041	Bushing
1506	Clutch Cover Screw	4761	Bail Trip Lever	5042	Anti-Reverse Cam Ring
2329	Multi-Purpose Screw	4763	Roller Clutch Assembly	5043	Anti-Reverse Cam
2404	"E" Lock	4764	Pinion Gear	5044	Rear Cover Screw (long)
2409	Worm Shaft Spacer	4766	Anti-Reverse Cam Spring	5045	Worm Bushing (front)
3182	Spool Support	4768	Idle Gear	5046	Worm Shaft
3204	Ball Bearing	4777	Oscillating Pawl Cover Screw	5047	Worm Bushing (rear)
3309	Line Roller Screw	4778	Oscillating Pawl Cover	5048	Side Cover Flange
3366	Anti-Reverse Lever Screw	4779	Oscillating Slider Bushing	5049	Drive Gear
3402	Bail Spring Cover Screw (small)	4780	Oscillating Pawl	5050	Side Cover
3503	Spool Washer	4781	Oscillating Slider	5051	Handle Screw Cap
3962	Spacer	4782	Slider Retainer Screw	5052	Body
4004	Drive Gear Bushing	4789	Handle Assembly	5053	Oscillating Guide
4627	Side Cover Screw (large)	4810	Rear Protector Screw	5054	Oscillating Guide Holder
4631	Spacer	4999	Line Roller Bushing	5055	Worm Shaft Retainer
4649	Spacer	5000	Line Roller Collar	5056	Rear Cover
4656	Trip Lever Spacer	5001	Line Roller Washer	5057	Rear Protector
4742	Main Shaft	5032	Drag Knob	5058	Anti-Reverse Lever
4745	Bail Spring Guide (A)	5033	Spool Assembly	5354	Line Roller
4746	Spring Guide (A) Support	5034	Bail Arm	5543	Bail Arm Screw
4747	Bail Spring	5035	Bail Spring Cover		