



8000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0521	Rotor Nut	4748	Bail Spring Guide (B)	5037	Bail Hold Support Spacer
0540	Bail Spring Cover Screw (large)	4750	Bail Arm Bushing	5038	Bail Assembly
0642	Side Cover Screw (small)	4756	Bail Hold Support Shaft	5039	Rotor
0690	Drive Gear Washer	4758	Lever Spring Guide (B)	5040	Roller Clutch Screw
0787	Nut Lock Screw	4759	Lever Spring	5041	Bushing
0998	Cover Screw (long)	4760	Lever Spring Guide (A)	5042	Anti-Reverse Cam Ring
1506	Clutch Cover Screw	4761	Bail Trip Lever	5043	Anti-Reverse Cam
2329	Multi-Purpose Screw	4763	Roller Clutch Assembly	5044	Rear Cover Screw (long)
2404	"E" Lock	4764	Pinion Gear	5045	Worm Bushing (front)
2409	Worm Shaft Spacer	4766	Anti-Reverse Cam Spring	5046	Worm Shaft
3182	Spool Support	4768	Idle Gear	5047	Worm Bushing (rear)
3204	Ball Bearing	4777	Oscillating Pawl Cover Screw	5048	Side Cover Flange
3309	Line Roller Screw	4778	Oscillating Pawl Cover	5049	Drive Gear
3366	Anti-Reverse Lever Screw	4779	Oscillating Slider Bushing	5050	Side Cover
3402	Bail Spring Cover Screw (small)	4780	Oscillating Pawl	5051	Handle Screw Cap
3503	Spool Washer	4781	Oscillating Slider	5052	Body
3962	Spacer	4782	Slider Retainer Screw	5053	Oscillating Guide
4004	Drive Gear Bushing	4789	Handle Assembly	5054	Oscillating Guide Holder
4627	Side Cover Screw (large)	4810	Rear Protector Screw	5055	Worm Shaft Retainer
4631	Spacer	4999	Line Roller Bushing	5057	Rear Protector
4649	Spacer	5000	Line Roller Collar	5058	Anti-Reverse Lever
4656	Trip Lever Spacer	5001	Line Roller Washer	5059	Spool Assembly
4742	Main Shaft	5032	Drag Knob	5060	Rear Cover
4745	Bail Spring Guide (A)	5034	Bail Arm	5354	Line Roller
4746	Spring Guide (A) Support	5035	Bail Spring Cover	5543	Bail Arm Screw
4747	Bail Spring	5036	Bail Hold Support Guard		