
 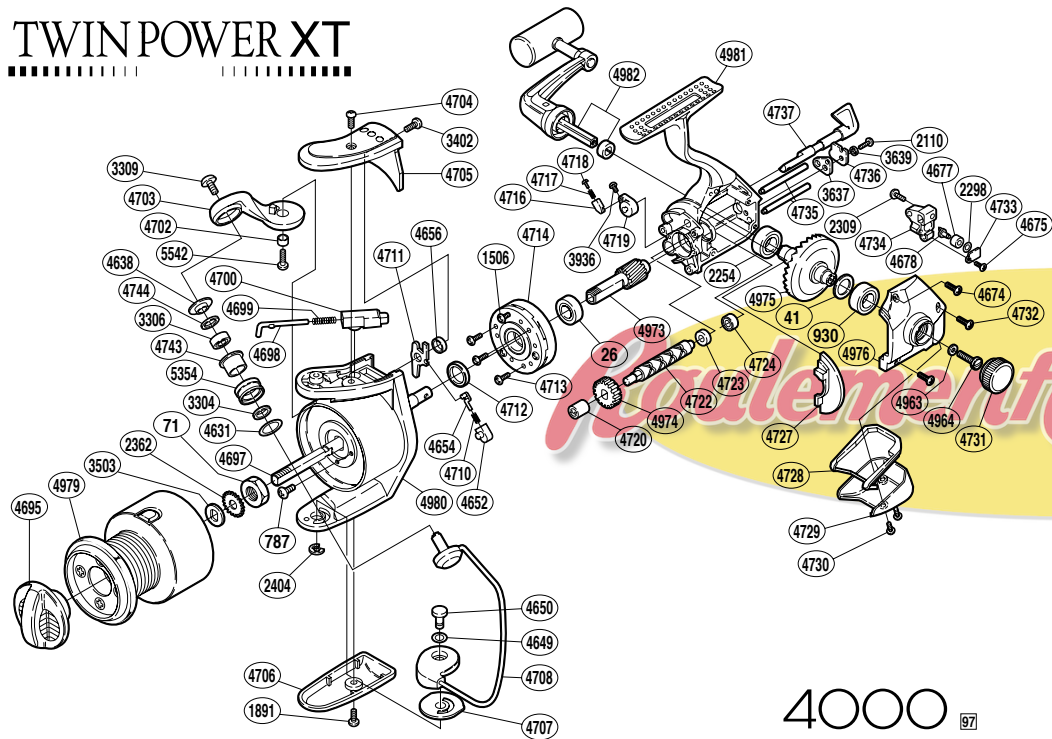


TWIN POWER XT



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4674	Side Cover Screw (short)	4724	Ball Bearing
0041	Drive Gear Washer	4675	Oscillating Pawl Cover Screw	4727	Side Cover Flange
0071	Rotor Nut	4677	Oscillating Slider Bushing	4728	Rear Shield
0787	Nut Lock Screw	4678	Oscillating Pawl	4729	Rear Protector
0930	Ball Bearing	4695	Drag Knob	4730	Rear Protector Screw
1506	Clutch Cover Screw	4697	Main Shaft	4731	Handle Screw Cap
1891	Guard Screw	4698	Bail Spring Guide (A)	4732	Side Cover Screw (long)
2110	Worm Shaft Retainer Screw	4699	Bail Spring	4733	Oscillating Pawl Cover
2254	Ball Bearing	4700	Bail Spring Guide (B)	4734	Oscillating Slider
2298	Spacer	4702	Bail Arm Bushing	4735	Oscillating Guide
2309	Slider Retainer Screw	4703	Bail Arm	4736	Worm Shaft Retainer
2362	Spool Support	4704	Bail Spring Cover Screw (large)	4737	Anti-Reverse Lever
2404	"E" Lock	4705	Bail Spring Cover	4743	Line Roller Bushing
3304	Bearing Spacer	4706	Bail Hold Support Guard	4744	Roller Bearing Seal
3306	Line Roller Bearing	4707	Bail Hold Support Spacer	4963	Handle Lock Washer
3309	Line Roller Screw	4708	Bail Assembly	4964	Handle Lock Screw
3402	Bail Spring Cover Screw (small)	4710	Lever Spring	4973	Pinion Gear
3503	Spool Washer	4711	Bail Trip Lever	4974	Idle Gear
3637	Worm Shaft Retainer Washer	4712	Rotor Spacer	4975	Drive Gear
3639	Worm Shaft Retainer Spacer	4713	Roller Clutch Screw	4976	Side Cover
3936	Anti-Reverse Cam Screw	4714	Roller Clutch Assembly	4979	Spool Assembly
4631	Spacer	4716	Lever Spring Guide (B)	4980	Rotor
4638	Line Roller Washer	4717	Lever Spring	4981	Body
4649	Spacer	4718	Lever Spring Guide (A)	4982	Handle Assembly
4650	Bail Hold Support Shaft	4719	Anti-Reverse Cam	5354	Line Roller
4652	Lever Spring Guide (B)	4720	Worm Bushing (front)	5542	Bail Arm Screw
4654	Lever Spring Guide (A)	4722	Worm Shaft		
4656	Trip Lever Spacer	4723	Worm Bushing (rear)		

4000 97