



150 98

RoulementCasting.com

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0009	Cast Control Spacer	1218	Idle Gear (A) Spacer	1437	Clutch Pawl Spring
0011	Right Side Plate Screw	1227	Clutch Pawl Spring Retainer	1438	Drive Shaft Bushing
0015	Drag Spring Washer	1230	Drive Shaft Spacer	1440	Worm Bushing (A) Retainer
0032	Bearing Retainer	1237	Worm Bushing (A) Retainer Screw	1442	Clutch Bar Guide (B)
0036	Left Side Plate Screw	1239	Pawl Cap	1443	Quick-Fire II Clutch Bar
0042	Line Guide Pawl	1240	Line Guide	1447	Drive Shaft
0133	Worm Shaft Retainer	1241	Level Wind Guard	1448	Anti-Reverse Ratchet
0188	"O" Ring	1243	Worm Bushing (B)	1476	Worm Shaft Spacer
0192	Left Side Plate Screw	1252	Right Side Plate Bolt Washer	1587	Pinion Gear
0194	Ball Bearing	1289	Star Drag Spacer	1611	Level Wind Guide
0425	"E" Lock	1327	Idle Gear	1692	Handle Nut Plate
0586	Bolt Retainer	1337	Clutch Bar Support Spacer	1699	Worm Bushing (A)
0609	Clutch Cam Screw	1338	Clutch Bar Guide (A)	1714	Worm Shaft
0664	Spacer (B)	1423	Key Washer	1715	Brake Collar (red)
0686	Idle Gear (B) Retainer	1424	Drag Washer (C)	1716	Handle Assembly
0795	Handle Nut Plate Screw	1425	Drive Gear	1910	Cast Control Cap
0797	Handle Nut	1428	Yoke	1911	Star Drag
0799	Friction Washer	1429	Clutch Cam Retainer	1912	Right Side Plate
0830	Spacer (optional)	1430	Clutch Cam	1913	Spool Assembly
1133	Yoke Spring	1431	Retractor Spring	1914	Forged One-Piece Frame
1201	Retractor Spring Collar	1432	Clutch Plate	1915	Left Side Plate
1206	Roller Clutch Inner Tube	1433	Idle Gear (B)	1916	Clutch Bar Support
1207	Roller Clutch Bearing	1434	Set Plate		
1208	Right Side Plate Bolt	1435	Clutch Pawl Spacer		
1214	Drag Washer (A)	1436	Clutch Pawl	1713	Brake Collar (green)