


# SHIMANO

## CALCUTTA

## CT-400S

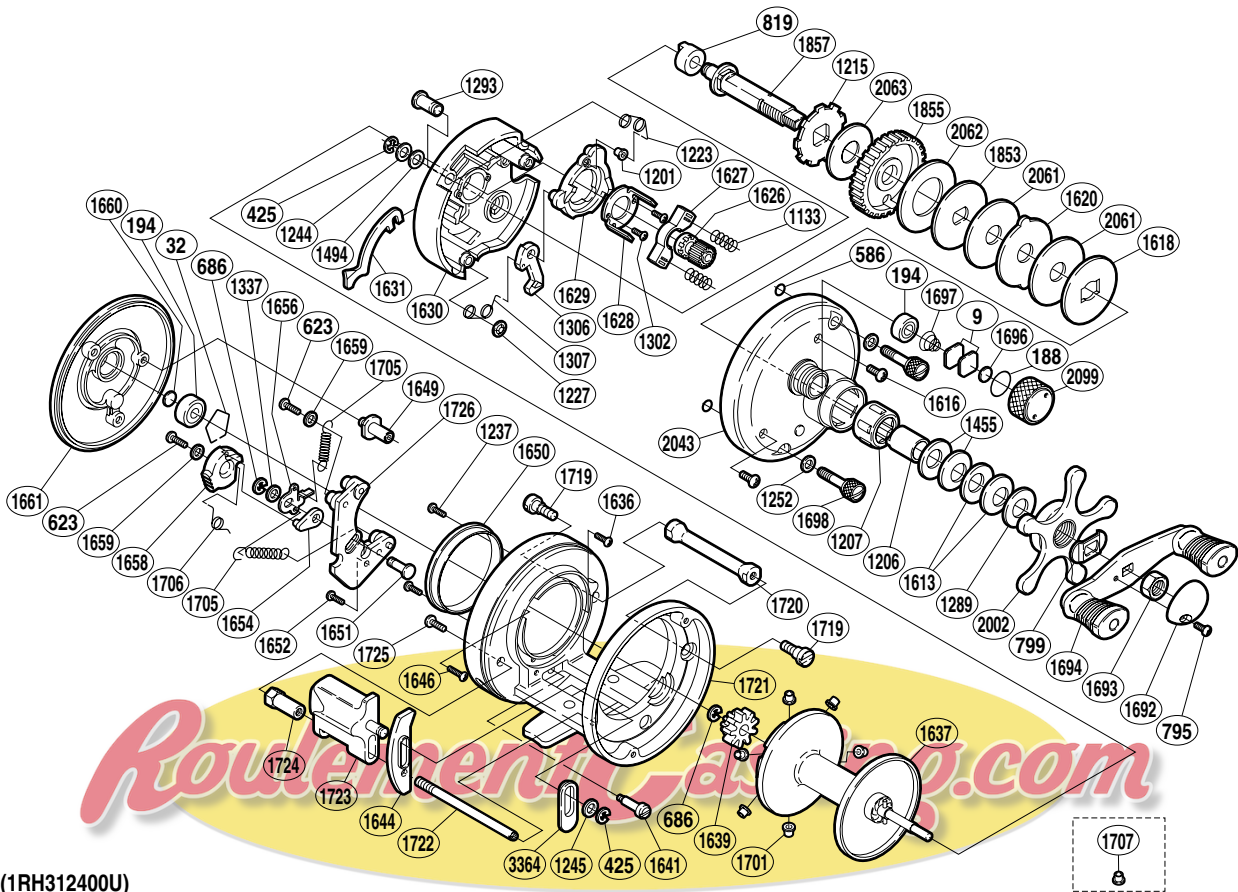

(1RH312400U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0009	Cast Control Spacer (A)	BNT1494	Drive Shaft Washer (B)	BNT1694	Handle Assembly
BNT0032	Bearing Retainer	BNT1613	Drag Spring Washer (L)	BNT1696	Cast Control Spacer (B)
BNT0188	"O" Ring	BNT1616	Right Side Plate Screw	BNT1697	Spool Tension Spring
BNT0194	Ball Bearing	BNT1618	Key Washer (C)	BNT1698	Right Side Plate Bolt
BNT0425	"E" Lock	BNT1620	Eared Washer	BNT1701	Brake Collar (gray)
BNT0586	Bolt Retainer	BNT1626	Pinion Gear	BNT1705	Click Spring
BNT0623	Multi-Purpose Screw	BNT1627	Yoke	BNT1706	Click Switch Spring
BNT0686	"E" Lock	BNT1628	Clutch Cam Retainer	BNT1719	Front Crossbar Screw
BNT0795	Handle Nut Plate Screw	BNT1629	Clutch Cam	BNT1720	Front Crossbar
BNT0799	Friction Washer	BNT1630	Set Plate	BNT1721	Forged One-Piece Frame Assembly
BNT0819	Drive Shaft Bushing	BNT1631	Clutch Plate	BNT1722	Clutch Bar Support
BNT1133	Yoke Spring	BNT1636	Left Side Plate Screw (short)	BNT1723	Quick-Fire II Clutch Bar
BNT1201	Retractor Spring Collar	BNT1637	Spool Assembly	BNT1724	Clutch Bar Support Sleeve
BNT1206	Roller Clutch Inner Tube	BNT1639	Idle Gear (A) / Click Gear	BNT1725	Sleeve Screw
BNT1207	Roller Clutch Bearing	BNT1641	Left Side Plate Bolt	BNT1726	Click Plate
BNT1215	Anti-Reverse Ratchet	BNT1644	Clutch Bar Guide (B)	BNT1853	Key Washer (A)
BNT1223	Retractor Spring	BNT1646	Left Side Plate Screw (long)	BNT1855	Drive Gear
BNT1227	Clutch Pawl Spring Retainer	BNT1649	Idle Gear Shaft	BNT1857	Drive Shaft
BNT1237	Brake Ring Screw	BNT1650	Brake Ring	BNT2002	Star Drag
BNT1244	Drive Shaft Spacer	BNT1651	Click Shaft	BNT2043	Right Side Plate
BNT1245	Clutch Bar Support Spacer	BNT1652	Click Plate Screw	BNT2061	Drag Washer (C-G)
BNT1252	Right Side Plate Bolt Washer	BNT1654	Click Link	BNT2062	Drag Washer (B-G)
BNT1289	Star Drag Spacer	BNT1656	Click Pawl	BNT2063	Drag Washer (A-G)
BNT1293	Retractor Spring Pin	BNT1658	Click Switch	BNT2099	Cast Control Cap
BNT1302	Clutch Cam Screw	BNT1659	Lock Washer	BNT3364	Clutch Bar Guide (A)
BNT1306	Clutch Pawl	BNT1660	Spacer (B)		
BNT1307	Clutch Pawl Spring	BNT1661	Left Side Plate		
BNT1337	Spacer	BNT1692	Handle Nut Plate		
BNT1455	Drag Spring Washer (H)	BNT1693	Handle Nut	BNT1707	Brake Collar (clear)

(190124)