



RoulementCasting.com

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0015	Drag Spring Washer	1460	Clutch Plate	1870	Cast Control Cap
0031	Ball Bearing	1461	Yoke	1871	Right Side Plate
0032	Bearing Retainer	1462	Clutch Cam Retainer	1872	Worm Shaft
0042	Line Guide Pawl	1463	Clutch Cam	1873	Level Wind Guard
0124	Ball Bearing	1464	Clutch Pawl	1874	Thumb Rest
0191	Multi-Purpose Screw	1465	Clutch Pawl Spring	1875	Drive Shaft Cover
0194	Ball Bearing	1475	Quick-Fire II Clutch Bar	1876	Thumb Rest Screw
0425	Drive Gear Retainer	1476	Drive Shaft Washer (D)	1877	Line Guide
0664	Spacer (B)	1599	Star Drag	1878	Pawl Cap Spacer
0766	Dial Friction Washer	1602	Key Washer	1879	Pawl Cap
0770	Handle Nut Plate Screw	1603	Drive Shaft Washer	1880	Stabilizer Bar
0797	Handle Nut	1604	Drive Shaft	1881	One-Piece Frame
0799	Friction Washer	1667	Worm Gear	1882	Spool
0810	Drag Washer	1668	Worm Shaft Washer (A)	1883	Magnet Retainer
0817	Multi-Purpose Screw	1670	Worm Bushing	1884	Magnet Retainer Spring
0820	Pinion Gear	1671	Worm Shaft Washer (B)	1885	Dial Case
0830	Spacer (optional)	1672	"E" Lock	1886	Magnet Retainer Shaft
1206	Roller Clutch Inner Tube	1673	Handle Nut Plate	1887	Brake Cam
1207	Roller Clutch Bearing	1676	Spool Tension Spacer (B)	1888	Magnetic Control Dial
1419	Yoke Spring	1677	Spool Tension Spacer (A)	1889	Left Side Plate
1456	Drive Gear	1678	Spool Tension Spring		
1458	Anti-Reverse Ratchet	1708	Handle Assembly		