



6000F 98

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0050	Anti-Reverse Lever Screw	4362	Side Cover Screw	5042	Anti-Reverse Cam Ring
0521	Rotor Nut	4441	Handle Screw Cap	5208	Anti-Reverse Lever
0540	Bail Spring Cover Screw (large)	4631	Spacer	5370	Line Roller
0690	Drive Gear Washer	4649	Spacer	5440	Drag Knob
0787	Nut Lock Screw	4656	Trip Lever Spacer	5441	Spool Assembly
0998	Multi-Purpose Screw	4745	Bail Spring Guide (A)	5442	Main Shaft
1008	Handle Lock Washer	4746	Bail Spring Guide (A) Support	5443	Bail Spring Cover
1109	Slider Retainer Screw	4747	Bail Spring	5444	Bail Hold Support Guard
1506	Clutch Cover Screw	4748	Bail Spring Guide (B)	5445	Bail Assembly
2404	"E" Lock	4749	Bail Arm Screw	5446	Rotor
3182	Spool Support	4750	Bail Arm Bushing	5447	Roller Clutch Assembly
3204	Ball Bearing	4756	Bail Hold Support Shaft	5448	Pinion Gear
3309	Line Roller Screw	4758	Lever Spring Guide (B)	5449	Anti-Reverse Cam
3359	Line Roller Washer	4760	Lever Spring Guide (A)	5450	Drive Gear
3387	Handle Screw Lock	4761	Bail Trip Lever	5451	Side Cover Flange
3402	Bail Spring Cover Screw (small)	4999	Line Roller Bushing	5452	Side Cover
3503	Spool Washer	5000	Line Roller Collar	5453	Body
4004	Drive Gear Bushing	5034	Bail Arm	5454	Handle Assembly
4006	Oscillating Gear Bushing	5037	Bail Hold Support Spacer	5455	Anti-Reverse Cam Spring
4007	Oscillating Gear	5040	Roller Clutch Screw	5456	Lever Spring
4008	Oscillating Slider	5041	Bushing		