


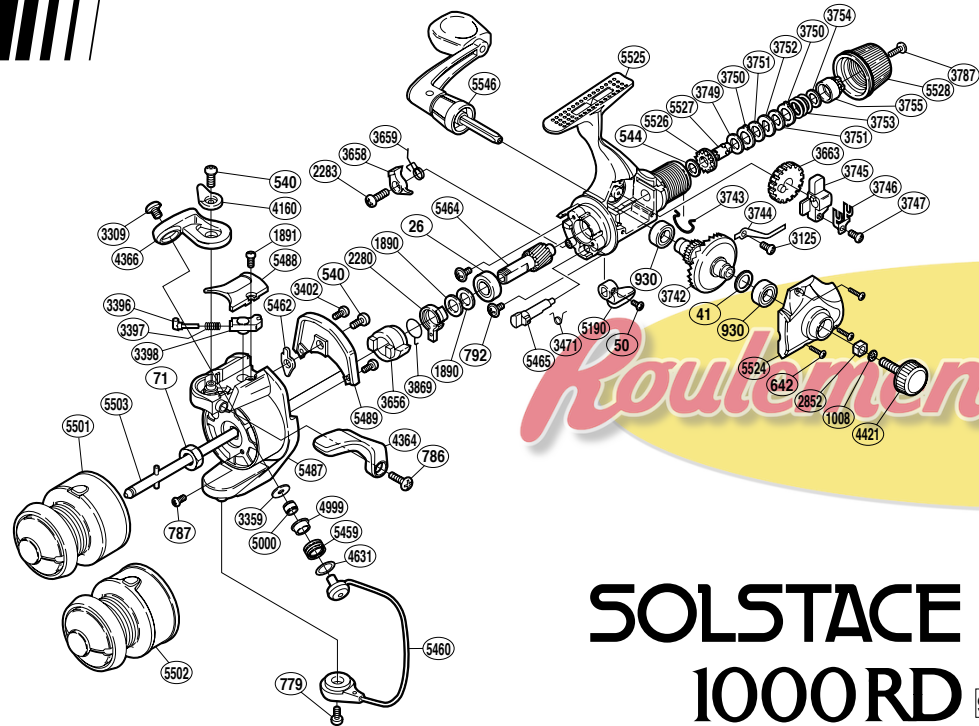

SOLSTACE 1000RD

98

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3402	Cover Screw	4421	Handle Screw Cap
0041	Drive Gear Washer	3471	Anti-Reverse Cam Spring	4631	Spacer
0050	Anti-Reverse Lever Screw	3656	Anti-Reverse Ratchet	4999	Line Roller Bushing
0071	Rotor Nut	3658	Anti-Reverse Pawl	5000	Line Roller Collar
0540	Multi-Purpose Screw	3659	Anti-Reverse Pawl Spring	5190	Anti-Reverse Lever
0544	Drag Washer "C" (cloth)	3663	Oscillating Gear	5459	Line Roller
0642	Side Cover Screw	3742	Drive Gear	5460	Bail Assembly
0779	Bail Hold Support Screw	3743	Hold Click Spring	5462	Bail Trip Lever
0786	Trigger Screw	3744	Drag Click	5464	Pinion Gear
0787	Nut Lock Screw	3745	Oscillating Slider	5465	Anti-Reverse Cam
0792	Bearing Retainer Screw	3746	Oscillating Slider Retainer	5487	Rotor
0930	Ball Bearing	3747	Slider Retainer Screw	5488	Bail Spring Cover
1008	Handle Lock Washer	3749	Drag Washer "C" (white)	5489	Counterbalance Cover
1890	Bushing Washer	3750	Eared Washer "B"	5501	Spool Assembly (aluminum)
1891	Bail Spring Cover Screw	3751	Drag Washer "C" (blue)	5502	Spool Assembly (graphite)
2280	Anti-Reverse Lock Out	3752	Key Washer "A"	5503	Main Shaft
2283	Anti-Reverse Pawl Screw	3753	Drag Coil Spring	5524	Side Cover
2852	Handle Screw Lock	3754	Drag Spring Washer	5525	Body
3125	Drag Click Screw	3755	Pressure Screw	5526	Drag Shaft (B)
3309	Line Roller Screw	3787	Drag Knob Screw	5527	Drag Shaft (A)
3359	Line Roller Washer	3869	Anti-Reverse Lock Out Spring	5528	Drag Knob
3396	Bail Spring Guide (A)	4160	Trigger Cam	5546	Handle Assembly
3397	Bail Spring	4364	Quick-Fire II Trigger		
3398	Bail Spring Guide (B)	4366	Bail Arm		

(090529)