


SOLSTACE

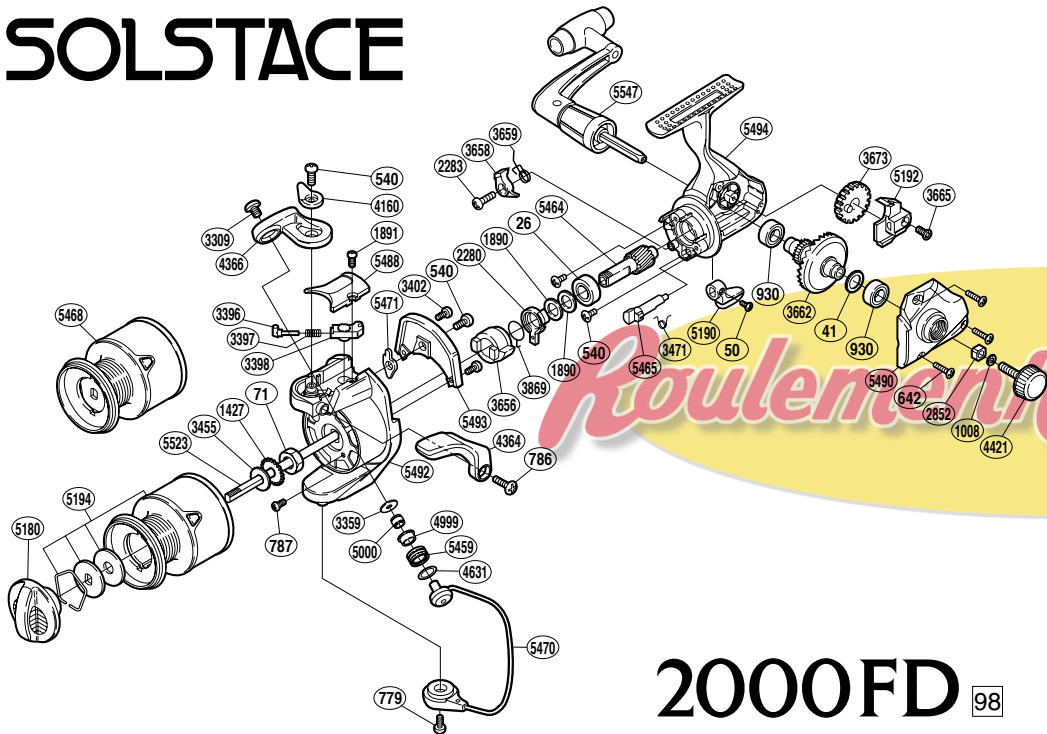

2000FD 98

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3396	Bail Spring Guide (A)	5000	Line Roller Collar
0041	Drive Gear Washer	3397	Bail Spring	5180	Drag Knob
0050	Anti-Reverse Lever Screw	3398	Bail Spring Guide (B)	5190	Anti-Reverse Lever
0071	Rotor Nut	3402	Cover Screw	5192	Oscillating Slider
0540	Multi-Purpose Screw	3455	Spool Washer	5194	Spool Assembly (aluminum)
0642	Side Cover Screw	3471	Anti-Reverse Cam Spring	5459	Line Roller
0779	Bail Hold Support Screw	3656	Anti-Reverse Ratchet	5464	Pinion Gear
0786	Trigger Screw	3658	Anti-Reverse Pawl	5465	Anti-Reverse Cam
0787	Nut Lock Screw	3659	Anti-Reverse Pawl Spring	5468	Spool Assembly (graphite)
0930	Ball Bearing	3662	Drive Gear	5470	Bail Assembly
1008	Handle Lock Washer	3665	Slider Retainer Screw	5471	Bail Trip Lever
1427	Spool Support	3673	Oscillating Gear	5488	Bail Spring Cover
1890	Bushing Washer	3869	Anti-Reverse Lock Out Spring	5490	Side Cover
1891	Bail Spring Cover Screw	4160	Trigger Cam	5492	Rotor
2280	Anti-Reverse Lock Out	4364	Quick-Fire II Trigger	5493	Counterbalance Cover
2283	Anti-Reverse Pawl Screw	4366	Bail Arm	5494	Body
2852	Handle Screw Lock	4421	Handle Screw Cap	5523	Main Shaft
3309	Line Roller Screw	4631	Spacer	5547	Handle Assembly
3359	Line Roller Washer	4999	Line Roller Bushing		