


SOLSTACE

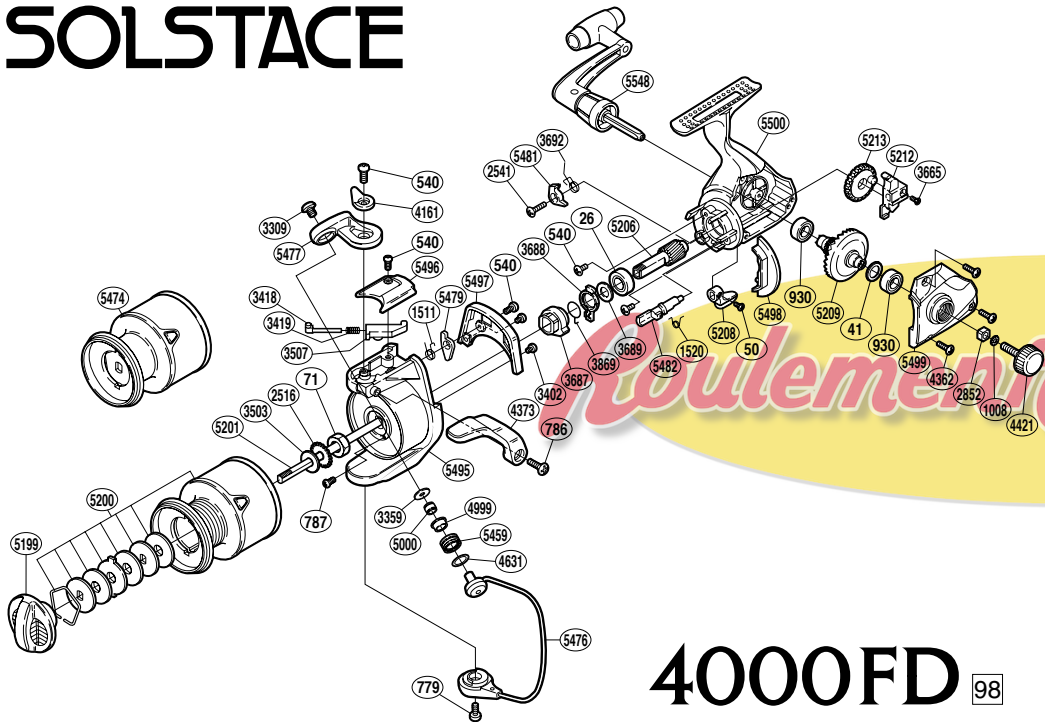

4000FD 98

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3419	Bail Spring	5206	Pinion Gear
0041	Drive Gear Washer	3503	Spool Washer	5208	Anti-Reverse Lever
0050	Anti-Reverse Lever Screw	3507	Bail Spring Guide (B)	5209	Drive Gear
0071	Rotor Nut	3665	Slider Retainer Screw	5212	Oscillating Slider
0540	Multi-Purpose Screw	3687	Anti-Reverse Ratchet	5213	Oscillating Gear
0779	Bail Hold Support Screw	3688	Anti-Reverse Lock Out	5459	Line Roller
0786	Trigger Screw	3689	Bushing Washer	5474	Spool Assembly (graphite)
0787	Nut Lock Screw	3692	Anti-Reverse Pawl Spring	5476	Bail Assembly
0930	Ball Bearing	3869	Anti-Reverse Lock Out Spring	5477	Bail Arm
1008	Handle Lock Washer	4161	Trigger Cam	5479	Bail Trip Lever
1511	Lever Spring	4362	Side Cover Screw	5481	Anti-Reverse Pawl
1520	Anti-Reverse Cam Spring	4373	Quick-Fire II Trigger	5482	Anti-Reverse Cam
2516	Spool Support	4421	Handle Screw Cap	5495	Rotor
2541	Anti-Reverse Pawl Screw	4631	Spacer	5496	Bail Spring Cover
2852	Handle Screw Lock	4999	Line Roller Bushing	5497	Counterbalance Cover
3309	Line Roller Screw	5000	Line Roller Collar	5498	Side Cover Flange
3359	Line Roller Washer	5199	Drag Knob	5499	Side Cover
3402	Cover Screw	5200	Spool Assembly (aluminum)	5500	Body
3418	Bail Spring Guide (A)	5201	Main Shaft	5548	Handle Assembly