



RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3359	Line Roller Washer	5209	Drive Gear
0041	Drive Gear Washer	3402	Cover Screw	5213	Oscillating Gear
0050	Anti-Reverse Lever Screw	3418	Bail Spring Guide (A)	5459	Line Roller
0071	Rotor Nut	3419	Bail Spring	5476	Bail Assembly
0111	Drag Coil Spring	3507	Bail Spring Guide (B)	5477	Bail Arm
0452	Drag Spring Washer	3687	Anti-Reverse Ratchet	5479	Bail Trip Lever
0540	Multi-Purpose Screw	3688	Anti-Reverse Lock Out	5481	Anti-Reverse Pawl
0579	Eared Washer "B"	3689	Bushing Washer	5482	Anti-Reverse Cam
0779	Bail Hold Support Screw	3692	Anti-Reverse Pawl Spring	5495	Rotor
0786	Trigger Screw	3744	Drag Click	5496	Bail Spring Cover
0787	Nut Lock Screw	3747	Slider Retainer Screw	5497	Counterbalance Cover
0826	Key Washer "A"	3764	Hold Click Spring	5498	Side Cover Flange
0930	Ball Bearing	3767	Oscillating Slider Retainer	5513	Spool Assembly (aluminum)
1008	Handle Lock Washer	3794	Drag Knob Screw	5514	Spool Assembly (graphite)
1511	Lever Spring	3869	Anti-Reverse Lock Out Spring	5515	Main Shaft
1520	Anti-Reverse Cam Spring	4161	Trigger Cam	5517	Oscillating Slider
2016	Drag Washer "H" (cloth)	4362	Side Cover Screw	5530	Side Cover
2257	Drag Washer "H" (blue)	4373	Quick-Fire II Trigger	5531	Body
2346	Drag Washer "C" (cloth)	4421	Handle Screw Cap	5532	Drag Shaft (B)
2433	Pressure Screw	4631	Spacer	5533	Drag Shaft (A)
2541	Anti-Reverse Pawl Screw	4999	Line Roller Bushing	5534	Drag Knob
2852	Handle Screw Lock	5000	Line Roller Collar	5548	Handle Assembly
3125	Drag Click Screw	5206	Pinion Gear		
3309	Line Roller Screw	5208	Anti-Reverse Lever		